 


SAVE THESE INSTRUCTIONS

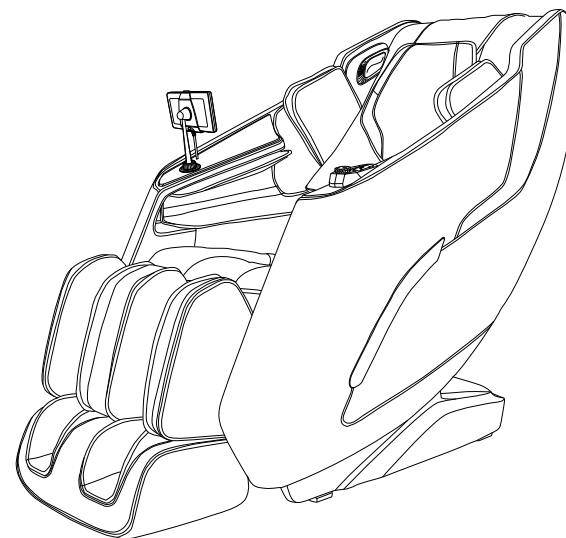

Enrich
MASSAGE CHAIR
—— Operation Instructions ——

Thanks for purchasing this product. Please read this manual instruction carefully in order to know how to use this product correctly before operation. Please pay more attention to some important safety warning and keep this manual book properly for future use.

Note: Our company reserves the right to change and explain the design of the product. If there is some difference between the product function in market circulation and the description in the manual, it is a normal update of the product, and our company will not inform you otherwise. The specific product function and color shall prevail in kind.

CONTENTS

Before Use

Safety Precautions ----- 02-04

Part Installation ----- 05

Massage Chair Placement ----- 06-07

Before Use ----- 08-09

Product Structure ----- 10-15

Instructions for Use

Operation Instructions ----- 16-21

Maintenance

Cleaning and Maintenance ----- 22



Important

Troubleshooting ----- 23


Product Specifications ----- 24

Safety Precautions (must be observed)


- Please read all relevant instructions carefully before use.
- The notes marked here will help you to use the product safely and correctly.
- In order to clearly indicate the extent of potential harm and damage, precautions are divided into **"Warning"** and **"Caution"** that may be caused by incorrect use. Both of them are important for safety and must be followed.

 Warning	Indicates that serious injury or death may result from improper use.
 Caution	Indicates that misuse may cause minor injury or property damage.

- Please pay attention to the symbol before each safety item.


 Forbidden	Absolute prohibition
--	----------------------

The following populations should not use this product


 Forbidden	<ul style="list-style-type: none"> ■ The device is not intended for use by persons (including children) with physical disabilities, sensory or neurological impairments or who lack experience and common sense, unless they are supervised and instructed in the use of the device by those responsible for their safety. Children must be supervised to ensure they do not play with instruments. ■ Patients with osteoporosis. ■ Patients with heart disease or wearing electronic medical devices such as a pacemaker. ■ People who have a fever. ■ Pregnant women or women on their menstrual period. ■ Patients who are injured or have a skin disease. ■ Unsupervised children under the age of 14 and those unconscious are not allowed to use this product. ■ Those undergoing treatment, instructed to have rest, and especially those who are not feeling well. ■ People whose bodies are wet. ■ This product has a hot surface. Persons insensitive to heat must pay attention when using this product. ■ If the supply cord is damaged, to avoid danger, it must be replaced by a professional from the manufacturer, its maintenance department or similar department
---	--

Safety Precautions (must be observed)


Important safety warnings

 Warnings	<ul style="list-style-type: none"> ■ Do not allow children to touch any movable part of this product. ■ Use a well-grounded and compatible power supply for this product. ■ Remove the plug from its power source after use and before cleaning to avoid any damage to the product or personal physical injury. ■ Operate this product as instructed in this manual. ■ Do not use any parts or accessories which are not recommended. ■ Do not use this product outdoors. ■ Please read the Operation Instructions carefully before operation. ■ Never use this product for any other purpose not listed herein. ■ 20 minutes of usage each time is recommended. ■ Do not use this product if the cover or leather is broken or damaged. ■ Do not drop anything into this product. ■ Do not use this product if you are intoxicated or feel unwell. ■ Do not use this product within one hour after a meal. ■ Do not use this product with excessive force to avoid any injury.
---	---

Safety precautions

 Caution	<ul style="list-style-type: none"> ■ Check whether voltage is consistent with the specification of this product. ■ Never insert or pull out the plug with a wet hand. ■ Do not let water flow into this product to avoid electric shock or cause damage to this product. ■ Do not pull the power cord when plugging or unplugging it. Rough handling is forbidden. ■ Do not damage the wire or modify the circuit of this product. ■ Do not clean live parts of this product, such as a power switch and plug, with a wet cloth. ■ Be away from this product in case of power failure to avoid any injury if power is restored suddenly. ■ Should this product work abnormally, stop use at once and consult your local supplier. ■ Stop using this product if you feel unwell, and consult your health care practitioner.
--	---

Storage conditions

 Caution	<ul style="list-style-type: none"> ■ Storage room temperature: 5 °C to 40 °C. ■ Relative humidity (RH) between 20% and 80%; free of corrosive gases, and a well-ventilated room.
--	--





Safety Precautions (must be observed)

Product service and maintenance	
<div> <div>⚠</div> <div>Caution</div> </div>	<ul style="list-style-type: none"> ■ This product should be maintained by the service center designated by the manufacturer only. No user should disassemble or maintain it without permission. ■ Do not forget to turn off the main power switch after usage. ■ Do not use this product if the power socket becomes loose. ■ If this product will be left unused for a long period of time, it is necessary to roll up the power cord of this product and store this product in a dry and dust-free environment. ■ Do not store this product at a high temperature or near open flame. Avoid prolonged exposure to direct sunshine. ■ Please clean this product with a dry cloth. Never use thinner, benzene or alcohol. ■ The mechanical components of this product are specially designed and manufactured, so no special maintenance is needed. ■ Do not use a sharp object to stab at this product. ■ Do not roll or pull this product on any uneven ground. Instead, it should be lifted before moving. ■ Please use this product intermittently. Do not keep it working continuously for a long period of time.
Operating environment	
<div> <div>⚠</div> <div>Caution</div> </div>	<ul style="list-style-type: none"> ■ Do not use this product in a very moist environment such as the bathroom. ■ Stop using this product immediately when the ambient temperature changes sharply. ■ Do not use this product in any heavily-dusty or caustic environment. ■ Do not use this product in a small space or a place without good ventilation.
Solutions to ordinary malfunctions	
<div> <div>⚠</div> <div>Caution</div> </div>	<ul style="list-style-type: none"> ■ If the motor sounds during operation of this product, this is the normal operation sound. ■ If the controller cannot work normally, check whether the plug and the power socket are connected reliably, and whether the power switch is turned on. ■ If the rated working time is over, this product will automatically activate the power-off button; If this product keeps operating for a long period of time, the temperature protector will stop this product automatically. The product can be used again after half an hour.

Part Installation

Calf installation instructions

    1. Insert the wire of the calf and the air pipe into the front socket of the steel frame assembly (Figure 1).
2. Then push the connected wire and air pipe into the hole in the backrest frame (Figure 2).
3. After the wire docking is completed, open the calf fixing covers on both sides of the steel frame assembly (Figure 3).
4. Lift the calf into the notch, close the fixing covers, and secure it in place with 2 pieces screws (Figure 4).

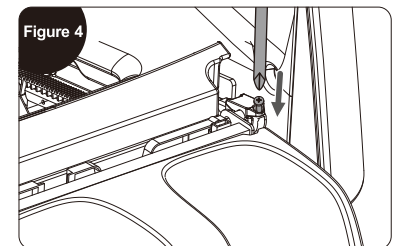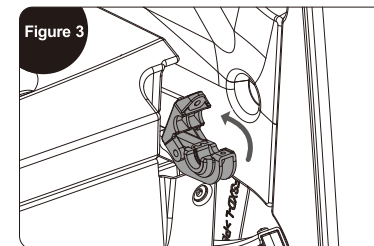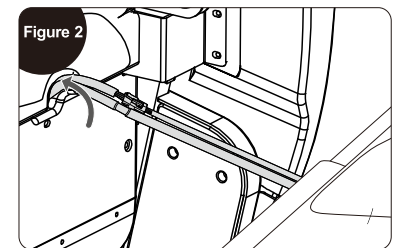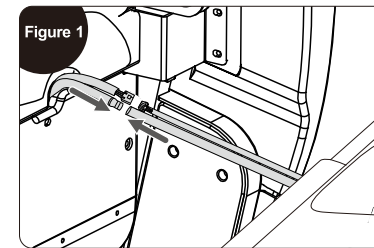


Massage Chair Placement

Installation placement

Make sure there is enough space for the massage chair to be able to tilt at least 30 cm.

 
Do not expose the massage chair directly to high temperature environment due to sunlight (such as: in front of heating equipment), and place it to where can avoid high temperature and direct sunlight. It is recommended to lay a soft, protective mat underneath the chair for long-term use in a designated location. When laying the mat, the size of the mat should be enough to cover the complete underside of the chair. Keep the range where the machine touches the floor and the range where your feet touch the floor.

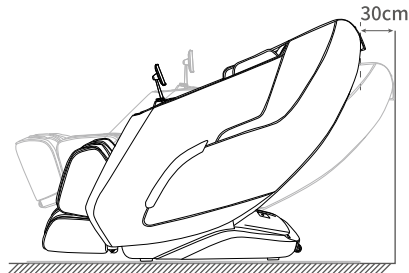

Product lift instruction

A team lift is required to move the chair and avoid injury.

 1. Please lift the massage chair to move it on vulnerable ground such as wooden floor.
2. To avoid damage to any similar type of floor as well as the chair's casters, it is recommended the chair be lifted when moved and not slid or pushed. When the chair is lifted and moved to the designated position, be careful to keep your hands and feet out of the way to avoid injury. Do not let go of the unit until the unit is completely flat and level on the ground. To prevent damage to the floor, it is recommended to place a mat or protective barrier between the unit and the floor.

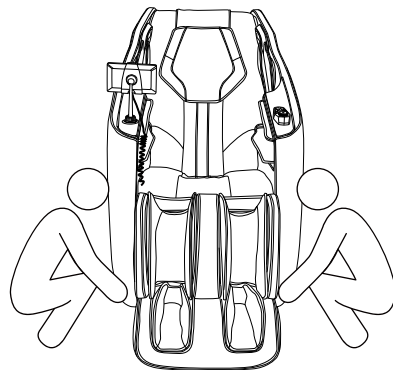


Massage Chair Placement

Move method

Use the rear casters to move the massage chair. Move the chair by tilting it down and backward about 45° as shown in the diagram.




NOTE: Excessive force to tilt will cause the chair to tip over completely and product damage.

 1. Before moving, please shut down the machine properly to reset the whole machine, and then cut off the power.
2. Please keep the chair vacant when moving. (People, pets or clutter will not be able to stay on the chair.)
3. When moving, do not cross a drop barrier higher than 2mm or a gap greater than 5mm.
4. When using casters to move this product, single continuous movement is not supported; if the distance exceeds 50 meters, please make this product move slowly and evenly.

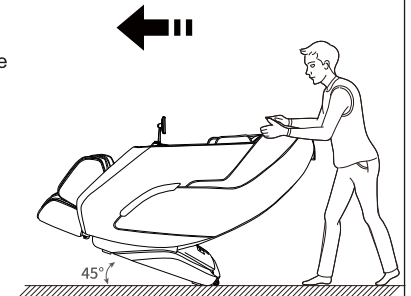

How to disassemble and use headrest cushion and backrest cushion

   Using a headrest cushion can reduce the intensity of kneading massage on the neck and shoulders, and you can decide whether to use a headrest cushion according to your needs (recommended to use a headrest cushion). The backrest cushion and the backrest are connected by a zipper (1), and the headrest cushion and the backrest cushion are connected by a zipper (2).

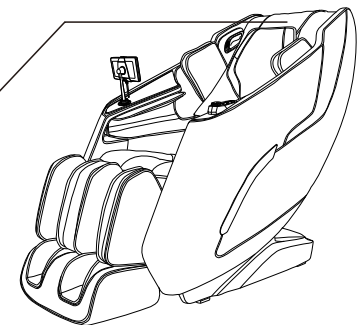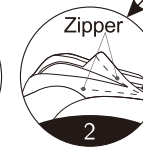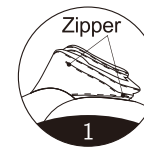

Before use

 
Check around

Make sure that there are no people, pets and other objects around the unit.



Make sure there are no foreign objects in the gaps of the machine

Before massaging, make sure that no foreign objects are caught in the legs, feet, etc.
Under no circumstances allow hands, feet, and head to penetrate into the area between the lower leg mechanism and main body, or the area between the armrest and the capsule.
Under no circumstances should hands, feet, or head sink under the fabric or leather covering of the massage area.

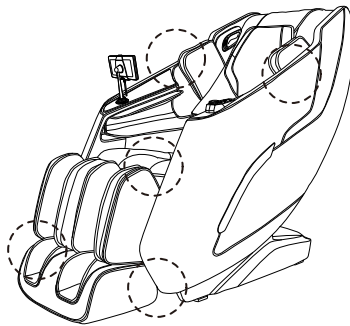


Before Use


Turn on the power

Caution

 
Plug in power cord

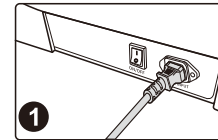

Schematic diagram of power on

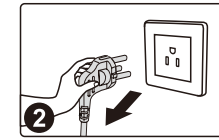 


Turn on the power switch ("I" position)

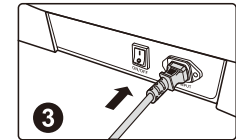 

- Please check whether the power cord and power plug are damaged before use.
- Please supply power to this product in accordance with the working power requirements of this product's calibration.
- It is strictly forbidden to use a power supply other than the nominal power supply of this product.
- It is strictly forbidden to connect various power conversion devices to supply power to this product without authorization.


Product Structure

 Parts description

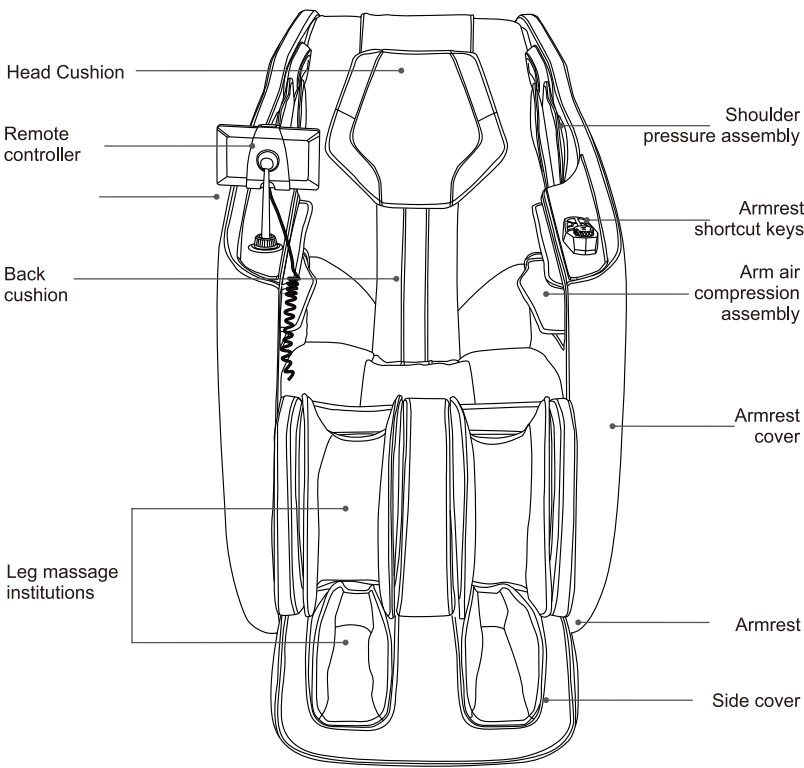


Product Structure

 Function distribution

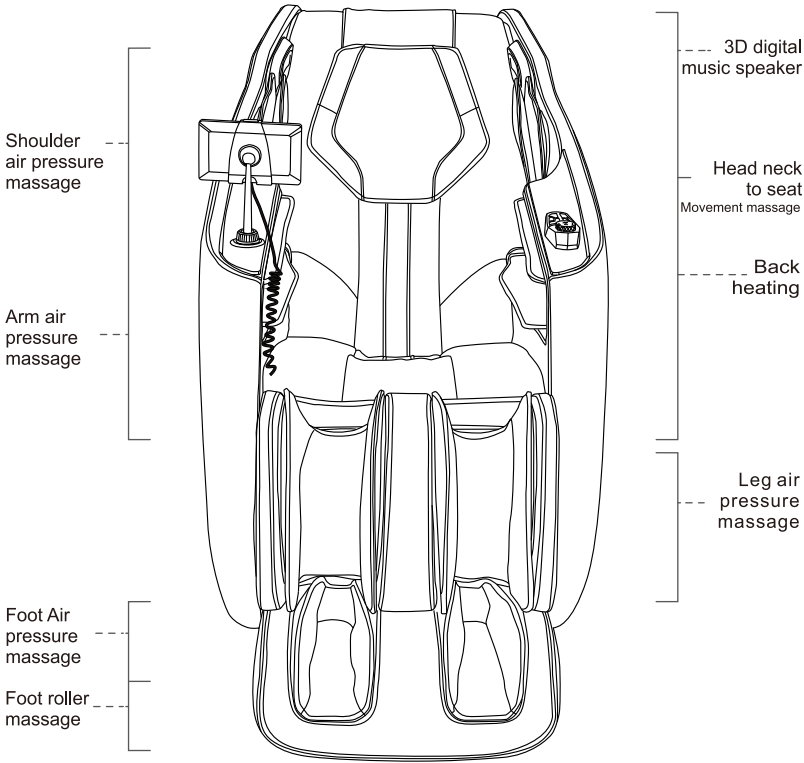

Product Structure

 I .Introduction of the remote controller

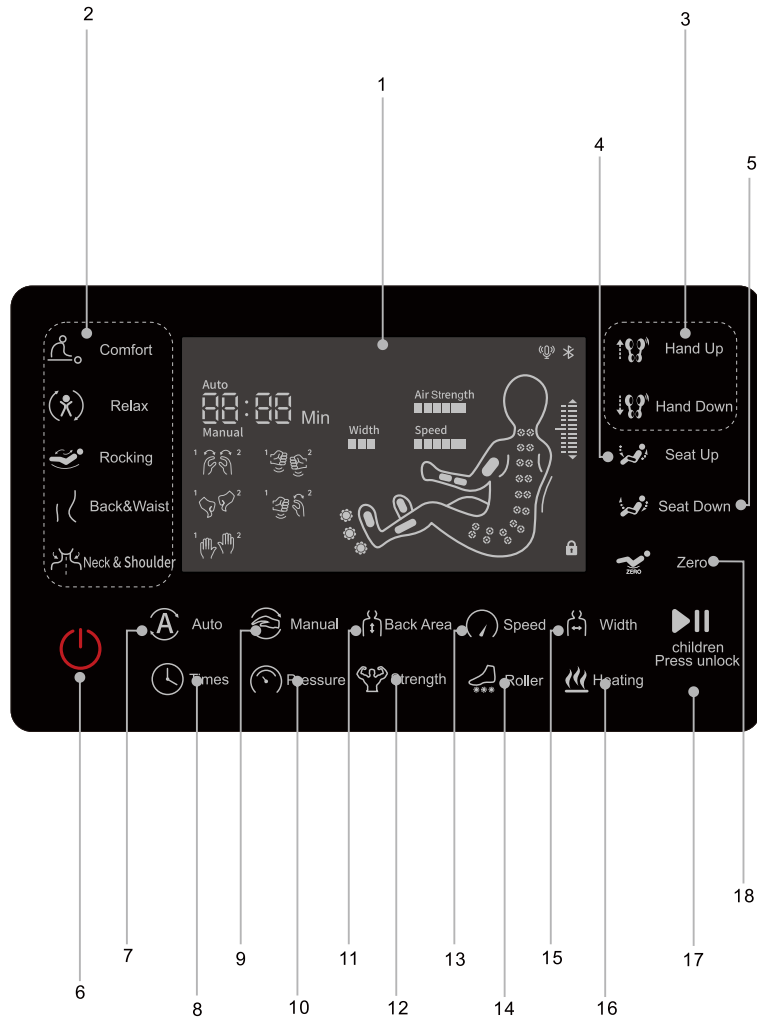


Product Structure







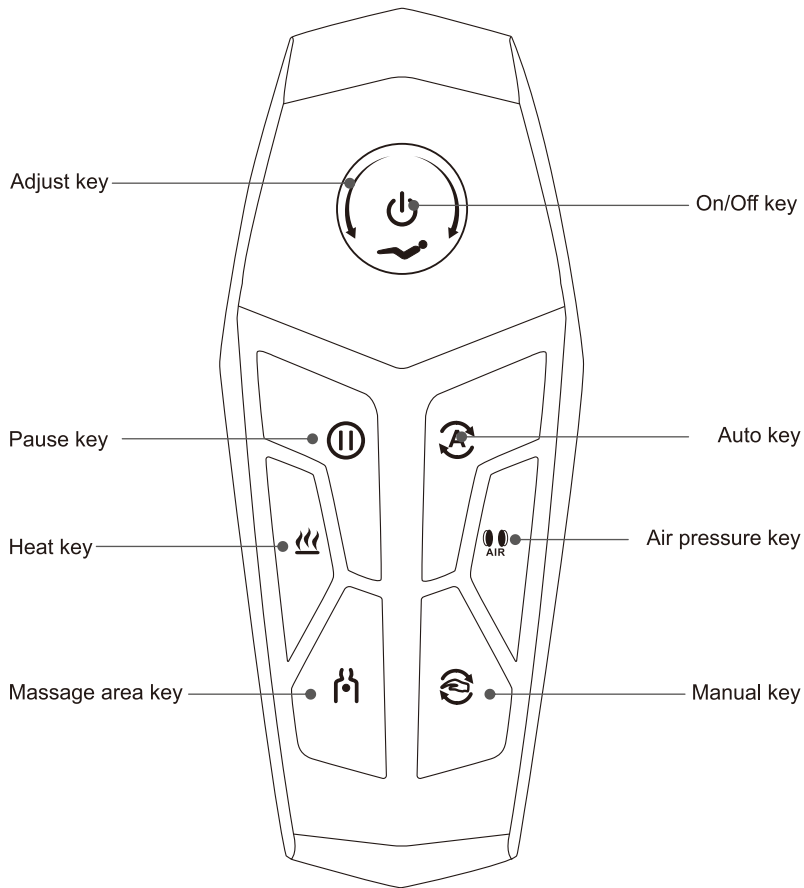 

- 1.LCD screen
 - Display all massage functions.
- 2.Auto Key
 - For details,please refer to page 17 of this manual.
- 3.Massage hand adjust key
 - Adjust the position of shiatsu points on shoulder,massage positions adjustment (in fixed point mode and partial mode , the massage position can be adjusted).
- 4.Sitting posture up button
 - Adjust the sitting posture to rise.
- 5.Sitting posture down button
 - Adjust the sitting posture to descend.
- 6.Power switch key
 - Turn on or off all massage chair functions.
- 7.Auto Program key
 - There are 7 kinds of massage procedures,please refer to page 17 of this manual for details.
- 8.Times Key
 - Time adjustment please refer to page 20 of this manual for detail instructions.
- 9.Manual key
 - For details,please refer to page 18 of this manual .
- 10.Air pressure area key
 - Adjust the massage area,for detailed instructions,please refer to page 19 of this manual.
- 11.Massage area key
 - Adjust the massage area,for detailed instructions,please refer to page 18 of this manual.
- 12.Air pressure intensity key
 - A total of five levels of air pressure can be adjusted.
- 13.Speed key
 - There are 5 levels of massage speed that can be adjusted.
- 14.Foot roller key
 - For details,please refer to page 19 of this manual.
- 15.Width key
 - A total of three levels of width can be adjusted.
- 16.Back heating key
 - Turn on/ Off heating.
- 17.Pause/start key
 - For details,please refer to page 19 of this manual.
- 18.Auto lying key
 - There are four automatic lying modes and reset and standing modes(including the reset and standing mode), which can be switched cyclically according to your own needs.

Product Structure

II. Introduction to Armrest Shortcut Keys



Product Structure





Function	Description
	Power key: Short press this key to turn ON/OFF the massage.
	Linkage lying knob: By rotating this knob clockwise, the backrest will move downward slowly and the legrest will rise slowly; by releasing it, such DOWN/UP action of the backrest and the legrest will be stopped.
	Linkage sitting knob: By rotating this knob counterclockwise, the backrest will rise slowly and the legrest will move downward slowly; by releasing it, such UP/DOWN action of the backrest and the legrest will be stopped.
	Press this key during massage, and all the massage actions will be suspended at once. (i.e. the massage chair will turn off after 20min). Then press this key again to restore all the previous massage actions.
	Auto mode key: each time the key is short pressed, it will be switched to next automatic massage function.
	Heat treatment key: Click the key to enable or disable the heat treatment function.
	Air pressure key: Each time the button is pressed, it switches to an air pressure mode, with a total of four modes (including turning off air pressure), which can be switched cyclically.
	Massage area key: press this button to switch the back stretch mode
	Manual key: each time the key is short pressed, it will be switched to next technique massage function.

 
Operation Instructions

III. Start massage

- ①. Press the power button to start the massage, the default is comfort massage.
- ②. Automatic angle adjustment (you can press the "A Auto"/"A" button to skip).
- ③. Automatic human shoulder position detection, keep the sitting posture fit with the massage chair (you can press the "A Auto"/"A" button to skip).
- ④. Shoulder position fine-tuning, if the detected position deviates from the actual shoulder position, adjust it to the appropriate position through the up and down buttons of the shoulder position (you can press the "A Auto"/"A" button to skip), there are 11 shoulder positions in total. If there is no adjustment within 10 seconds, it will enter into the massage function.

Note: You can select the automatic function during the booting process. Repeatedly selecting the same automatic function can skip the booting process and enter the massage directly.

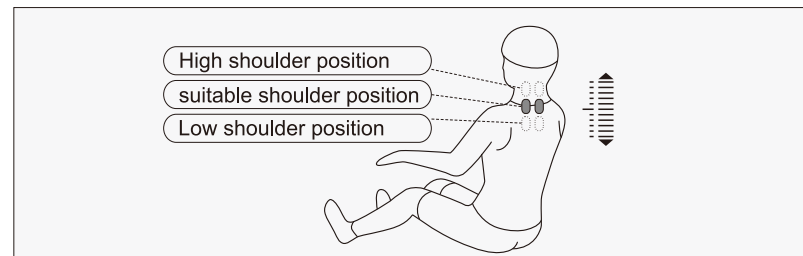


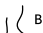 


Button	Description	Display
 Hand Up	Move the massage balls upward to a suitable position	
 Hand Down	Move the massage balls downward to a suitable position	



In the process of detecting shoulder position and massage position, press up or down keys to adjust the shoulder position when there's beep sound.














Operation Instructions

• Automatic massage

Function	Button	Description	Display
Automatic massage	 Comfort	Comfort: The most comfortable massage experience.	Auto 01
	 Relax	Relax: the depth of the soft and comfortable massage, relieve body fatigue.	Auto 02
	 Rocking	Through the massage chair rocking back and forth, mimic the function of rocking chair, with unique massage method, relieve fatigue and fall asleep easily.	Auto 03
	 Back & Waist	Back & waist: focus on back and waist massage.	Auto 04
	 Neck & Shoulder	Shoulder & neck: focus on shoulder and neck massage.	Auto 05
	 Auto	Full body massage: deep massage to rejuvenate the body.	Auto 06
		Spinal massage: Focus on spine massage and fully relieve the fatigue and pain from your body.	Auto 07
		Ache relief : Deep massage on the acupressure points can effectively relieve ache.	Auto 08
		Bottom Toing: Improve overall blood circulation of body to enhance vitality and immunity .	Auto 09
		Beautiful buttocks shaping: effective massage for the buttocks and thighs , plays a role in shaping the body, reducing the accumulation of excess body fat.	Auto 10
		Good-night sleep : massage the twelve health acupoints to help the body regulate balance, quickly improve sleep and improve sleep quality.	Auto 11
		Leisure Heath: for sedentary sitting in the office, massage can increase the amount of physical activity and improve the body's function.	Auto 12







Operation Instructions

• Manual massage



Function	Button	Description		Display
Technique	 Manual	Knead: speed.		
		Beat: speed, width.		
		Knead pat: speed.		
		Shiatsu: speed, width.		
		Knock: speed, width.		
Speed	 Speed	Adjustable 5 gears in speed.		Speed 
Width	 Width	The width of the third gear can be adjusted.		Width 
Back stretch	 Back Area	Fixed position and spot massage.		H1 Manual
		Small area local round trip massage.		H2 Manual
		A round trip massage.		H3 Manual
		Upper Back: A round-trip massage on the upper back.		H4 Manual
		Lower Back: A round-trip massage for the lower back.		H5 Manual
	 Hand Up	Massage position adjustment (in fixed point and local mode, massage position can be adjusted).	Manipulator uplink	
	 Hand Down		Manipulator descending	

Operation Instructions



• Pneumatic massage

Function	Button	Description	Display
Air pressure Mode	 Pressure	Full pressure: air pressure massage on arms, legs and feet.	
		Arm: air pressure massage with the arm as the focus.	
		Leg: barometric massage for leg, foot.	
Intensity	 Strength	Five levels can be adjusted.	Air Strength 






• Foot roller massage

Function	Button	Description	Display
Foot roller	 Roller	Press this button to turn on or off the foot roller massage, and has a weak, medium, strong three levels of intensity can be adjusted to close the four states of cycle switching.	

• Heated massage




Function	Button	Description	Display
Heat	 Heating	Press this button to turn on or off the back heat infrared therapy. , and it will warm after 3 minutes.	

• Pause/start massage button


Function	Button	Description	Display
Pause/start	 children Press unlock	Press this button during massage and all massage movements will be paused immediately. (automatically shut down after 20 minutes of pause). Press the key again before time is out , the massage chair will resume the massage actions from before the pause.	
V-chip		Press and hold pause/start key for 3 seconds to enable child lock, display shows  that lock is successful, and other keys cannot be used after being locked; Press and hold pause/start key for 3 seconds in locked state to disable child lock, and the display disappears  , indicating that unlock is successful and keys function returns to normal.	

Operation Instructions

 · Adjust lying Angle

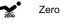Function	Button	Description
Sit up	 Seat Up	Press this button, the backrest frame will slowly rise, calf frame will slowly fall, and will release a sound until it reaches the top. Press this button again in the process of sitting, then the chair will stop in its selected position.
Lay down key	 Seat Down	Press this key, the backrest frame will slowly lower down, calf frame will slowly rise up, and will release a sound until it reaches the top. Press this key again in lying down process, then the chair will stop in its selected position.
Lie down automatically	 Zero	Each time the button is pressed, it switches to an automatic lying mode, with a total of four modes (including the reset and standing mode), which can be switched cyclically.

· Other manual functions

Function	Button	Description	Display
Timing	 Times	Time adjustment, every time this is pressed, it will add 5 minutes and cannot exceed 30 minutes. If more than 30 minutes is attempted, the time will return to the minimum time value.	20min

IV. Operation Instructions for Bluetooth Speaker Play

 
1. Enter the smart device main menu, Open "Settings" and select the "Bluetooth" options. Open "Bluetooth", and Bluetooth will automatically "Search for a New Bluetooth Device".
2. The smart device will search for the corresponding Bluetooth model (e.g. IMCM-XXXX), Click the "Match" button, if you are asked whether to match with the device, you just select "Match" to complete matching.
3. Turn on "Music Player" in the smart device and select the song to play.

Operation Instructions


VI. End the massage

1. During the massage process, press the power key of touch screen controller to immediately turn off all massage functions, the backrest and leg rest will reset, or when the massage timer expires, it will automatically turn off all massage functions, but the backrest and leg rest will not reset.


Cut off the power of the whole machine. Figure (switch power off)

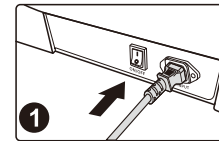

Power off ("0" position)

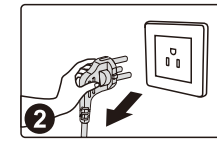 

Take off the power plug

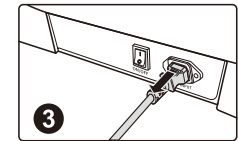 


Take off the product power cable.

Cleaning and Maintenance

Clean PVC leather and plastic parts

Wipe the leather with a soft, dry cloth.

 - Do not use chemicals such as thinner, gasoline, alcohol, etc. to clean the unit.
- When using commercially available leather care products (rags), please follow the instructions for use.
- If the PVC leather is particularly dirty, wipe it by the following methods.
 - ① Immerse a soft cloth in water or hot water containing 3% to 5% neutral detergent, then wring it out thoroughly.
 - ② Use the above soft cloth to wipe the leather surface.
 - ③ Wipe off the cleaning solution with a cloth soaked in clean water and thoroughly wrung out.
 - ④ Wipe with a wrung soft cloth.
 - ⑤ Let it air dry naturally.
- When it is difficult to remove stains, please immerse commercially available melamine foam in neutral detergent, and then wipe the machine with it.
- Do not use a hair dryer to dry the surface.
- As the color of the fabric will stain the surface of the PVC leather, be careful when wiping the chair with denim and colored fabrics.
- Do not keep these parts in contact with plastic for a long time, as this will cause discoloration.
- PVC leather may be discolored, so when using hair dye, please cover the touched part with a towel.

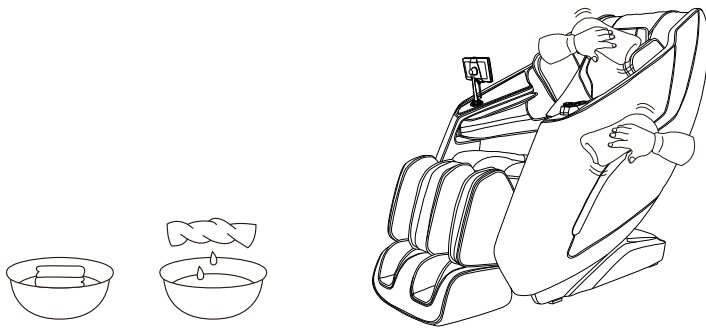

Troubleshooting

Fault	When the calf mechanism and backrest are in position, the adjustment button will no longer change the position, and a "beep, beep" sound is emitted.
Solution	The product's structure and ergonomic requirements have a set adjustment limit for the protection of its design. This sound will emit when the limit is reached.
Fault	The function does not work or some functions do not work after the machine is turned on.
Solution	After the machine is turned on by pressing the switch key, it is necessary to manually select an automatic massage program or other working state. If it is not operated, the machine will automatically shut down after 20 minutes. If the manual operation mode is selected, the functions that are not selected may be disabled, and the working mode needs to be manually set in the manual mode.
Fault	The machine makes a leather rubbing sound when adjusting its posture.
Solution	This product adopts high-grade anti-corrosion leather that meets environmental protection requirements. Due to the inherent characteristics of leather materials, there will be a normal slight noise when rubbing at the relative movement, which is a normal occurrence. Note: If you hear fabric or leather tearing sound when the machine is running, please stop using it immediately and seek professional maintenance.
Fault	The massage wheel does not reach the shoulders or neck.
Solution	If the head does not touch the head cushion or the back does not touch the backrest, the shoulder position may be lower than the actual position during the body shape detection process. Sit in the deepest position of the seat, rest your head on the headrest, and start over from the beginning.
Fault	The unit is damaged. The power cord or power plug is abnormally hot.
Solution	To prevent accidents, be sure to contact an authorized service center.

Please feel free to contact the designated service personnel for any questions or concerns about this product.

