


SAVE THESE INSTRUCTIONS

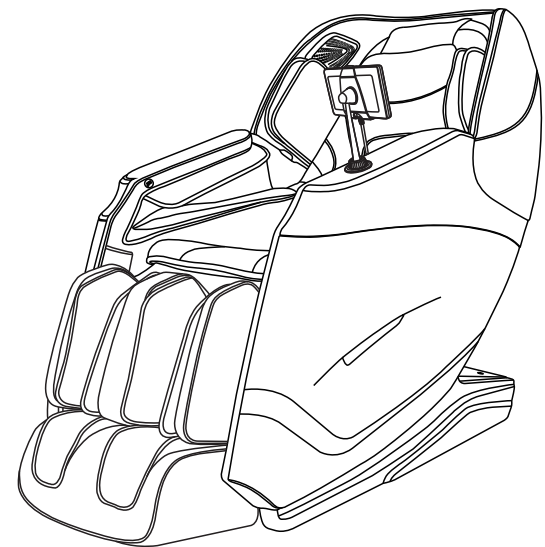

Embrace
MASSAGE CHAIR
—— Operation Instructions ——

Thanks for purchasing this product. Please read this manual instruction carefully in order to know how to use this product correctly before operation. Please pay more attention to some important safety warning and keep this manual book properly for future use.

Note: Our company reserves the right to change and explain the design of the product. If there is some difference between the product function in market circulation and the description in the manual, it is a normal update of the product, and our company will not inform you otherwise. The specific product function and color shall prevail in kind.

CONTENTS

Before Use

Safety Precautions	02-04
Part Installation	05
Massage Chair Placement	06-07
Before Use	08-09
Product Structure	10-13

Usage Method

Instructions for Use	14-20
----------------------	-------

Maintenance



Cleaning and Maintenance	21
--------------------------	----

Important


Troubleshooting	22
Product Specifications	23

Safety Precautions (must be observed)


- Please read all relevant instructions carefully before use.
- The notes marked here will help you to use the product safely and correctly.
- In order to clearly indicate the extent of potential harm and damage, precautions are divided into **"Warning"** and **"Caution"** that may be caused by incorrect use. Both of them are important for safety and must be followed.

 Warning	Indicates that serious injury or death may result from improper use.
 Caution	Indicates that misuse may cause minor injury or property damage.


- Please pay attention to the symbol before each safety item.


 Forbidden	Absolute prohibition
--	----------------------


The following populations should not use this product

 Forbidden	<ul style="list-style-type: none"> ■ The device is not intended for use by persons (including children) with physical disabilities, sensory or neurological impairments or who lack experience and common sense, unless they are supervised and instructed in the use of the device by those responsible for their safety. Children must be supervised to ensure they do not play with instruments. ■ Patients with osteoporosis. ■ Patients with heart disease or wearing electronic medical devices such as a pacemaker. ■ People who have a fever. ■ Pregnant women or women on their menstrual period. ■ Patients who are injured or have a skin disease. ■ Unsupervised children under the age of 14 and those unconscious are not allowed to use this product. ■ Those undergoing treatment, instructed to have rest, and especially those who are not feeling well. ■ People whose bodies are wet. ■ This product has a hot surface. Persons insensitive to heat must pay attention when using this product. ■ If the supply cord is damaged, to avoid danger, it must be replaced by a professional from the manufacturer, its maintenance department or similar department
---	--


Safety Precautions (must be observed)


Important safety warnings	
 Warnings	<ul style="list-style-type: none"> ■ Do not allow children to touch any movable part of this product. ■ Use a well-grounded and compatible power supply for this product. ■ Remove the plug from its power source after use and before cleaning to avoid any damage to the product or personal physical injury. ■ Operate this product as instructed in this manual. ■ Do not use any parts or accessories which are not recommended. ■ Do not use this product outdoors. ■ Please read the Operation Instructions carefully before operation. ■ Never use this product for any other purpose not listed herein. ■ 20 minutes of usage each time is recommended. ■ Do not use this product if the cover or leather is broken or damaged. ■ Do not drop anything into this product. ■ Never fall asleep while using this product. ■ Do not use this product if you are intoxicated or feel unwell. ■ Do not use this product within one hour after a meal. ■ Do not use this product with excessive force to avoid any injury.


Safety precautions	
 Caution	<ul style="list-style-type: none"> ■ Check whether voltage is consistent with the specification of this product. ■ Never insert or pull out the plug with a wet hand. ■ Do not let water flow into this product to avoid electric shock or cause damage to this product. ■ Do not pull the power cord when plugging or unplugging it. Rough handling is forbidden. ■ Do not damage the wire or modify the circuit of this product. ■ Do not clean live parts of this product, such as a power switch and plug, with a wet cloth. ■ Be away from this product in case of power failure to avoid any injury if power is restored suddenly. ■ Should this product work abnormally, stop use at once and consult your local supplier. ■ Stop using this product if you feel unwell, and consult your health care practitioner.

Storage conditions	
 Caution	<ul style="list-style-type: none"> ■ Storage room temperature: 5 °C to 40 °C. ■ Relative humidity (RH) between 20% and 80%; free of corrosive gases, and a well-ventilated room.

Safety Precautions (must be observed)

Product service and maintenance	
 Caution	<ul style="list-style-type: none"> ■ This product should be maintained by the service center designated by the manufacturer only. No user should disassemble or maintain it without permission. ■ Do not forget to turn off the main power switch after usage. ■ Do not use this product if the power socket becomes loose. ■ If this product will be left unused for a long period of time, it is necessary to roll up the power cord of this product and store this product in a dry and dust-free environment. ■ Do not store this product at a high temperature or near open flame. Avoid prolonged exposure to direct sunshine. ■ Please clean this product with a dry cloth. Never use thinner, benzene or alcohol. ■ The mechanical components of this product are specially designed and manufactured, so no special maintenance is needed. ■ Do not use a sharp object to stab at this product. ■ Do not roll or pull this product on any uneven ground. Instead, it should be lifted before moving. ■ Please use this product intermittently. Do not keep it working continuously for a long period of time.





Operating environment	
 Caution	<ul style="list-style-type: none"> ■ Do not use this product in a very moist environment such as the bathroom. ■ Stop using this product immediately when the ambient temperature changes sharply. ■ Do not use this product in any heavily-dusty or caustic environment. ■ Do not use this product in a small space or a place without good ventilation.

Solutions to ordinary malfunctions	
 Caution	<ul style="list-style-type: none"> ■ If the motor sounds during operation of this product, this is the normal operation sound. ■ If the controller cannot work normally, check whether the plug and the power socket are connected reliably, and whether the power switch is turned on. ■ If the rated working time is over, this product will automatically activate the power-off button; If this product keeps operating for a long period of time, the temperature protector will stop this product automatically. The product can be used again after half an hour.

Part Installation

Calf installation instructions

1. Insert the wire of the calf and the air pipe into the front socket of the steel frame assembly (Figure 1).
2. Then push the connected wire and air pipe into the hole in the backrest frame (Figure 2).
3. After the wire docking is completed, open the calf fixing covers on both sides of the steel frame assembly (Figure 3).
4. Lift the calf into the notch, close the fixing covers, and secure it in place with 2 pieces screws (Figure 4).

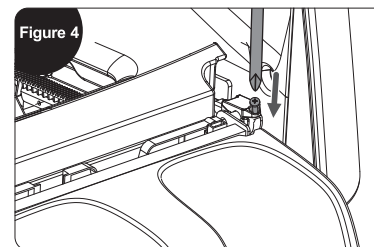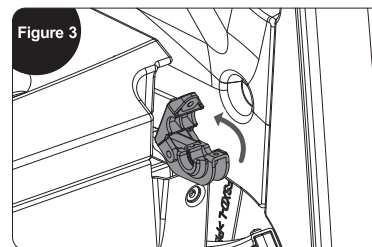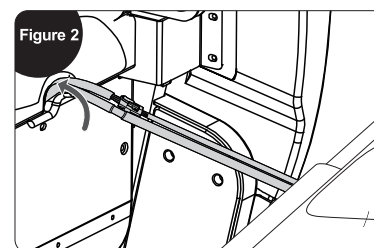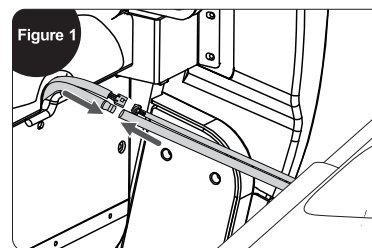


Massage Chair Placement

Installation placement

Make sure there is enough space for the massage chair to be tilted at least 15 cm.



Do not expose the massage chair directly to high temperature environment due to sunlight (such as: in front of heating equipment), and place it to where can avoid high temperature and direct sunlight. It is recommended to lay a soft cushion for long-term use in a designated location. When laying the cushion, the size of the cushion should be enough to cover. Keep the range where the machine touches the floor and the range where your feet touch the floor.

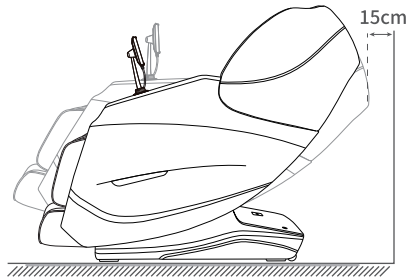


Product lift instruction

A team lift is required to move the chair and avoid injury.



1. Please lift the massage chair to move it on vulnerable ground such as wooden floor.
2. To avoid damage to any similar type of floor as well as the chair's casters, it is recommended the chair be lifted when moved and not slid or pushed. When the chair is lifted and moved to the designated position, be careful to keep your hands and feet out of the way to avoid injury. Do not let go of the unit until the unit is completely flat and level on the ground. To prevent damage to the floor, it is recommended to place a mat or protective barrier between the unit and the floor.

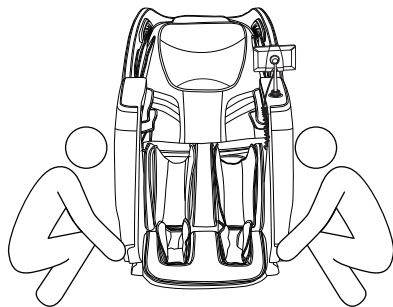

Massage Chair Placement


Move method

Use the rear casters to move the massage chair. Move the chair by tilting it down and backward about 45° as shown in the diagram.

NOTE: Excessive force to tilt will cause the chair to tip over completely and product damage.






1. Before moving, please shut down the machine properly to reset the whole machine, and then cut off the power.
2. Please keep the chair vacant when moving. (People, pets or clutter will not be able to stay on the chair.)
3. When moving, do not cross a drop barrier higher than 2mm or a gap greater than 5mm.
4. When using casters to move this product, single continuous movement is not supported; if the distance exceeds 50 meters, please make this product move slowly and evenly.

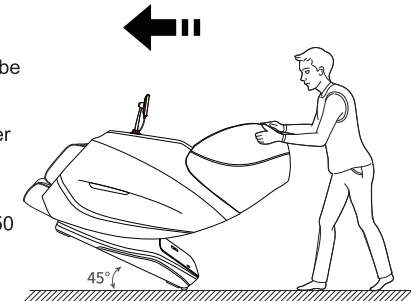

How to disassemble and use headrest cushion and backrest cushion


Using a headrest cushion can reduce the intensity of kneading massage on the neck and shoulders, and you can decide whether to use a headrest cushion according to your needs (recommended to use a headrest cushion). The backrest cushion and the backrest are connected by a zipper (1), and the headrest cushion and the backrest cushion are connected by a zipper (2).

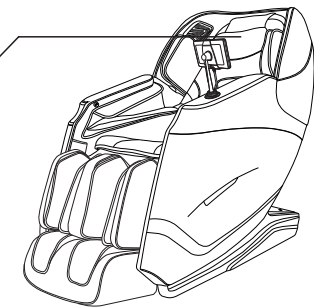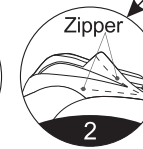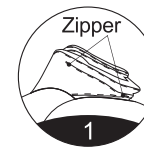

Before use


Check around

Make sure that there are no people, pets and other objects around the unit.

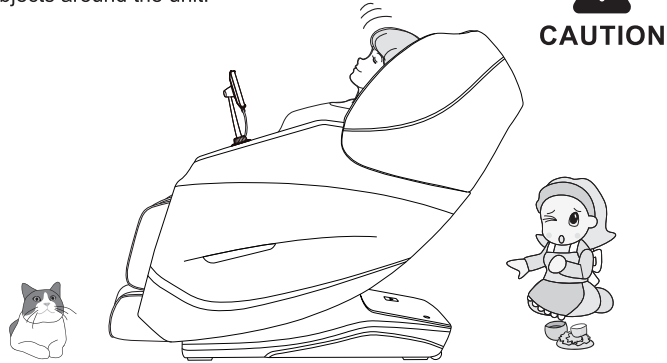

Make sure there are no foreign objects in the gaps of the machine

Before massaging, make sure that no foreign objects are caught in the legs, feet, etc. Under no circumstances allow hands, feet, and head to penetrate into the area between the lower leg mechanism and main body, or the area between the armrest and the capsule. Under no circumstances should hands, feet, or head sink under the fabric or leather covering of the massage area.

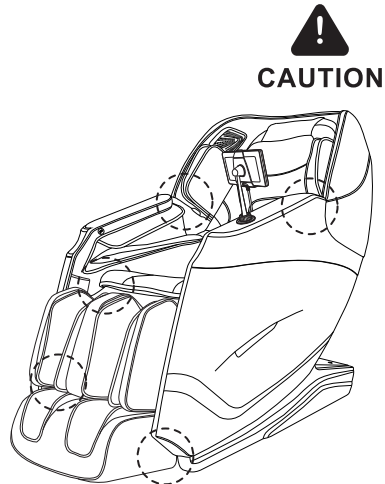


Before Use


Turn on the power

Caution


Plug in power cord

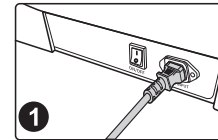

Schematic diagram of power on

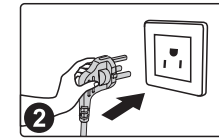


Turn on the power switch ("I" position)

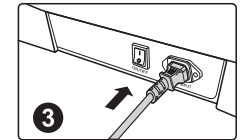

- Please check whether the power cord and power plug are damaged before use.
- Please supply power to this product in accordance with the working power requirements of this product's calibration.
- It is strictly forbidden to use a power supply other than the nominal power supply of this product.
- It is strictly forbidden to connect various power conversion devices to supply power to this product without authorization.


Product Structure

Parts description

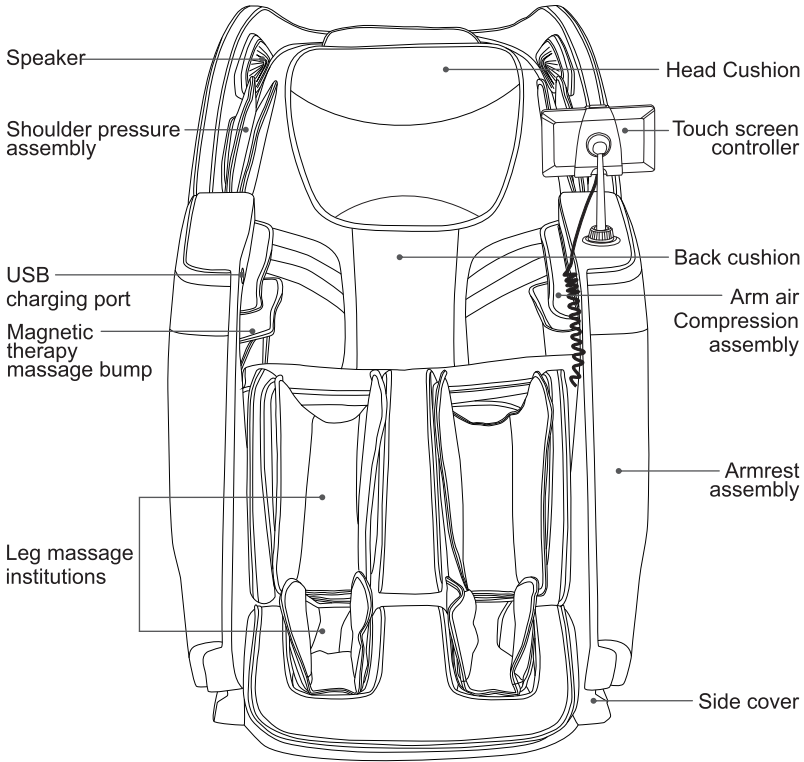


Product Structure

Function distribution

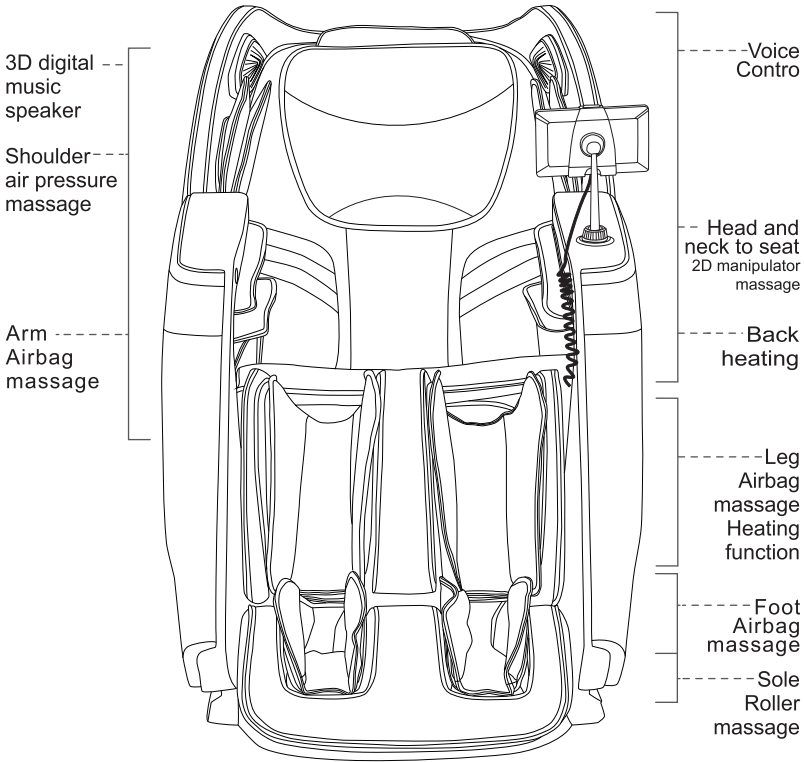

Product Structure

I .Introduction of the remote controller

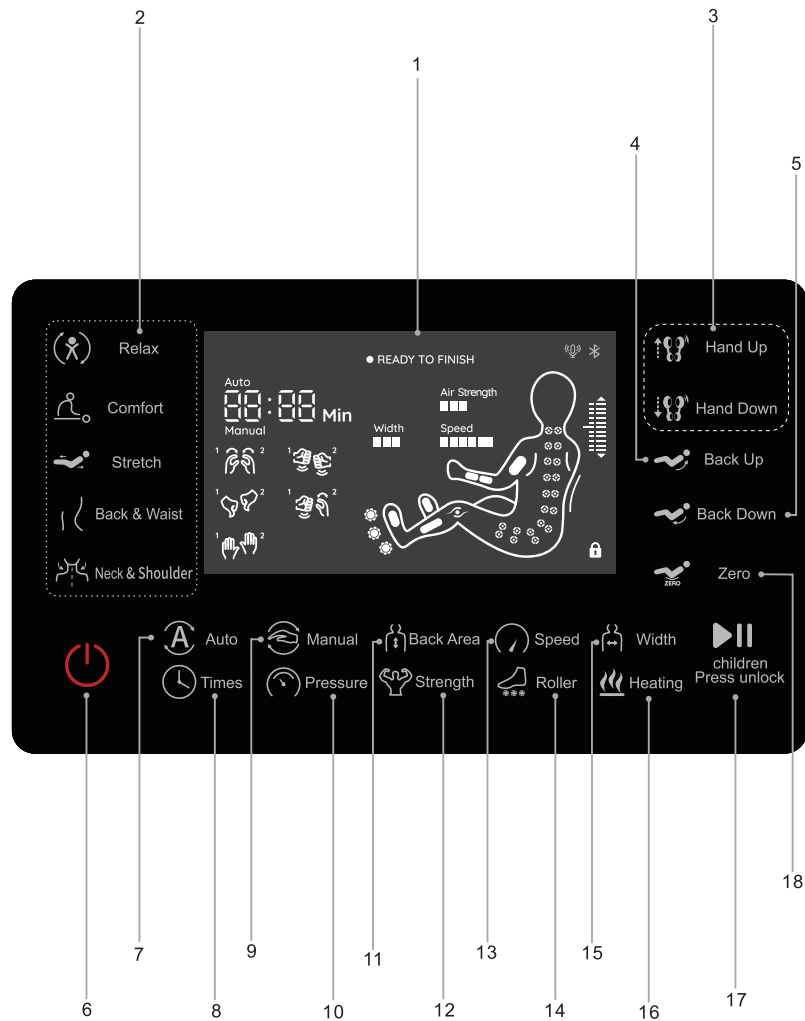





Product Structure


- 1.LCD screen
-Display all massage functions.
- 2.Auto Key
-For details,please refer to page 15 of this manual.
- 3.Massage hand adjust key
-Adjust the position of shiatsu points on shoulder,massage positions adjustment (in fixed point mode and partial mode , the massage position can be adjusted).
- 4.Back up key
-Adjust backrest frame to rise and calf frame down.
- 5.Back down key
-Adjust backrest frame to lower.
- 6.Power switch key
-Turn on or off all massage chair functions.
- 7.Auto Program key
-There are 7 kinds of massage procedures,please refer to page 15 of this manual for details.
- 8.Times Key
-Time adjustment please refer to page 17 of this manual for detail instructions.
- 9.Manual key
-For details,please refer to page 16 of this manual .
- 10.Air pressure area key
- adjust the massage area,for detailed instructions,please refer to page 16 of this manual.
- 11.Massage area key
-Adjust the massage area,for detailed instructions,please refer to page 16 of this manual.
- 12.Air pressure intensity key
-A total of three levels of air pressure intensity can be adjusted.
- 13.Speed key
- There are 5 levels of massage speed that can be adjusted.
- 14.Foot roller key
-For details,please refer to page 16 of this manual.
- 15.Width Adjustment Button
-A total of three levels of width can be adjusted.
- 16.Back heating key
-Turn on/ Off heating.
- 17.Pause/start key
- For details,please refer to page 17 of this manual.
- 18.Auto lying key
-There are 4 automatic modes,which can be switched in cycles according to your needs.

Operation Instructions

II .Start massage




 


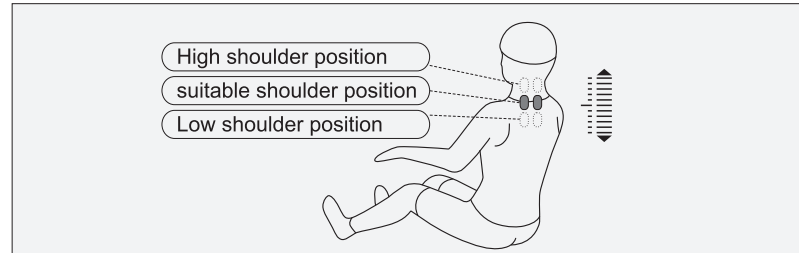- ①、Press the power button to start the massage, The default is comfort massage.
 - ②、Dynamic adjustment.
 - ③、Check the position of the moving body and shoulder to keep the sitting posture fit with the massage chair.
 - ④、Fine adjustment of shoulder position. If the detected position deviates from the actual shoulder position,adjust it to the appropriate position through the up and down keys of shoulder position. The shoulder position has 11 levels in total.If the shoulder position is adjusted within 10 seconds,enter the massage function.
- Note: in the process of starting up,you can select the "Auto" function.If you repeatedly select the same "Auto" function,you can skip the starting process and directly enter the "massage".

Button	Description	Display
 Hand Up	Move the massage balls upward to a suitable position	
 Hand Down	Move the massage balls downward to a suitable position	









 

 


Operation Instructions

· Automatic massage






Function	Button	Description	Display
Automatic massage	 Relax	Relax: the depth of the soft and comfortable massage, relieve body fatigue.	Auto 01
	 Comfort	Comfort: The most comfortable massage experience.	Auto 02
	 Stretch	Frame and backrest frame rise and fall, and air pressure massage, and stretch or traction on the leg, remove fatigue, restore vitality.	Auto 03
	 Back & Waist	Back&waist: focus on back and waist massage.	Auto 04
	 Neck & Shoulder	Shoulder & neck: focus on shoulder and neck massage.	Auto 05
	 Auto	Full body massage: deep massage to rejuvenate the body.	Auto 06
		Spinal massage: Focus on spine massage and fully relieve the fatigue and pain from your body.	Auto 07
		Ache relief: Deep massage on the acupressure points can effectively relieve ache.	Auto 08
		Bottom Toing: Improve overall blood circulation of body to enhance vitality and immunity .	Auto 09
		Beautiful buttocks shaping: effective massage for the buttocks and thighs , plays a role in shaping the body, reducing the accumulation of excess body fat.	Auto 10
		Good-night sleep : massage the twelve health acupoints to help the body regulate balance, quickly improve sleep and improve sleep quality.	Auto 11
		Leisure Heath: for sedentary sitting in the office, massage can increase the amount of physical activity and improve the body's function.	Auto 12

Operation Instructions



· Upper body manual massage

Function	Button	Massage ball adjustment	Display
Technique	 Manual	Knead: speed.	
		Tap: speed, width.	
		Knead tap: speed.	
		Shiatsu: speed, width.	
		Knock: speed, width.	
Speed	 Speed	5 speed adjustable.	Speed ■ ■ ■ ■ ■
Width	 Width	The width of the third gear can be adjusted.	Width ■ ■ ■
Back stretch	 Back Area	Fixed position and spot massage.	H1 Manual
		Small area local round trip massage.	H2 Manual
		A round trip massage.	H3 Manual
	 Hand Up	Message position adjustment (in fixed point and local mode, message position can be adjusted).	Manipulator uplink
	 Hand Down		

· Pneumatic massage



Function	Button	Description	Display
Air pressure Mode	 Pressure	Full pressure: air pressure massage on arms, legs and feet.	
		Arm: air pressure massage with the arm as the focus.	
		Leg: barometric massage for leg, foot.	
intensity	 Strength	Adjustable in three levels.	Air Strength ■ ■ ■

· Foot roller massage


 
 
Function	Button	Description	Display
Foot roller	 Roller	Press this button to turn on or off the foot roller massage, and has a weak, medium, strong three levels of intensity can be adjusted to close the four states of cycle switching.	

Operation Instructions


 

· Heated massage

Function	Button	Description	Display
Heat	 Heating	Press this button to turn on or off the back heat infrared therapy.	


· Pause/start massage button

Function	Button	Description	Display
Pause/start	 children Press unlock	Press this button during massage and all massage movements will be paused immediately. (automatically shut down after 20 minutes of pause). Press the key again before time is out, the massage chair will resume the massage actions from before the pause.	
v-chip		Press and hold pause/start key for 3 seconds to enable child lock. display shows  that lock is successful, and otherkeys cannot be used after being locked; press and hold pause/start key for 3 seconds to disable child lock. and hold display disappears  , indicating that unlockis successful and keys function returns to normal.	

· Adjust lying Angle

Function	Button	Description
Sit up	 Back Up	Press this button and the backrest frame will slowly rise, calf frame will slowly fall, and a sound will emit until it reaches the top. Press this button again to reverse the motion and the chair stop in its selected position.
Lay down key	 Back Down	Press this key and the backrest frame will slowly fall, calf frame will slowly rise up and a sound will emit until it stops. Press this key again while in the process and the chair will stop in its selected position.
Lie down automatically	 Zero	Press the button every time to switch one automatic lying mode. There are Four modes in total.

 · Other manual functions

Function	Button	Description	Display
Timing	 Times	Time adjustment-every time this is pressed it will add 5 minutes. It cannot exceed 30 minutes. If more than 30 minutes is attempted, the time will return to the minimum time value.	20min

Operation Instructions

III. Operation Instructions for Bluetooth Speaker Play

1. Enter the smart device main menu, Open "Settings" and select the "Bluetooth" options. Open "Bluetooth", and Bluetooth will automatically "Search for a New Bluetooth Device".
2. The smart device will search for the corresponding Bluetooth model (e.g. IMCM-XXXX), Click the "Match" button, if you are asked whether to match with the device, you just select "Match" to complete matching.
3. Turn on "Music Player" in the smart device and select the song to play.

IV. Voice Control Mode

- When the massage chair is turned on or in standby mode the sound "Hi e-Lounge" or "Hey e-Lounge" will be produced to enable the voice control function.
- Press and hold the zero gravity key of the manual controller for 3 seconds to turn on or off the device control function.
- After such function is enabled successfully, the massage chair will reply "I am here" At this moment, once a corresponding voice control entry to be implemented is given within six seconds, the corresponding voice control function can be performed after a reply is received from the massage chair. If no correct voice control entry is given within six seconds, the voice control function will be turned off automatically and needs to be enabled again.

Noted: When waking up the voice control function, please use English, a moderate speech rate, and ensure the voice commands follow up the voice entry.


Operation Instructions

Voice Control Entry		
Entry: "Hi e-Lounge" or "Hey e-Lounge". Answer: I am here.		
No.	Voice control entry	Answer entry
1	Massage on	Answer: Ok, massage on
2	Massage close	Answer: Ok, massage close
3	Comfort Massage	Answer: Ok, comfort massage
4	Relax massage	Answer: Ok, relax massage
5	Full body massage	Answer: Ok, full body massage
6	Neck and shoulder massage	Answer: Ok, neck and shoulder massage
7	Back and waist massage	Answer: Ok, back and waist massage
8	Stretch massage	Answer: Ok, stretch massage
9	Open the air pressure	Answer: Ok, open the air pressure
10	Close the air pressure	Answer: Ok, close the air pressure
11	Up the seat position	Answer: Ok, up the seat position
12	Down the seat position	Answer: Ok, down the seat position
13	Change the other mode	Answer: Ok, change the other mode
14	Go little down	Answer: Ok, go little down
15	Go little up	Answer: Ok, go little up


Operation Instructions

V. End the massage


1. During the massage process, press the power key on the touch screen controller to immediately turn off all massage functions. The backrest and leg rest will reset. Alternatively, the massage functions will cease automatically when the massage timer expires but the backrest and legrest will not reset.
2. Cut off the power of the whole machine. Figure (switch power off)

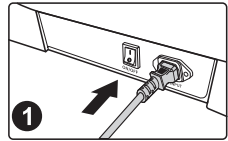

Power off ("0" position)

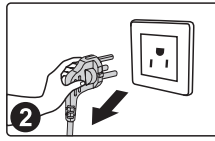

Take off the power plug

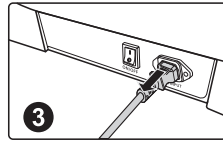

Take off the product power cable.

Cleaning and Maintenance

Clean PU leather and plastic parts

Wipe the leather with a soft, dry cloth.

- Do not use chemicals such as thinner, gasoline, alcohol, etc. to clean the unit.
- When using commercially available leather care products (rags), please follow the instructions for use.

■ If the PU leather is particularly dirty, wipe it by the following methods.

- ① Immerse a soft cloth in water or hot water containing 3% to 5% neutral detergent, then wring it out thoroughly.
- ② Use the above soft cloth to wipe the leather surface.
- ③ Wipe off the cleaning solution with a cloth soaked in clean water and thoroughly wrung out.
- ④ Wipe with a wrung soft cloth.
- ⑤ Let it air dry naturally.


■ When it is difficult to remove stains, please immerse commercially available melamine foam in neutral detergent, and then wipe the machine with it.

■ Do not use a hair dryer to dry the surface.

■ As the color of the fabric will stain the surface of the PU leather, be careful when wiping the chair with denim and colored fabrics.

■ Do not keep these parts in contact with plastic for a long time, as this will cause discoloration.

■ PU leather may be discolored, so when using hair dye, please cover the touched part with a towel.

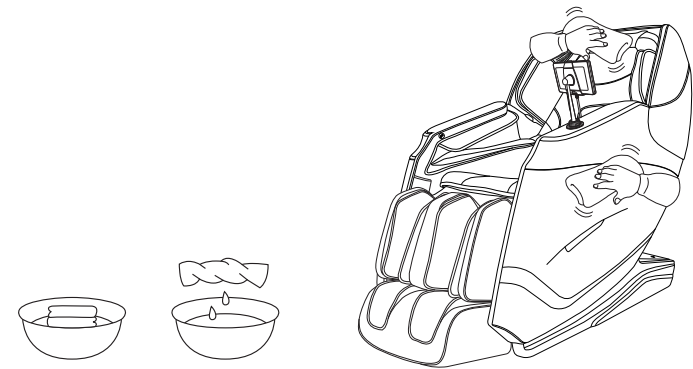

Troubleshooting

Fault	When the calf mechanism and backrest are in position, the adjustment button will no longer change the position, and a "beep, beep" sound is emitted.
Solution	The product's structure and ergonomic requirements have a set adjustment limit for the protection of its design. This sound will emit when the limit is reached.
Fault	The function does not work or some functions do not work after the machine is turned on.
Solution	After the machine is turned on by pressing the switch key, it is necessary to manually select an automatic massage program or other working state. If it is not operated, the machine will automatically shut down after 20 minutes. If the manual operation mode is selected, the functions that are not selected may be disabled, and the working mode needs to be manually set in the manual mode.
Fault	The machine makes a leather rubbing sound when adjusting its posture.
Solution	This product adopts high-grade anti-corrosion leather that meets environmental protection requirements. Due to the inherent characteristics of leather materials, there will be a normal slight noise when rubbing at the relative movement, which is a normal occurrence. Note: If you hear fabric or leather tearing sound when the machine is running, please stop using it immediately and seek professional maintenance.
Fault	The massage wheel does not reach the shoulders or neck.
Solution	If the head does not touch the head cushion or the back does not touch the backrest, the shoulder position may be lower than the actual position during the body shape detection process. Sit in the deepest position of the seat, rest your head on the headrest, and start over from the beginning.
Fault	The unit is damaged. The power cord or power plug is abnormally hot.
Solution	To prevent accidents, be sure to contact an authorized service center.

Please feel free to contact the designated service personnel for any questions or concerns about this product.

Product Specifications

Model: Embrace

Name: Massage Chair

Rated voltage: 110-120V~ 60Hz ☐
220-240V~ 50Hz ☐

Rated power: 100W

Rated time: 20min

Safety structure: Class I

Material description: PVC, PA, steel parts, electric and electron components

MATERIAL	PU	LEATHER	CLOTH	WOOD