ASSEMBLY INSTRUCTION FOR DINING ARM CHAIR D-5210-5-AC


Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.


- 1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
- 2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
- 3. Please do not over tighten screws or bolts.
- 4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PARTS LIST						
NO.	PART DESC	CODE	Q'TY			
А	Chair Back	PD-5210-5-ACBFR	1рс			
В	Seat cushion	PD-5210-5-ACSEC PD-5210-5-ACSEA	1pc			
С	L-Leg	PD-5210-5-SCLEG1	1pc			
D	R-Leg	PD-5210-5-SCLEG2	1pc			
Е	L-	PD-5210-5-SCSTR1	1pc			
F	R-	PD-5210-5-SCSTR2	1pc			
G	L-Arm	PD-5210-5-ACARM1	1pc			
Н	R-Arm	PD-5210-5-ACARM2	1pc			

HARDWARE LIST						
NO.	HARDWARE DESC		CODE	Q'TY		
1		Allen bolt (Ø1/4" x 2-1/2")		4pcs		
2		Allen bolt (Ø1/4" x3")		4pcs		
3		Allen bolt (Ø1/4" x1-1/2")		8pcs		
4		Spring washer (Ø1/4")	PD-5210-SCHW	16pcs		
5		Flat washer (Ø1/4"Ø19)		14pcs		
6		Flat washer (Ø1/4"Ø12)		2pcs		
7	(] 3 200000003>>	Screw (#8 x1-3/4")		4pcs		
8		Allen key (M4)		1pc		
SCREW-DRIVER (NOT PROVIDED)						


Only tighten all bolts when all bolts aligned with bolt inserts.

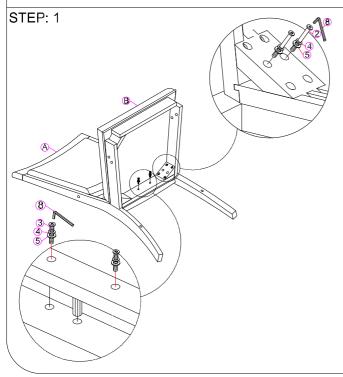

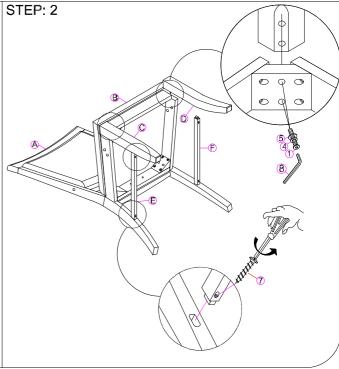

ASSEMBLY INSTRUCTION FOR DINING ARM CHAIR D-5210-5-AC

STEP: 3

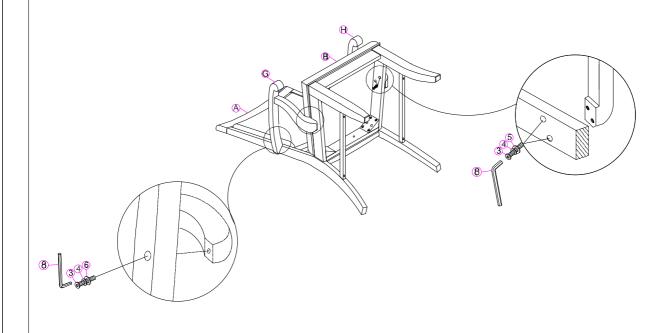

Completed

