

ASSEMBLY INSTRUCTION FOR

QUEEN PANEL BED

B-14210-3-QH / B-14210-3-QF /B-14210-3-QKR









Caution : Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.








1.We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage the product or injury to persons during assembly.

2.Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.


3.Please do not over tighten screws or bolts.

4.Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PARTS LIST				
NO.	PART DESCRIPTION		CODE	Q' TY
A	Headboard		B-14210-3-QH	1
B	Left Headboard Leg		PB-14210-3-HBLEG1	1
C	Right Headboard Leg		PB-14210-3-HBLEG2	1
D	Bottom Stretcher		PB-14210-3-QHSTR	1
E	Foot Board		B-14210-3-QF	1
F	Rails		B-14210-3-QKR	2
G	Slats		PB-14210-QBSLT	4
H	Slat Support Leg		PB-14210-BDSPL	4

HARDWARE LIST				
NO.	HARDWARE DESC		CODE	Q'TY
1		Allen Bolt (Ø5/16*2")	PB-14210-KBHW	10
2		Allen Bolt (Ø5/16*3/4")		12
3		Spring Washer (Ø5/16")		22
4		Flat Washer (Ø5/16" *3/4")		22
5		Allen Wrench (M4)		1
6		Screw (#3/16" *1-3/8")		8
 SCREW-DRIVER(NOT PROVIDED)				


⚠ Only tighten all bolts when all bolts aligned with bolt inserts

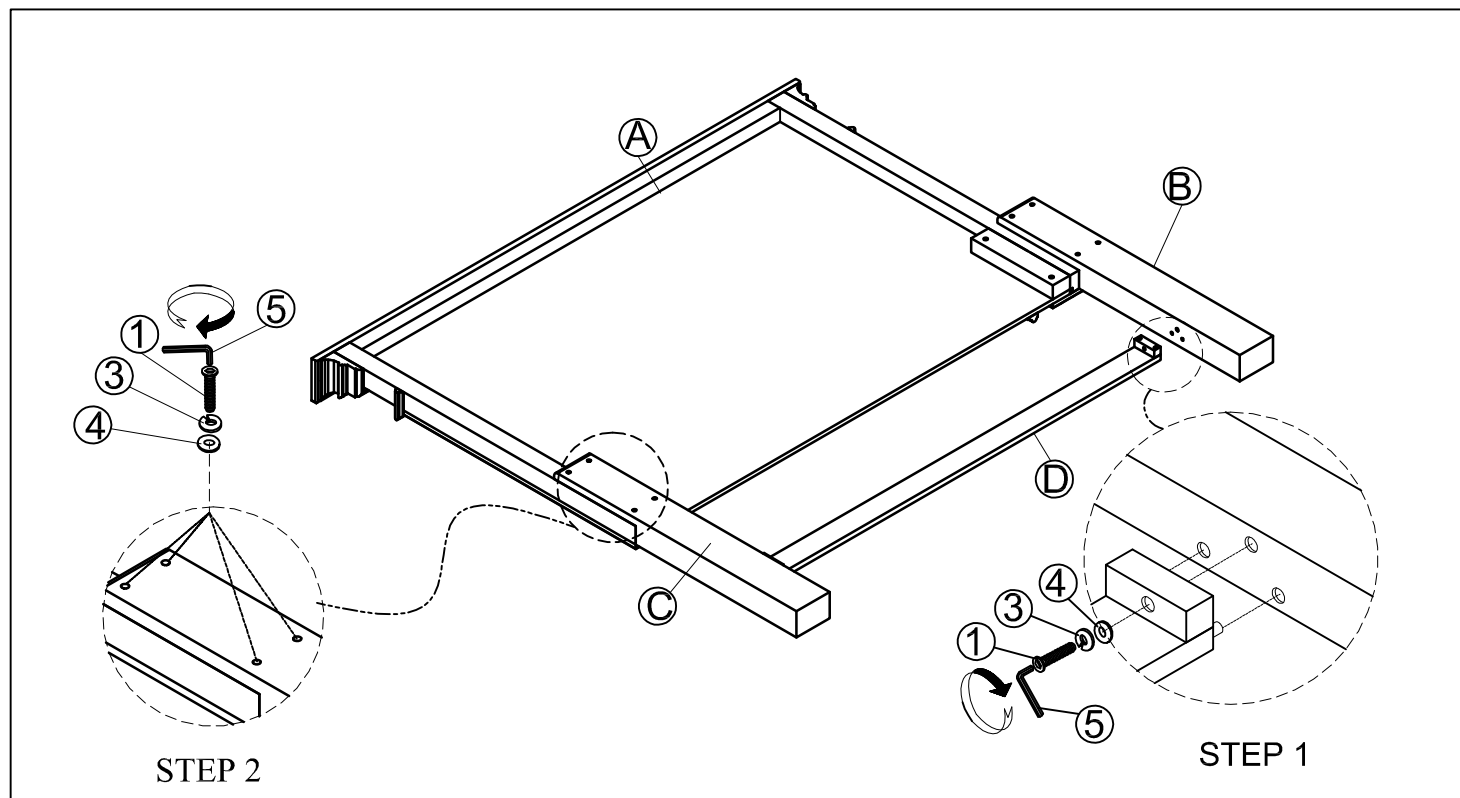

ASSEMBLY INSTRUCTION FOR

QUEEN PANEL BED

B-14210-3-QH / B-14210-3-QF / B-14210-3-QKR

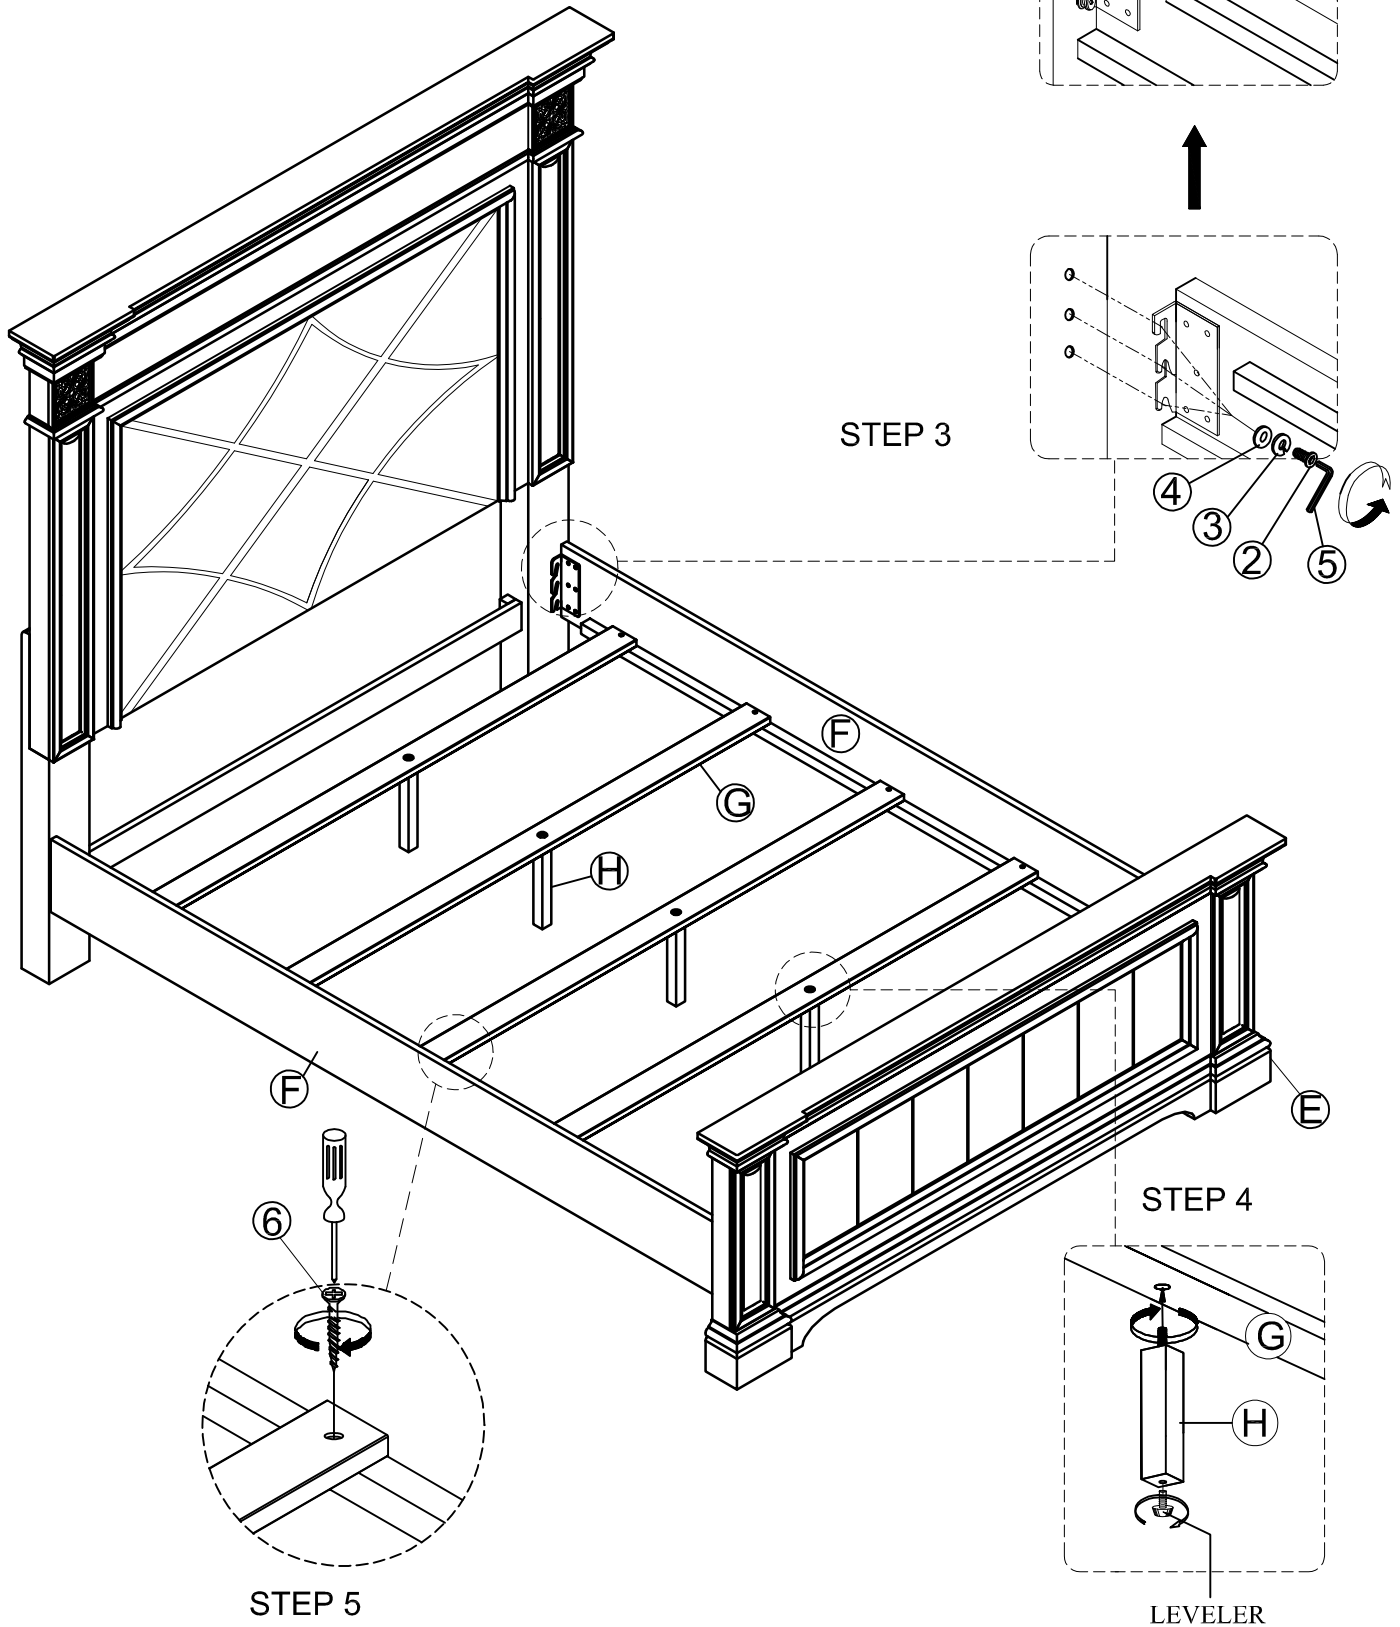

ASSEMBLY INSTRUCTION FOR

QUEEN PANEL BED

B-14210-3-QH / B-14210-3-QF / B-14210-3-QKR

COMPLETED

