

# ASSEMBLY INSTRUCTION FOR





## QUEEN PANEL STORAGE BED

B-11600-7-QH / B-11600-7-QFB / B-11600-7-QKSR






Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.



### PART LIST FOR HEADBOARD

No.	Part Description		Code.	Q'ty
A		Queen Headboard		1
B		Left Headboard Leg	PB-11600-7-HBLEG1	1
C		Right Headboard Leg	PB-11600-7-HBLEG2	1
D		Queen Headboard Bottom Stretcher	PB-11600-7-QHSTR	1





### PART LIST FOR FOOTBOARD

No.	Part Description		Code.	Q'ty
E		Queen Footboard		1
F		Storage Drawer Slat Support Leg with Leveler	PB-11600-BDSPL2	2
G		Storage Rail With Drawer Slide	PB-11600-QFBSRL	2
H		Queen Bed Slats	PB-11600 -QSBSLT	13
I		Slat Support Leg with Leveler	PB-11600-BDSPL1	7

### PART LIST FOR SIDE RAILS


No.	Part Description		Code.	Q'ty
J		Side Rails	PB-11600-7-QKSR	2
K		King/Queen Bed Storage Drawer	PB-11600-7-SRDRW	4

### HARDWARE LIST FOR HEADBOARD

No.	Hardware Description		Code.	Q'ty
1		Flat washer 5/16"*Ø19	PB-11600-KBHW	8
2		Spring washer 5/16"*Ø12		8
3		Allen Bolt 5/16"*1-3/4"		8
4		Allen key M4*2-5/16"		1







#### Headboard Hardware Packed with Headboard

### HARDWARE LIST FOR FOOTBOARD


No.	Hardware Description		Code.	Q'ty
5		Wood Screw 1"	PB-11600-KBHW	34

#### Footboard Hardware Packed with Footboard

### HARDWARE LIST FOR SIDE RAILS

No.	Hardware Description		Code.	Q'ty
6		Allen Bolt 5/16"*1"	PB-11600-KBHW	12
7		Flat washer 5/16"*Ø19		12
8		Spring washer 5/16"*Ø12		12
9		Allen key M4*2-5/16"		1
10		Wood Screw 3/8"		24
11		Wood Screw 1-1/2"		8

#### Siderail Hardware Packed with Siderail

 Only tighten all bolts when all bolts aligned with bolt inserts.


NOTE:  SCREW-DRIVER (NOT PROVIDED)

# ASSEMBLY INSTRUCTION FOR


## QUEEN PANEL STORAGE BED

B-11600-7-QH / B-11600-7-QFB / B-11600-7-QKSR

### STEP 1

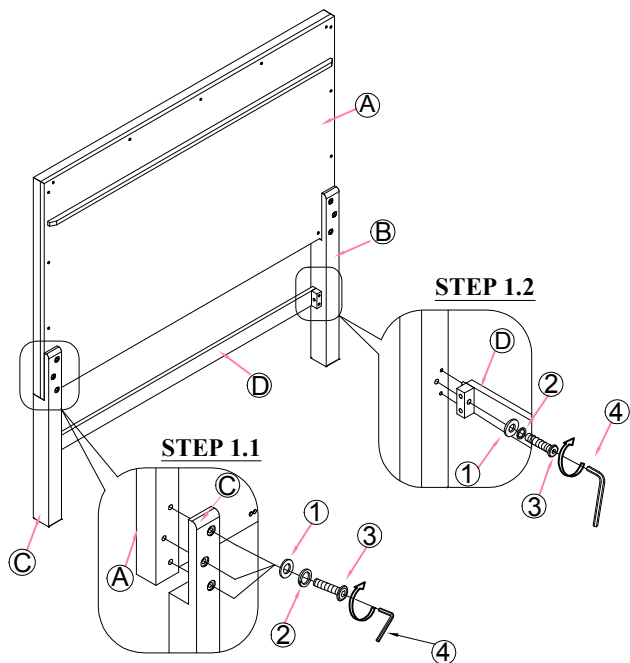


### STEP 2

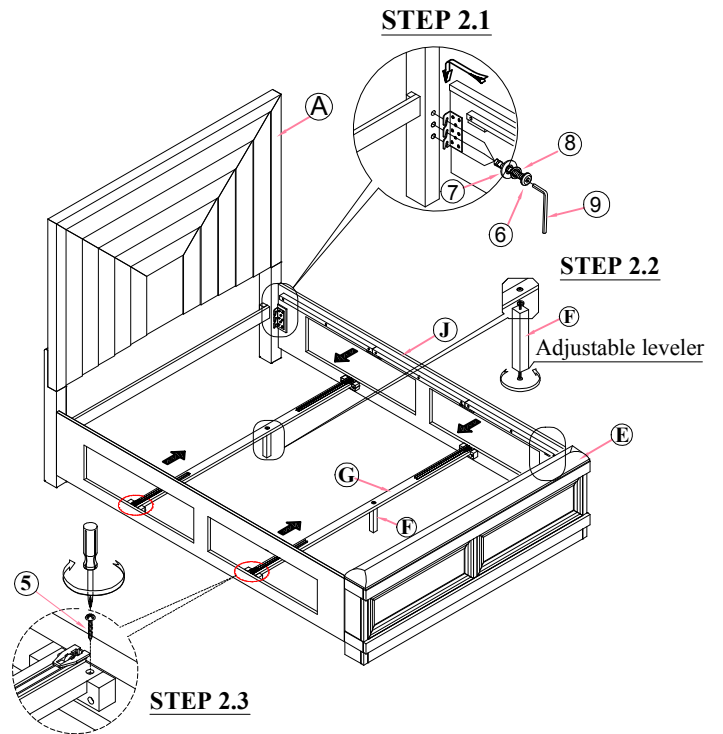


### STEP 3


#### 1.1

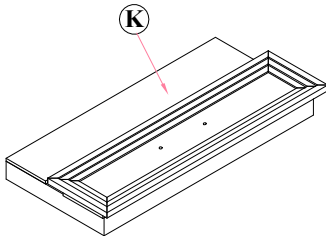


#### 1.2

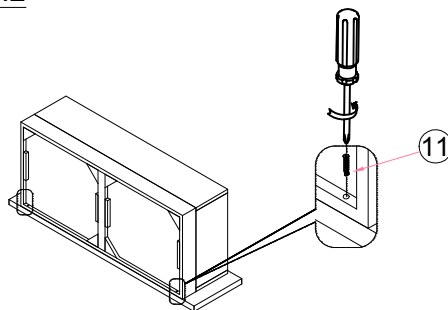


#### 1.3

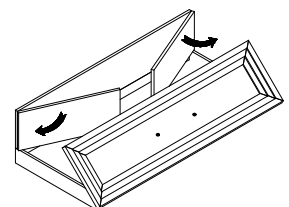


#### 1.4

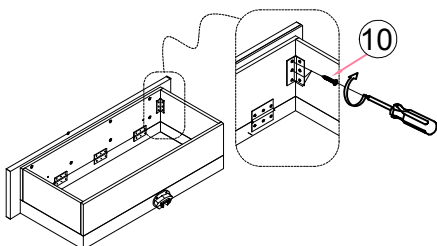

#### 1.5

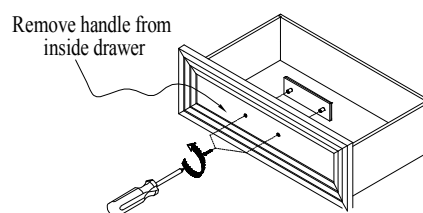

#### 1.6

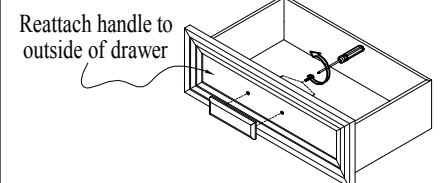


# ASSEMBLY INSTRUCTION FOR


## QUEEN PANEL STORAGE BED

B-11600-7-QH / B-11600-7-QFB / B-11600-7-QKSR


### STEP 4

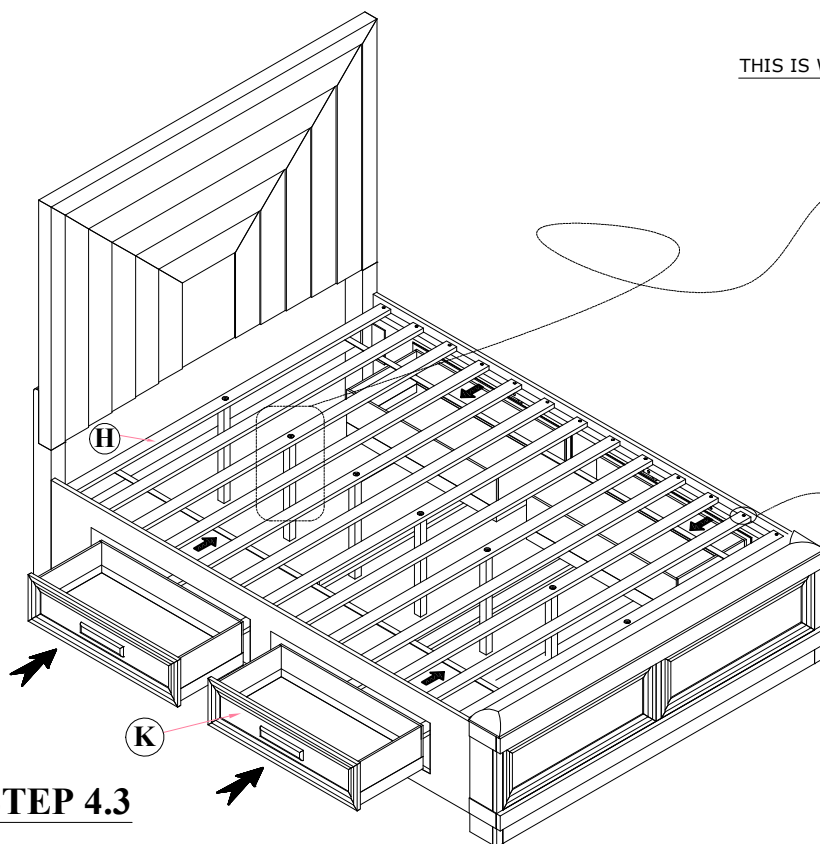

#### STEP 4.1

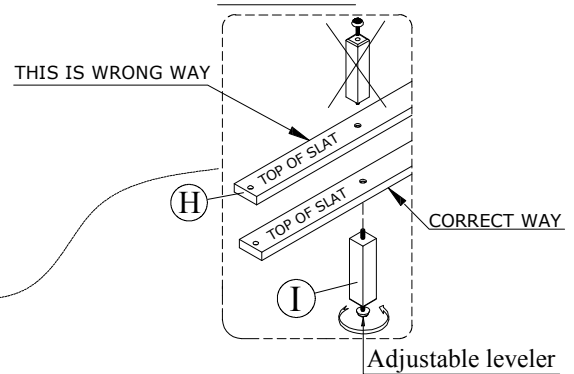

#### STEP 4.2

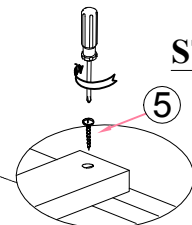

#### STEP 4.3

### COMPLETED

