

ASSEMBLY INSTRUCTION FOR





QUEEN PANEL BED WITH LED

B-9770-3-QHL/B-9770-3-QF/B-9770-3-QKR





Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PART LIST FOR HEADBOARD


No.	Part Description	Code.	Q'ty
A	 Headboard	B-9770-3-QHL	1
B	 Left Headboard Leg	PB-9770-3-HBLEG1	1
C	 Right Headboard Leg	PB-9770-3-HBLEG2	1
D	 Headboard Bottom Stretcher	PB-9770-3-QHSTR	1

HARDWARE LIST FOR HEADBOARD

No.	Hardware Description	Code.	Q'ty
1	 Flat washer 5/16"*Ø19	PB-9770-KBHW	8
2	 Spring washer 5/16"*Ø12		8
3	 Allen Bolt 5/16"*1-3/4"		8
4	 Allen key M4*2-5/16"		1





Headboard Hardware Packed with Headboard

HARDWARE LIST FOR FOOTBOARD

No.	Hardware Description	Code.	Q'ty
5	 Wood Screw #8*1"	PB-9770-KBHW	8


Footboard Hardware Packed with Footboard


HARDWARE LIST FOR SIDE RAILS


No.	Hardware Description	Code.	Q'ty
4	 Allen key M4*2-5/16"	PB-9770-KBHW	1
6	 Flat washer 5/16"*Ø19		12
7	 Spring washer 5/16"*Ø12		12
8	 Allen Bolt 5/16"*1"		12

Siderail Hardware Packed with Siderail

PART LIST FOR SIDE RAILS

No.	Part Description	Code.	Q'ty
H	 Side Rails	B-9770-3-QKR	2

 Only tighten all bolts when all bolts aligned with bolt inserts.

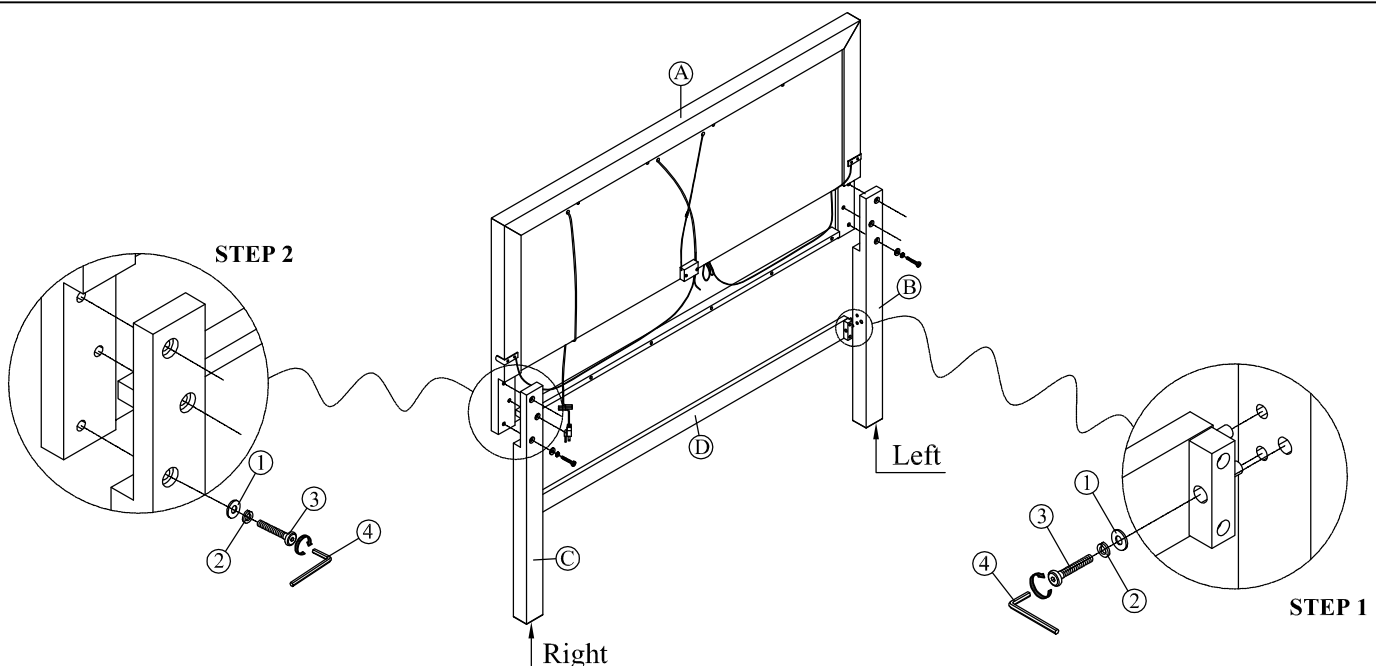

ASSEMBLY INSTRUCTION FOR

QUEEN PANEL BED WITH LED

B-9770-3-QHL/B-9770-3-QF/B-9770-3-QKR

