

ASSEMBLY INSTRUCTION FOR

9-DRAWER DRESSER & MIRROR

B-13030-3-DR/B-13030-3-MR

B-13030-5-DR/B-13030-5-MR

B-13030-7-DR/B-13030-7-MR

Cautions: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in parking.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.



PART LIST

No.	Part Description	Code.	Q'ty
A	Mirror		1
B	Mirror Support Slats	PB-13030-3-MRSLT PB-13030-5-MRSLT PB-13030-7-MRSLT	2

⚠ Only tighten all bolts when all bolts aligned with bolt inserts.

HARDWARE LIST

No.	Hardware Description	Code.	Q'ty
1	 Flat washer (Ø1/4" x3/4")	PB-13030-MRHW	8
2	 Spring washer (Ø1/4" x3/8")		8
3	 Bolt (Ø1/4" x1 1/2")		8
4	 Allen key (4 x 59mm)		1

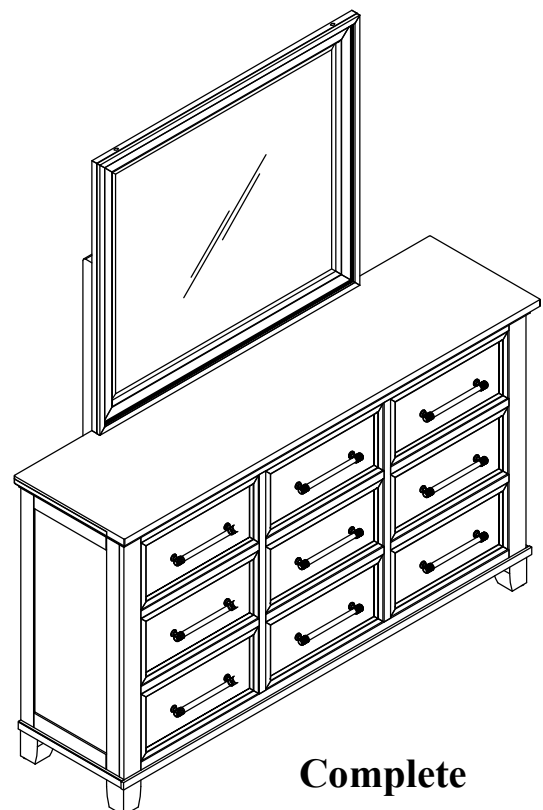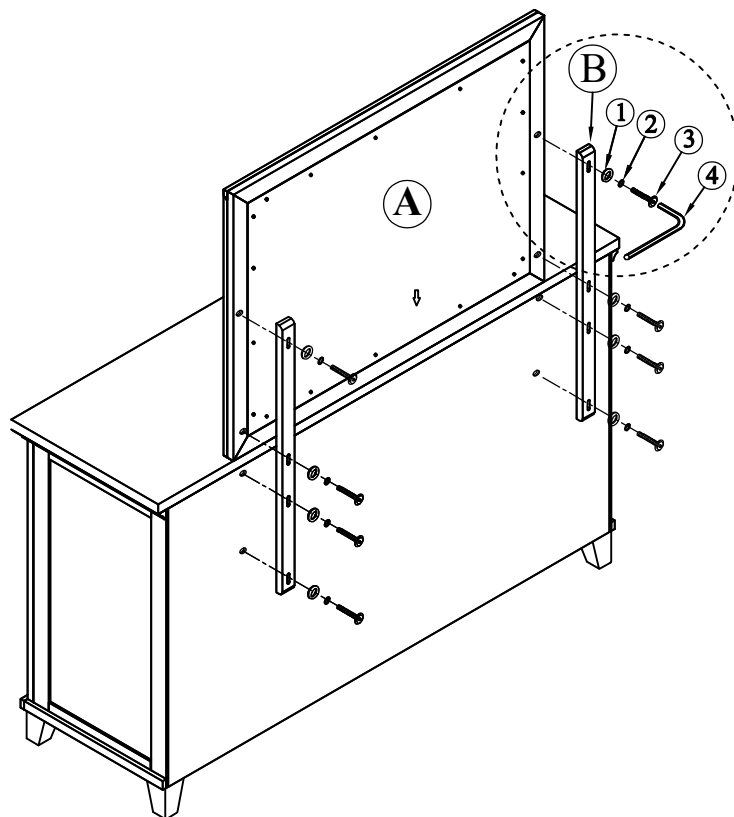

Complete