

ASSEMBLY INSTRUCTION FOR

2-DRAWER NIGHTSTAND WITH USB

B-10980-3-NS / B-10980-7-NS / B-10980-8-NS / B145N

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


| PART LIST | | | |
|-----------|------------------|--|------|
| | Part Description | Code. | Q'ty |
| A | Nightstand | B-10980-3-NS B-10980-7-NS B-10980-8-NS | 1 |
| B | Legs | PB-10980-3-CGLEG PB-10980-7-CGLEG PB-10980-8-CGLEG | 4 |

| HARDWARE LIST | | | |
|---------------|---------------------------|---------------|------|
| No. | Hardware Description | Code. | Q'ty |
| 1 | Flat washer 5/16" * Ø22 | PB-10980-CGHW | 4 |
| 2 | Spring washer 5/16" * Ø10 | | 4 |
| 3 | Allen Bolt 5/16"*1-1/2" | | 4 |
| 4 | Allen key M4*2-5/16" | | 1 |


Only tighten all bolts when all bolts aligned with bolt inserts.

NOTE: SCREW-DIIVER(NOT PROVIDED)


STEP 1

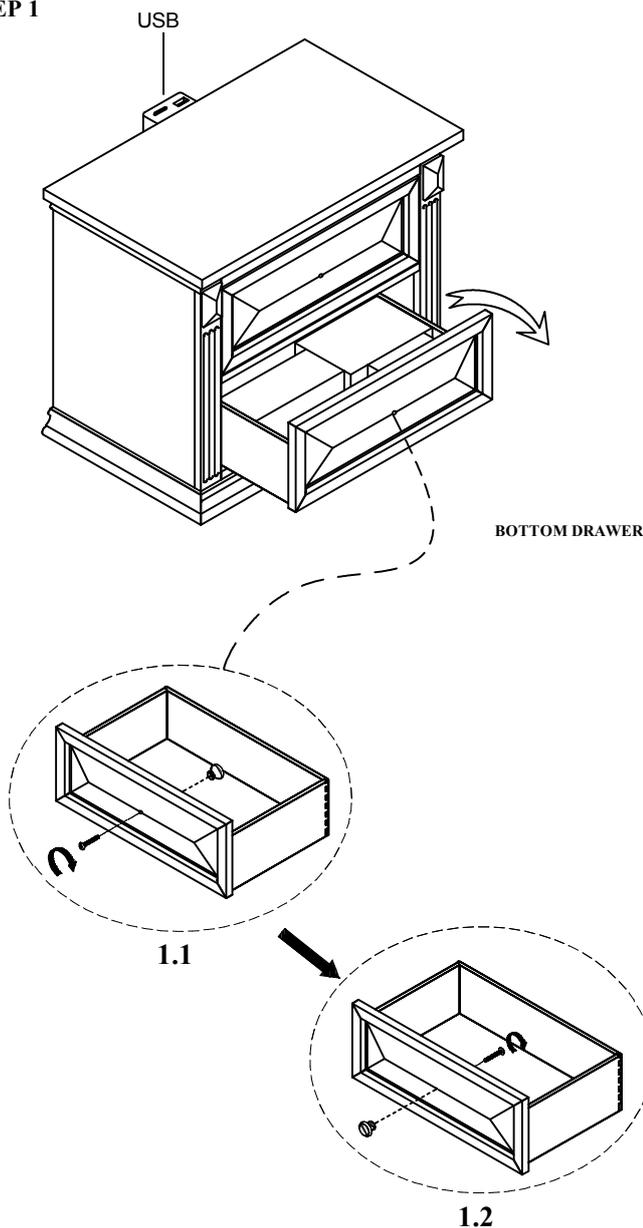

STEP 2

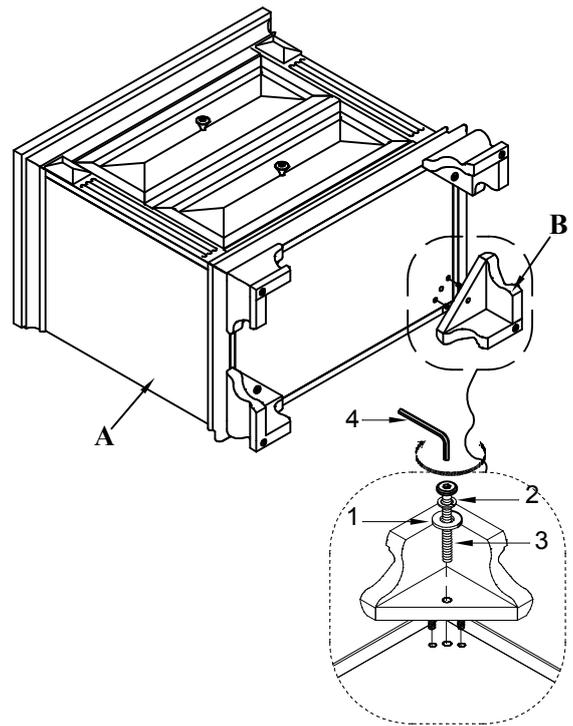

COMPLETED

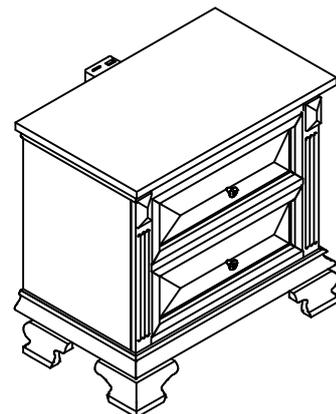

ASSEMBLY INSTRUCTION FOR

6-DRAWER CHEST

B-10980-3-CH / B-10980-7-CH / B-10980-8-CH / B145C

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


| PART LIST | | | |
|-----------|------------------|--|------|
| | Part Description | Code. | Q'ty |
| A | Chest | B-10980-3-CH B-10980-7-CH B-10980-8-CH | 1 |
| B | Legs | PB-10980-3-CGLEG PB-10980-7-CGLEG PB-10980-8-CGLEG | 4 |

| HARDWARE LIST | | | |
|---------------|-----------------------------|-------------------|------|
| No. | Hardware Description | Code. | Q'ty |
| 1 | Flat washer 5/16" * Ø22 | PB-10980- CGHW | 4 |
| 2 | Spring washer 5/16" * Ø10 | | 4 |
| 3 | Allen Bolt 5/16"*1-1/2" | | 4 |
| 4 | Allen key M4*2-5/16" | | 1 |
| 5 | Anti - Tip Kit- Metal (Set) | P-ATKNSF-M | 1 |


Only tighten all bolts when all bolts aligned with bolt inserts.

NOTE: SCREW-DIIVER(NOT PROVIDED)


STEP 1

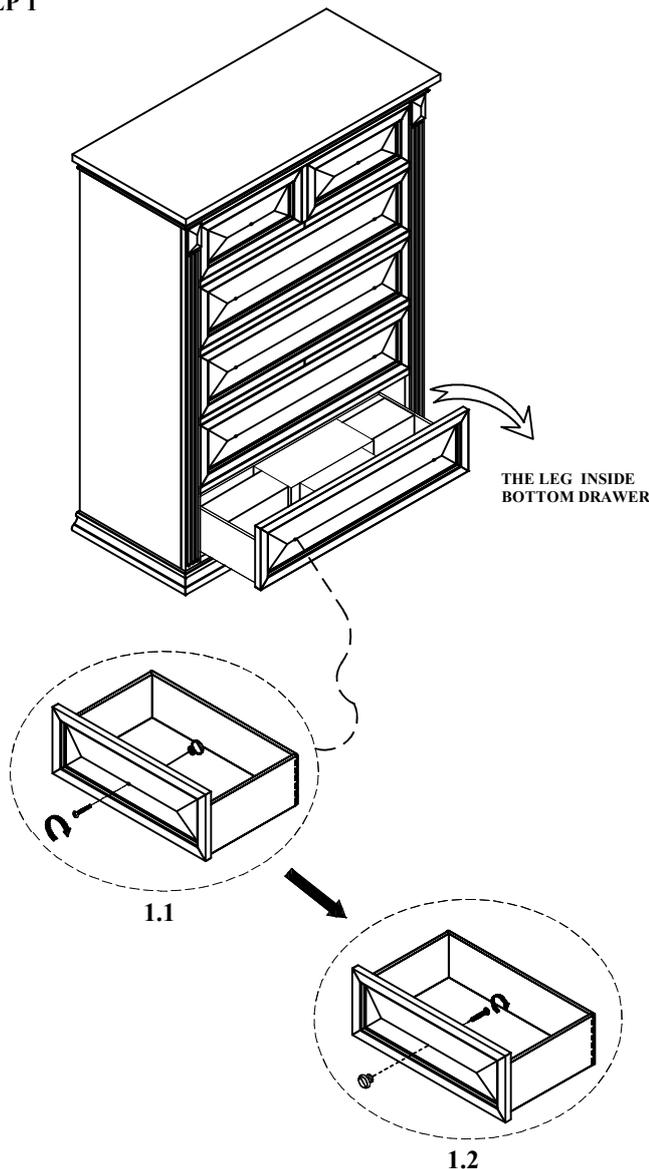

STEP 2

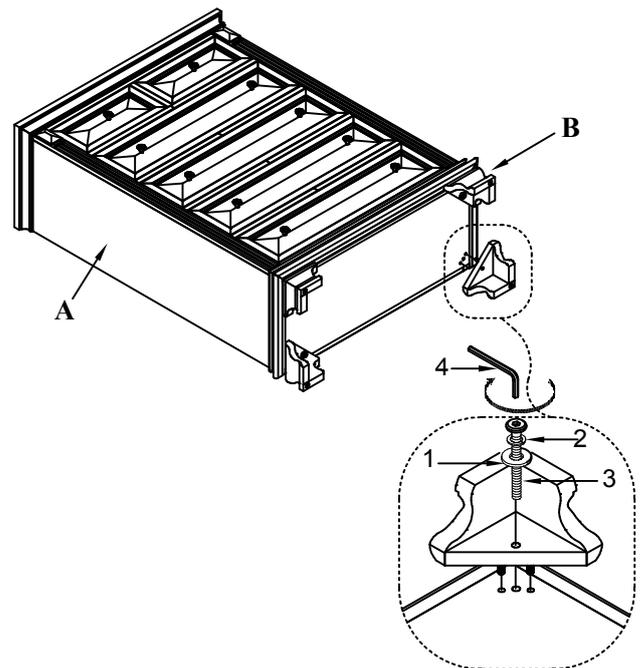

COMPLETED

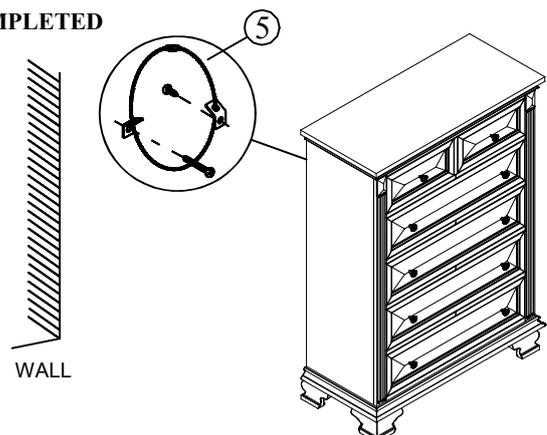

ASSEMBLY INSTRUCTION FOR

7-DRAWER DRESSER

B-10980-3-DR / B-10980-7-DR / B-10980-8-DR / B145D

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


| PART LIST | | | |
|-----------|--------------------|--|------|
| | Part Description | Code. | Q'ty |
| A | Dresser | B-10980-3-DR B-10980-7-DR B-10980-8-DR | 1 |
| B | Legs | PB-10980-3-CGLEG PB-10980-7-CGLEG PB-10980-8-CGLEG | 4 |
| C | Center support leg | PB-10980-3-DRSPL PB-10980-7-DRSPL PB-10980-8-DRSPL | 1 |

| HARDWARE LIST | | | |
|---------------|-----------------------------|-------------------|------|
| No. | Hardware Description | Code. | Q'ty |
| 1 | Flat washer 5/16" * Ø22 | PB-10980- CGHW | 4 |
| 2 | Spring washer 5/16 " * Ø10 | | 4 |
| 3 | Allen Bolt 5/16"*1-1/2 | | 4 |
| 4 | Allen key M4*2-5/16" | | 1 |
| 5 | Anti - Tip Kit- Metal (Set) | P-ATKNSF-M | 1 |


Only tighten all bolts when all bolts aligned with bolt inserts.

NOTE: SCREW-DIIVER(NOT PROVIDED)


STEP 1

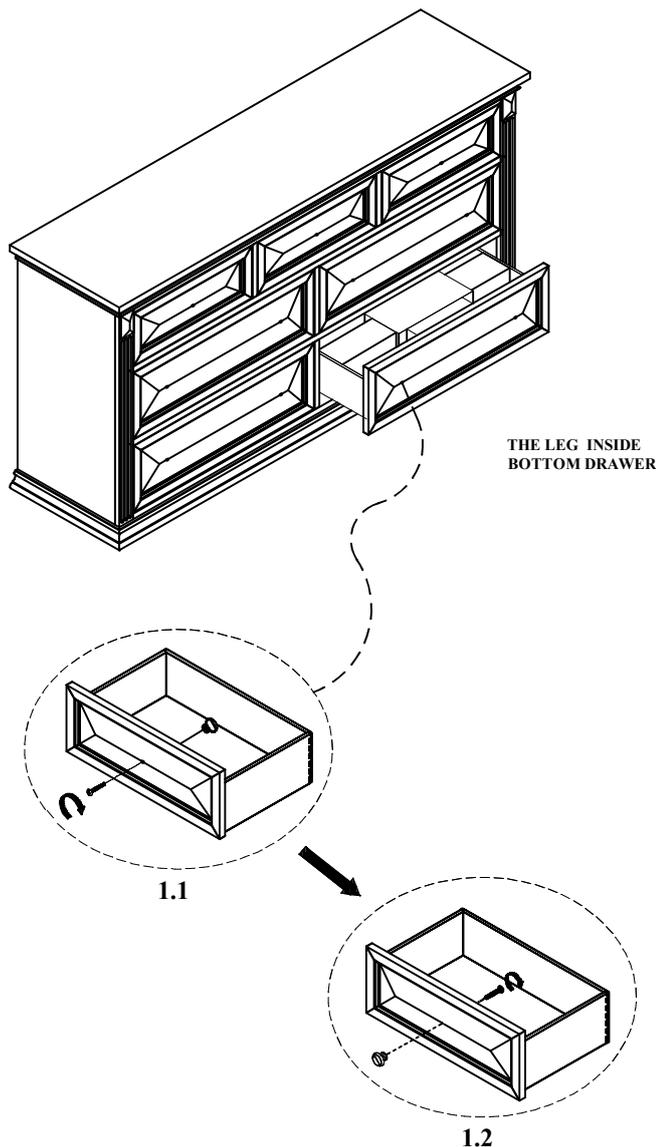

STEP 2

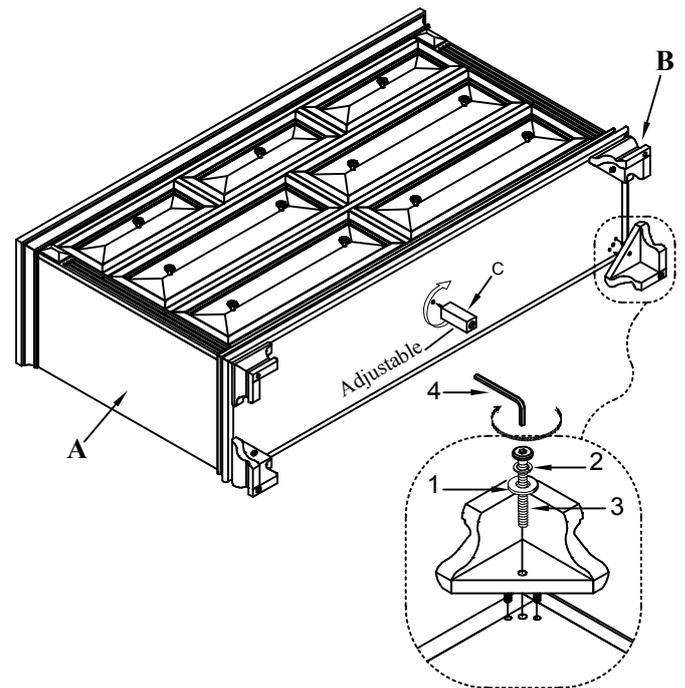

COMPLETED

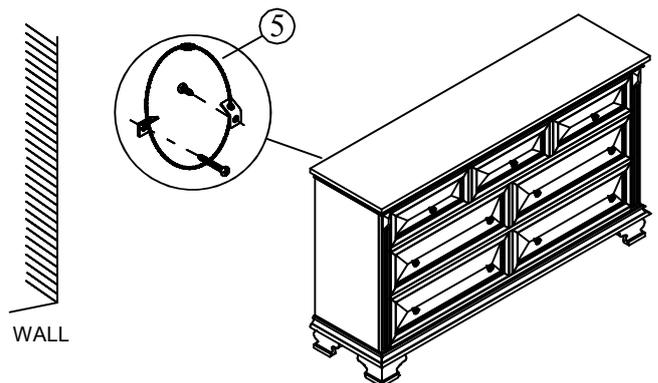

ASSEMBLY INSTRUCTION FOR

7-DRAWER DRESSER/ MIRROR

B-10980-3-DR / B-10980-3-MR

B-10980-7-DR/B-10980-7-MR / B-10980-8-DR/B-10980-8-MR

B145D / B145M


Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

| PART LIST | | | |
|-----------|----------------------|--|------|
| | Part Description | Code. | Q'ty |
| A | Mirror | B-10980-3-MR B-10980-7-MR B-10980-8-MR | 1 |
| B | Mirror Support Slats | PB-10980-3-MRSLT PB-10980-7-MRSLT PB-10980-8-MRSLT | 2 |

| HARDWARE LIST | | | |
|---------------|--|---------------|------|
| No. | Hardware Description | Code. | Q'ty |
| 1 |  Flat washer 1/4" * Ø19 | PB-10980-MRHW | 8 |
| 2 |  Spring washer 1/4" * Ø10 | | 8 |
| 3 |  Allen Bolt 1/4"*1-1/2" | | 8 |
| 4 |  Allen key M4*2-5/16" | | 1 |

 Only tighten all bolts when all bolts aligned with bolt inserts.

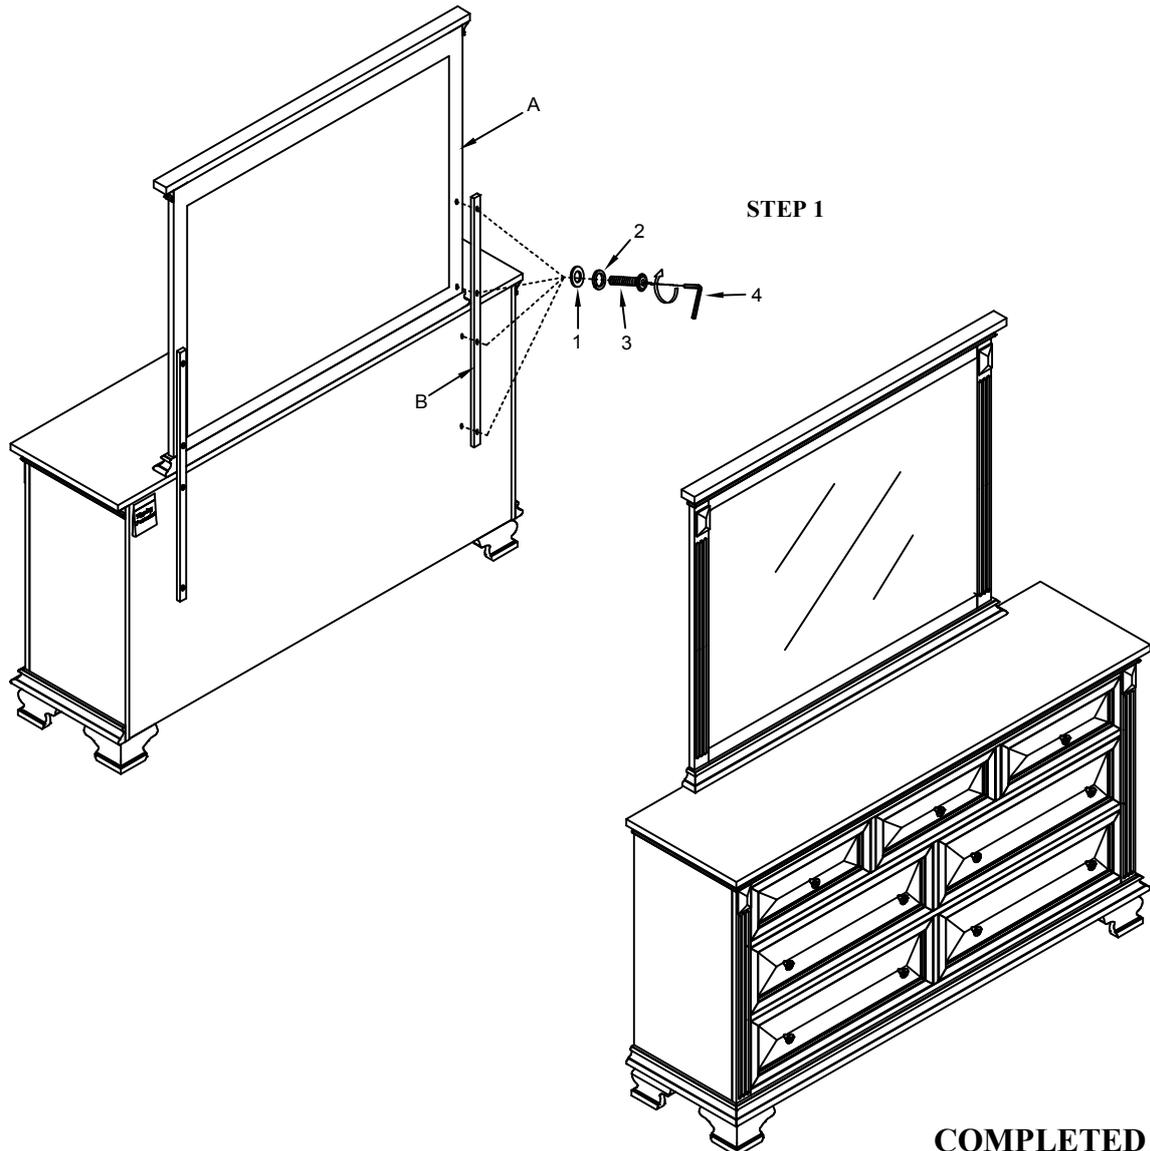

ASSEMBLY INSTRUCTION FOR

QUEEN PANEL BED

B-10980-3-QH / B-10980-3-QF / B-10980-3-QKR

B-10980-7-QH / B-10980-7-QF / B-10980-7-QKR

B-10980-8-QH / B-10980-8-QF / B-10980-8-QKR

B145H / B145F / B145R & B145KR / B-10980-3-QH

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

| PART LIST FOR HEADBOARD | | | |
|-------------------------|----------------------------|--|------|
| No. | Part Description | Code. | Q'ty |
| A | Headboard | B-10980-3-QH | 1 |
| | | B-10980-7-QH | |
| | | B-10980-8-QH | |
| B | Left Headboard Leg | PB-10980-3-HBLEG1 | 1 |
| | | PB-10980-7-HBLEG1 | |
| | | PB-10980-8-HBLEG1 | |
| C | Right Headboard Leg | PB-10980-3-HBLEG2 | 1 |
| | | PB-10980-7-HBLEG2 | |
| | | PB-10980-8-HBLEG2 | |
| D | Headboard Bottom Stretcher | PB-10980-3-QHSTR PB-10980-7-QHSTR PB-10980-8-QHSTR | 1 |

| PART LIST FOR FOOTBOARD | | | |
|-------------------------|-------------------------------|-------------------|------|
| No. | Part Description | Code. | Q'ty |
| E | Footboard | B-10980-3-QF | 1 |
| | | B-10980-7-QF | |
| | | B-10980-8-QF | |
| F | Roll Slat | PB-10980-3-QSBSLT | 4 |
| | | PB-10980-7-QSBSLT | |
| | | PB-10980-8-QSBSLT | |
| G | Slat Support Leg with Leveler | PB-10980-3-BDSPL | 4 |
| | | PB-10980-7-BDSPL | |
| | | PB-10980-8-BDSPL | |
| H | Side Rails | B-10980-QKR | 2 |

⚠ Only tighten all bolts when all bolts aligned with bolt inserts.

| HARDWARE LIST | | | |
|---------------|-------------------------|---------------|------|
| No. | Hardware Description | Code. | Q'ty |
| 1 | Flat washer 5/16"*Ø22 | PB-10980-KBHW | 8 |
| 2 | Spring washer 5/16" Ø10 | | 8 |
| 3 | Allen Bolt 5/16"*1-1/4" | | 8 |
| 4 | Allen key M4*2-5/16" | | 1 |



Headboard Hardware Packed with Headboard

| No. | Hardware Description | Code. | Q'ty |
|-----|----------------------|---------------|------|
| 10 | Wood Screw 1" | PB-10980-KBHW | 8 |

Footboard Hardware Packed with Footboard

| HARDWARE LIST | | | |
|---------------|--------------------------|---------------|------|
| No. | Hardware Description | Code. | Q'ty |
| 5 | Washer (Ø5/16") | PB-10980-KBHW | 8 |
| 6 | Hex Nut (Ø5/16") | | 8 |
| 7 | Threaded Bolt (Ø5/16*3") | | 8 |
| 8 | Spring Washer (Ø5/16") | | 8 |
| 9 | Allen key M4*2-5/16" | | 1 |

PACKED WITH SIDERAILS

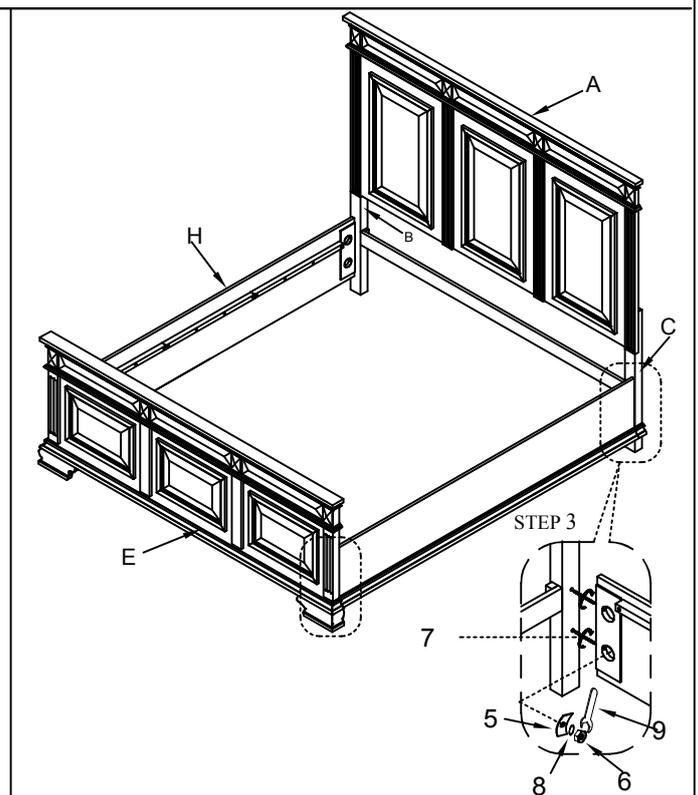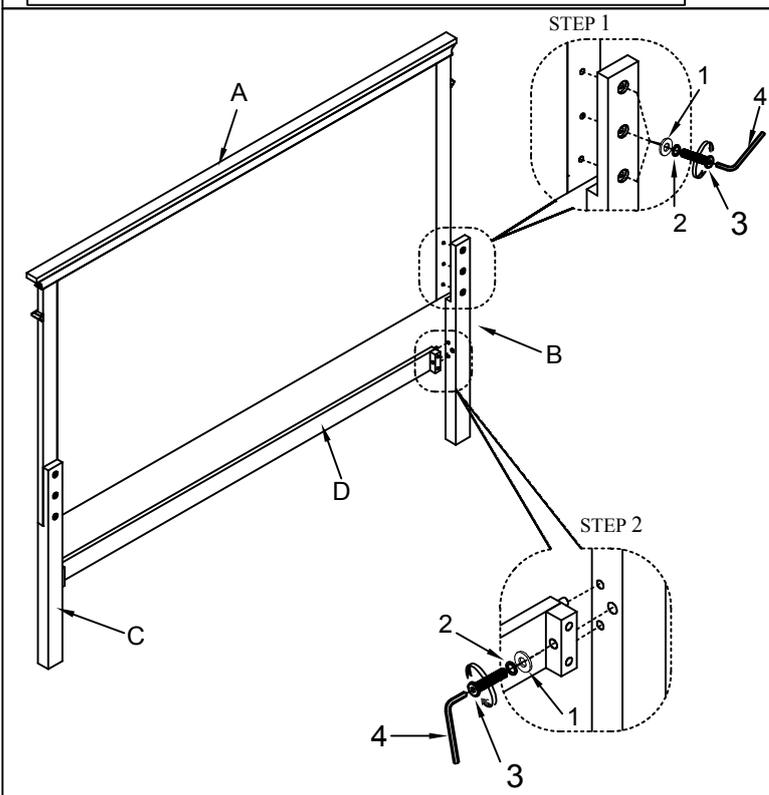

ASSEMBLY INSTRUCTION FOR

QUEEN PANEL BED

B-10980-3-QH / B-10980-3-QF / B-10980-3-QKR

B-10980-7-QH / B-10980-7-QF / B-10980-7-QKR

B-10980-8-QH / B-10980-8-QF / B-10980-8-QKR



B145H / B145F / B145R & B145KR / B-10980-3-QH

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

 Only tighten all bolts when all bolts aligned with bolt inserts.

Side Rail Hardware packed with Side Rail

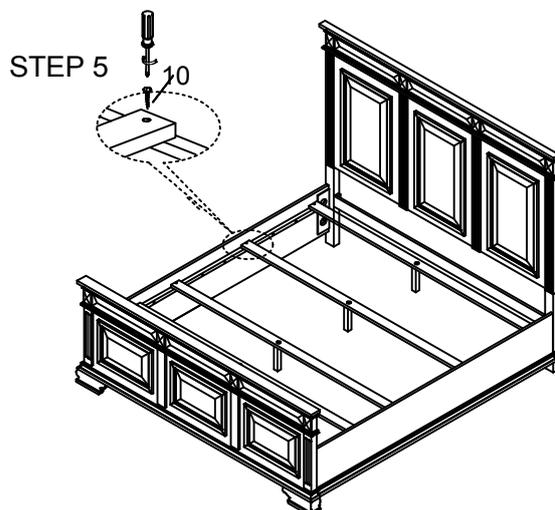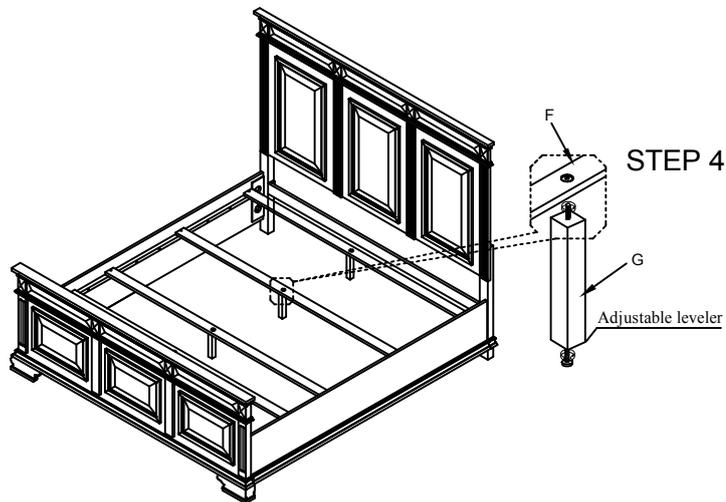

COMPLETED

MADE IN VIETNAM

ASSEMBLY INSTRUCTION FOR

KING PANEL BED

B-10980-3-KH / B-10980-3-KF / B-10980-3-QKR

B-10980-7-KH / B-10980-7-KF / B-10980-7-QKR

B-10980-8-KH / B-10980-8-KF / B-10980-8-QKR

B145KH / B145KF / B145R & B145KR

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

| PART LIST FOR HEADBOARD | | | |
|-------------------------|----------------------------|---|------|
| No. | Part Description | Code. | Q'ty |
| A | Headboard | B-10980-3-KH B-10980-7-KH B-10980-8-KH | 1 |
| B | Left Headboard Leg | PB-10980-3-HBLEG1 PB-10980-7-HBLEG1 PB-10980-8-HBLEG1 | 1 |
| C | Right Headboard Leg | PB-10980-3-HBLEG2 PB-10980-7-HBLEG2 PB-10980-8-HBLEG2 | 1 |
| D | Headboard Bottom Stretcher | PB-10980-3-KHSTR PB-10980-7-KHSTR PB-10980-8-KHSTR | 1 |

| PART LIST FOR FOOTBOARD | | | |
|-------------------------|-------------------------------|---|------|
| No. | Part Description | Code. | Q'ty |
| E | Footboard | B-10980-3-KF B-10980-7-KF B-10980-8-KF | 1 |
| F | Roll Slat | PB-10980-3-KSBSLT PB-10980-7-KSBSLT PB-10980-8-KSBSLT | 4 |
| G | Slat Support Leg with Leveler | PB-10980-3-BDSPL PB-10980-7-BDSPL PB-10980-8-BDSPL | 8 |
| H | Side Rails | B-10980-QKR | 2 |

⚠ Only tighten all bolts when all bolts aligned with bolt inserts.

| HARDWARE LIST | | | |
|---------------|---|---------------|------|
| No. | Hardware Description | Code. | Q'ty |
| 1 |  Flat washer 5/16" * Ø22 | PB-10980-KBHW | 8 |
| 2 |  Spring washer 5/16" * Ø10 | | 8 |
| 3 |  Allen Bolt 5/16"*1-1/4" | | 8 |
| 4 |  Allen key M4*2-5/16" | | 1 |



Headboard Hardware Packed with Headboard

| No. | Hardware Description | Code. | Q'ty |
|-----|--|---------------|------|
| 10 |  Wood Screw 1" | PB-10980-KBHW | 8 |

Footboard Hardware Packed with Footboard

| HARDWARE LIST | | | |
|---------------|--|---------------|------|
| No. | Hardware Description | Code. | Q'ty |
| 5 |  Washer (Ø5/16") | PB-10980-KBHW | 8 |
| 6 |  Hex Nut (Ø5/16") | | 8 |
| 7 |  Threaded Bolt (Ø5/16*3") | | 8 |
| 8 |  Spring Washer (Ø5/16") | | 8 |
| 9 |  Allen key M4*2-5/16" | | 1 |

PACKED WITH SIDERAILS

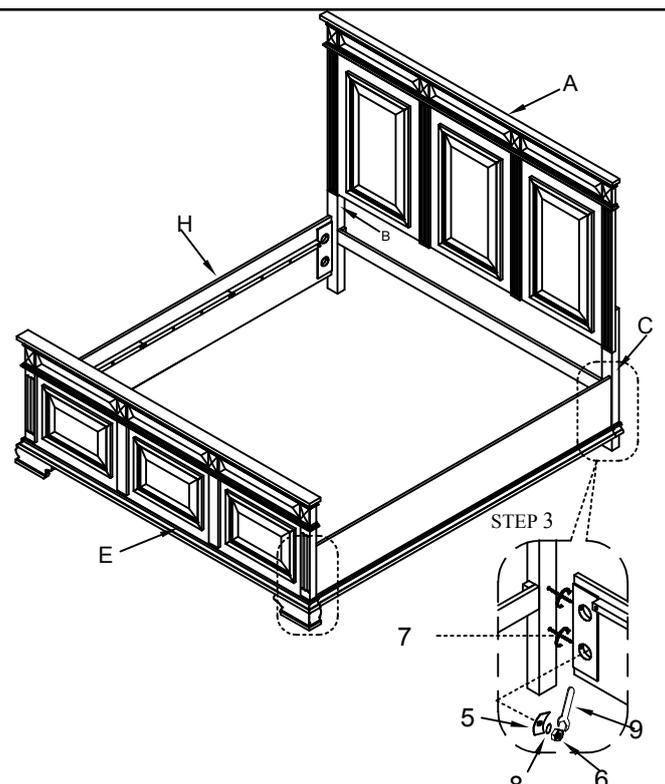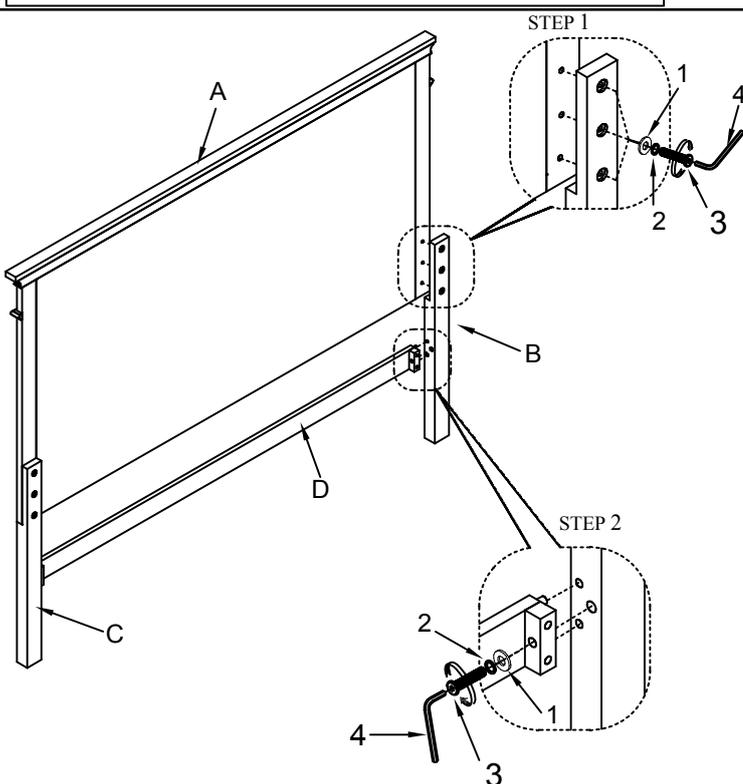

ASSEMBLY INSTRUCTION FOR

KING PANEL BED

B-10980-3-KH / B-10980-3-KF / B-10980-3-QKR

B-10980-7-KH / B-10980-7-KF / B-10980-7-QKR

B-10980-8-KH / B-10980-8-KF / B-10980-8-QKR



B145KH / B145KF / B145R & B145KR

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

⚠ Only tighten all bolts when all bolts aligned with bolt inserts.

Side Rail Hardware packed with Side Rail

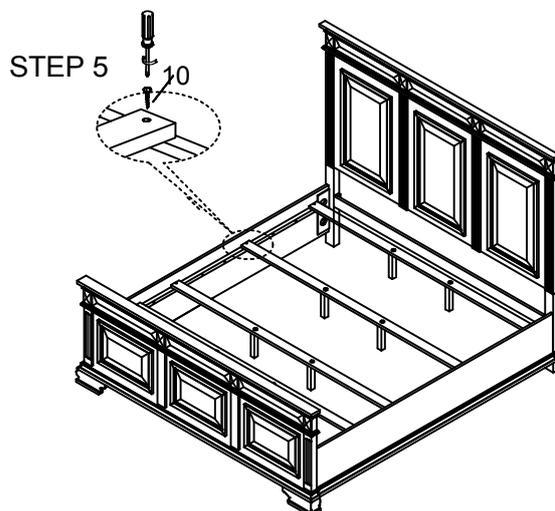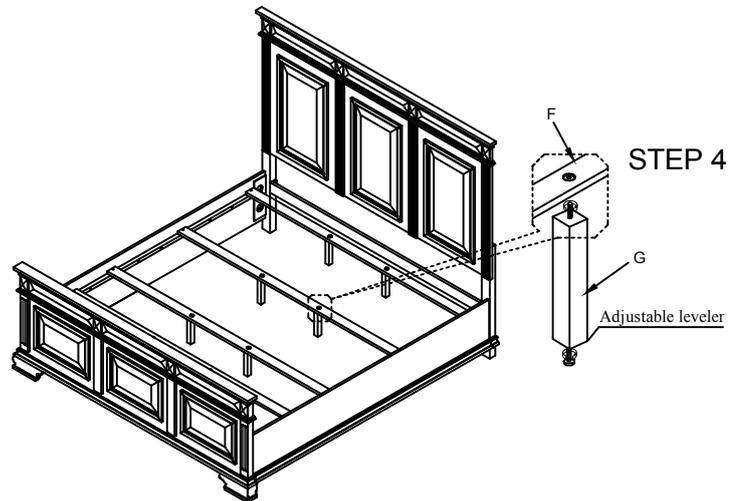

COMPLETED

MADE IN VIETNAM