


SAVE THESE INSTRUCTIONS



Ease  
**MASSAGE CHAIR**  
—— Operation Instructions ——

Thank you for purchasing this product. Please read this instruction manual carefully in order to know how to use this product correctly before operation. Please pay close attention to the important safety precautions outlined in this manual and keep it on hand for future reference.

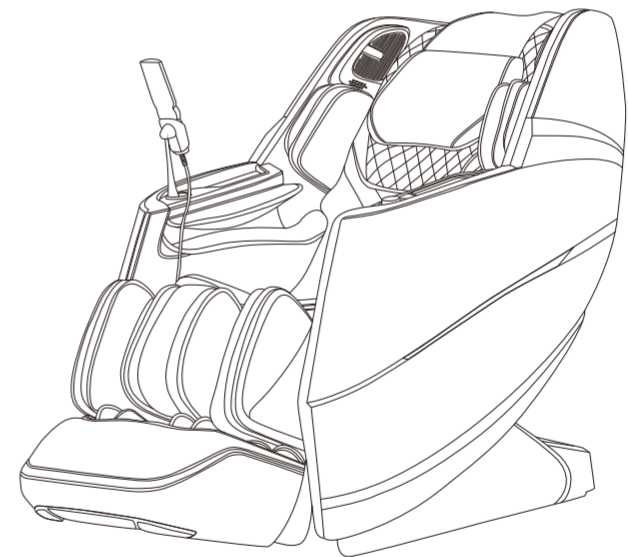

Note: Our company may update the product design and features without prior notice. If there are differences between the product in the market and the manual, it reflects a normal update. The actual product's functions and color will be as seen in person.

CONTENTS


Before use	
Safety precautions	02-05
Part Installation	06-07
Massage Chair Placement	08-09
Before use	10-11
Product structure	12-16
Instructions for Use	
Operation Instructions	17-39
End massage	39
Maintenance	
Cleaning and Maintenance	40
Important	
Troubleshooting	41
Product Specifications	42

## Safety Precautions (Must be observed)


- Please read all relevant instructions carefully before use.
- The notes marked here will help you to use the product safely and correctly.
- In order to clearly indicate the extent of potential harm and damage, precautions are divided into "Warning" and "Caution" that may be caused by incorrect use. Both of them are important for safety and must be followed.

 <b>Warning</b>	Indicates that serious injury or death may result from improper use.
 <b>Caution</b>	Indicates that misuse may cause minor injury or property damage.


- Please pay attention to the symbol before each safety item.


 <b>Forbidden</b>	Absolute prohibition
--	----------------------

### This product is not recommended for the following groups:


 <b>Forbidden</b>	<ul style="list-style-type: none"> <li>■ The device is not intended for use by persons (including children) with physical disabilities, sensory or neurological impairments or who lack experience and common sense, unless they are supervised and instructed in the use of the device by those responsible for their safety. Children must be supervised to ensure they do not use tools for play.</li> <li>■ Patients with osteoporosis.</li> <li>■ Patients with severe heart disease and wearing implantable medical devices such as pacemakers and defibrillators that are susceptible to electromagnetic waves.</li> <li>■ People who have a fever (above 38 degrees Celsius/100.4 degrees Fahrenheit).</li> <li>■ Women who are pregnant or women who have recently given birth</li> <li>■ People who follow medical advice and are prohibited from receiving massage due to thrombosis, aneurysm, severe varicose veins, or other circulatory diseases. Within two weeks after the appearance of blood clots, it is strictly prohibited to massage any form of body parts that have blood clots.</li> <li>■ Patients who are injured or have a skin disease.</li> <li>■ Unsupervised children under the age of 14.</li> <li>■ Those undergoing treatment, especially those who are not feeling well.</li> <li>■ People with spinal abnormalities or scoliosis</li> <li>■ People whose bodies are wet.</li> <li>■ This product has a hot surface. Persons insensitive to heat must pay attention when using this product.</li> </ul>
--	--


## Safety Precautions (Must be observed)


Important safety warnings	
 <b>Warnings</b>	<ul style="list-style-type: none"> <li>■ Small children should not be allowed near the item while its moving.</li> <li>■ Use a well-grounded and compatible power supply for this product.</li> <li>■ Remove the plug from its power source after use and before cleaning to avoid any damage to the product or personal physical injury.</li> <li>■ Do not use any parts or accessories which are not recommended.</li> <li>■ Do not use this product outdoors.</li> <li>■ Do not use near open flames such as stoves, and do not smoke while using.</li> <li>■ Do not use heating equipment such as electric blankets on this product.</li> <li>■ Do not sit on the back of the chair, leg massagers, shoulders, armrests, or stand on the seat.</li> <li>■ Please read the Operation Manual carefully before operation and use only as instructed.</li> <li>■ Never use this product for any other purpose not listed in the manual .</li> <li>■ 20 minutes of usage each time is recommended.</li> <li>■ Do not use this product if the cover or leather is broken or damaged.</li> <li>■ Do not drop anything into this product.</li> <li>■ Never fall asleep while using this product.</li> <li>■ Do not use this product if you are intoxicated.</li> <li>■ Do not use this product within one hour after a meal.</li> <li>■ Do not use this product with excessive force to avoid any injury.</li> <li>■ Do not use for purposes other than massage.</li> <li>■ If the supply cord is damaged, it must be replaced by a professional from the manufacturer, its maintenance department, or associated service technician.</li> </ul>

Operating environment	
 <b>Caution</b>	<ul style="list-style-type: none"> <li>■ Do not use the product in any area with increased humidity, such as the bathroom.</li> <li>■ Should the surrounding temperature change dramatically, stop use of the product.</li> <li>■ Do not use this product in any heavily-dusty or caustic environment.</li> <li>■ Do not use this product in a confined space or poorly ventilated area.</li> </ul>


## Safety Precautions (Must be observed)

Storage conditions	
 Caution	<p>■ Storage room temperature: 5 °C to 40 °C.</p> <p>■ Relative humidity (RH) between 20% and 80%; free of corrosive gases, and a well-ventilated room.</p>

Product service and maintenance	
 Caution	<p>■ This product should be maintained by the service center designated by the manufacturer only. No user should disassemble or maintain it without permission.</p> <p>■ Do not forget to turn off the main power switch after usage.</p> <p>■ Do not use this product if the power socket becomes loose.</p> <p>■ If this product will be left unused for a long period of time, it is necessary to roll up the power cord of this product and store this product in a dry and dust-free environment.</p> <p>■ Do not store this product at a high temperature or near open flame. Avoid prolonged exposure to direct sunshine.</p> <p>■ Please clean this product with a dry cloth. Never use thinner, benzene or alcohol.</p> <p>■ The mechanical components of this product are specially designed and manufactured, so no special maintenance is needed.</p> <p>■ Do not use a sharp object to stab at this product.</p> <p>■ Do not roll or pull this product on any uneven ground. Instead, it should be lifted before moving.</p> <p>■ Please use this product intermittently. Do not keep it working continuously for a long period of time.</p>

Solutions to ordinary malfunctions	
 Caution	<p>■ If the motor sounds during operation of this product, this is the normal operation sound.</p> <p>■ If the controller cannot work normally, check whether the plug and the power socket are connected reliably, and whether the power switch is turned on.</p> <p>■ If the rated working time is over, this product will automatically activate the power-off button; If this product keeps operating for a long period of time, the temperature protector will stop this product automatically. The product can be used again after half an hour.</p>



## Safety Precautions (Must be observed)

Safety precautions	
 Caution	<p>■ Check whether voltage is consistent with the specification of this product.</p> <p>■ Never insert or pull out the plug with a wet hand.</p> <p>■ Do not let water flow into this product to avoid electric shock or cause damage to this product.</p> <p>■ Do not pull the power cord when plugging or unplugging it. Rough handling is forbidden.</p> <p>■ Do not damage the wire or modify the circuit of this product.</p> <p>■ Do not clean live parts of this product with a wet cloth such as a power switch and plug.</p> <p>■ Be away from this product in case of power failure to avoid any injury if power is restored suddenly.</p> <p>■ Stop using this product at once while it works abnormal, and consult your local supplier.</p> <p>■ Stop using this product if you feel unwell, and consult your health care practitioner.</p>



## Part Installation

### Bracket Installation Instruction

1. After aligning the positioning pillar under the bracket with the positioning hole on the armrest support, buckle the bracket on the support (Figure 1).
2. Fix the bracket with three M4\*10 cross recessed pan-head self-tapping locking screws with washer (Figure 2).

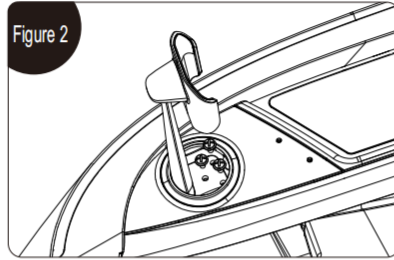
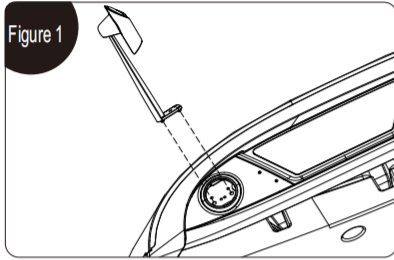


3. After the bracket is fixed, buckle the decorative cover of the support on it (Figure 3).
4. The bracket installation is finished (Figure 2).

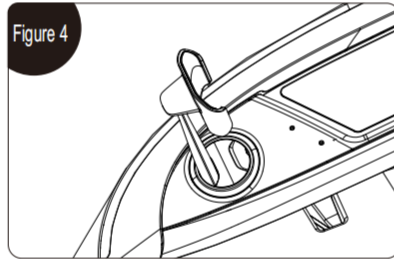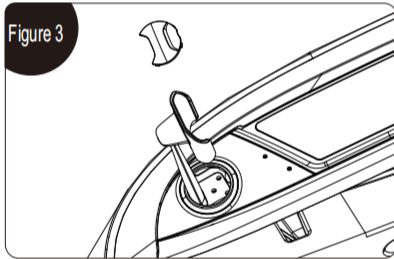



### Calf Installation Instruction

1. After connecting the air pipes on the calf and the massage chair with the wire harness, unfasten the fixed pipeline strap and insert the connecting part into the seat frame (Figure 1). Note: After plugging in the air pipe and wire harness, it needs to cut off the wire tie fixing the wire harness.
2. Place the round tubes on the left and right sides of the calf on the calf support (Figure 2).

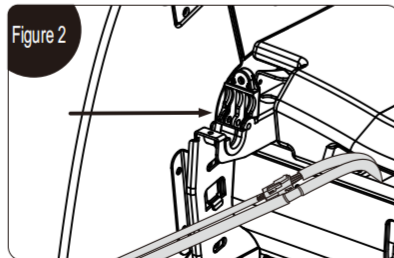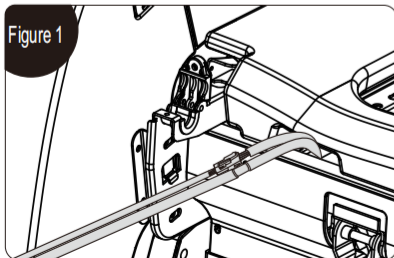

## Part Installation

3. Turn over the calf fixing cover to cover the round tubes on both sides of the calf (Figure 3).
4. Fasten the calf to the massage chair with two M5 screws (respectively on the left and right), and check whether there is any abnormality in the up and down movement, and the pipeline is overfolded, and then the calf installation is finished (Figure 4).

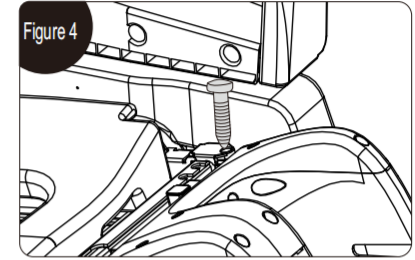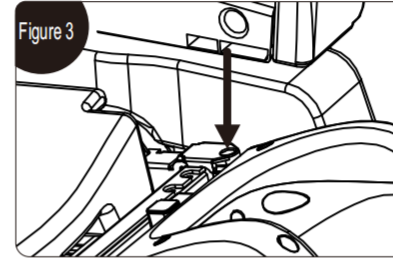




## Massage Chair Placement

### Installation placement

Make sure there is enough space for the massage chair to be able to tilt at least 5 cm.



Do not expose the massage chair directly to high temperature environment due to sunlight (such as in front of heating equipment), and place it to where can avoid high temperature and direct sunlight. It is recommended to lay a soft, protective mat underneath the chair for long-term use in a designated location. When laying the mat, the size of the mat should be enough to cover the complete underside of the chair. Keep the range where the machine touches the floor and the range where your feet touch the floor.

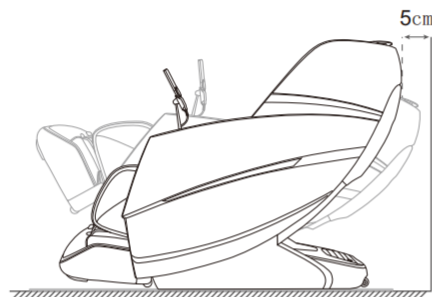


### Product lift instruction

A team lift is required to move the chair and avoid injury.



1. Please lift the massage chair to move it on hard surfaced floors to avoid damage to the floor.
2. To avoid damage to any type of floor as well as the chair's casters, it is recommended the chair be lifted when moved and not slid or pushed. When the chair is lifted and moved to the designated position, be careful to keep your hands and feet out of the way to avoid injury. Do not let go of the unit until the unit is completely flat and level on the ground. To prevent damage to the floor, it is recommended to place a mat or protective barrier between the unit and the floor.

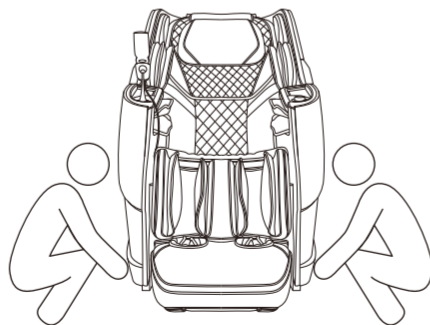

## Massage Chair Placement


### Move method

Use the rear casters to move the massage chair. Move the chair by tilting it down and backward about 45° as shown in the diagram.






NOTE: Excessive force to tilt will cause the chair to tip over completely and product damage.

1. Before moving, please shut down the machine properly to reset the whole machine, and then cut off the power.
2. Please keep the chair vacant when moving. (People, pets or clutter will not be able to stay on the chair.)
3. When moving, do not cross a drop barrier higher than 2mm or a gap greater than 5mm.
4. When using casters to move this product, single continuous movement is not supported; if the distance exceeds 50 meters, please make this product move slowly and evenly.

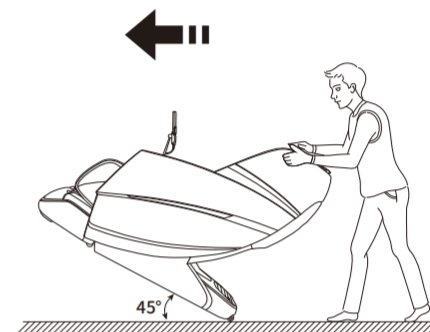
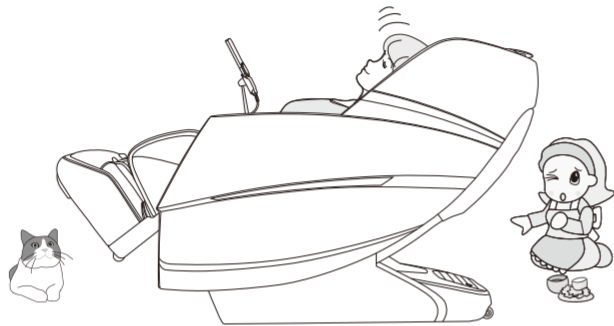



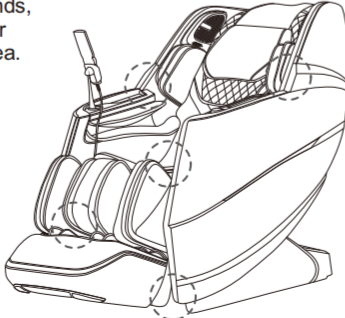
### How to disassemble and use headrest cushion and backrest cushion

Using a headrest cushion can reduce the intensity of kneading massage on the neck and shoulders, and you can decide whether to use a headrest cushion according to your needs (recommended to use a headrest cushion). The backrest cushion and the backrest are connected by a zipper (1), and the headrest pad and the backrest pad are connected by a Velcro (2).

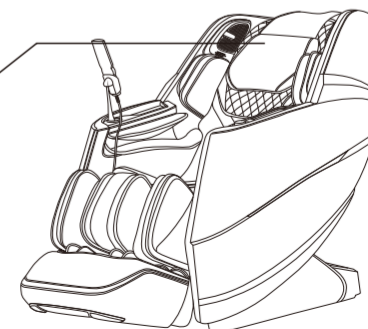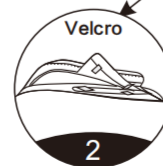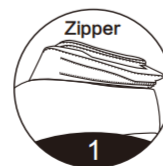
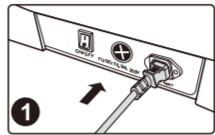
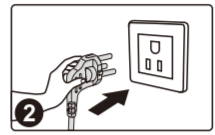
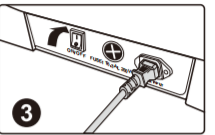



# Before use

Check around	
 Caution	<p>Make sure that there are no people, pets and other objects around the unit.</p> 


Make sure there are no foreign objects in the gaps of the machine	
 Caution	<p>Before massaging, make sure that no foreign objects are caught in the legs, feet, etc.</p> <p>Under no circumstances allow hands, feet, and head to penetrate into the area between the lower leg mechanism and main body, or the area between the armrest and the capsule.</p> <p>Under no circumstances should hands, feet, or head sink under the fabric or leather covering of the massage area.</p> 

# Before use

Turn on the power	
 Caution	 1 Plug in power cord  2 Schematic diagram of power on  3 Turn on the power switch ("I" position)
 Warnings	<ul style="list-style-type: none"> <li>■ Please check the power cord and plug for damage before use.</li> <li>■ Please supply power to this product in accordance with the working power requirements of this product's calibration.</li> <li>■ It is strictly forbidden to use a power supply other than the nominal power supply of this product.</li> <li>■ It is strictly forbidden to connect various power conversion devices without authorization to supply power to this product.</li> </ul>

# Product structure


## Description of components

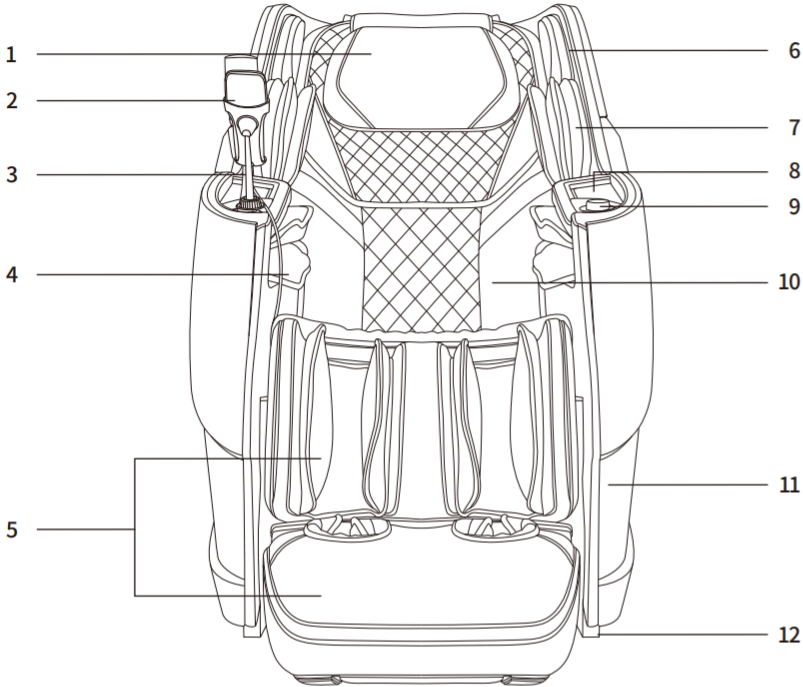

- 1.Head cushion
- 2.Remote control
- 3.Remote holder
- 4.Arm pressure
- 5.Leg massage mechanism
- 6.Flared hood
- 7.Shoulder pressure
- 8.Wireless charging
- 9.Armrest shortcut key
- 10.Back cushion
- 11.Armrest
- 12.Side cover

# Product structure

## Schematic view of functional distribution

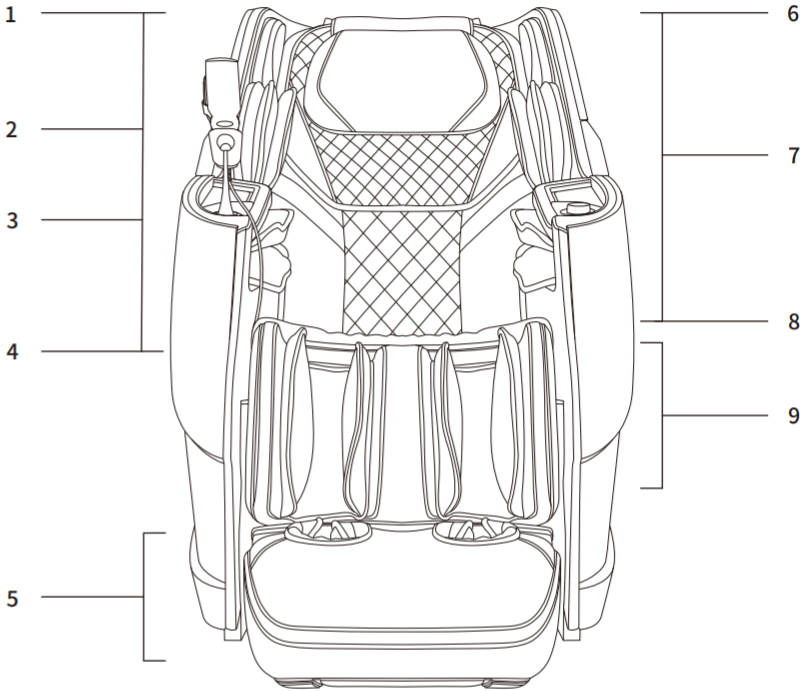


- |  |   |  |
|--|---|--|
| 1.Right side of head:<br>Negative oxygen ion<br>Voice play | 5.Sole:<br>Airbag massage<br>Sole roller<br>Electric telescopic<br>Automatic detection<br>of leg length | 7.Hand:<br>Airbag massage<br>Shortcut key<br>Wireless charging     |
| 2.Shoulder:<br>Airbag massage                              | 6.Both sides of head:<br>3D digital sound<br>Music playback   | 8.Neck to buttock<br>4D Mechanism massage                          |
| 3.Hand:<br>Airbag massage                                  |   | 9.Leg:<br>Bump massage<br>Airbag massage<br>Inner pressure rubbing |
| 4.Back/Waist<br>Heating function                           |   |  |



## Product structure

### Hand Control Display Screen

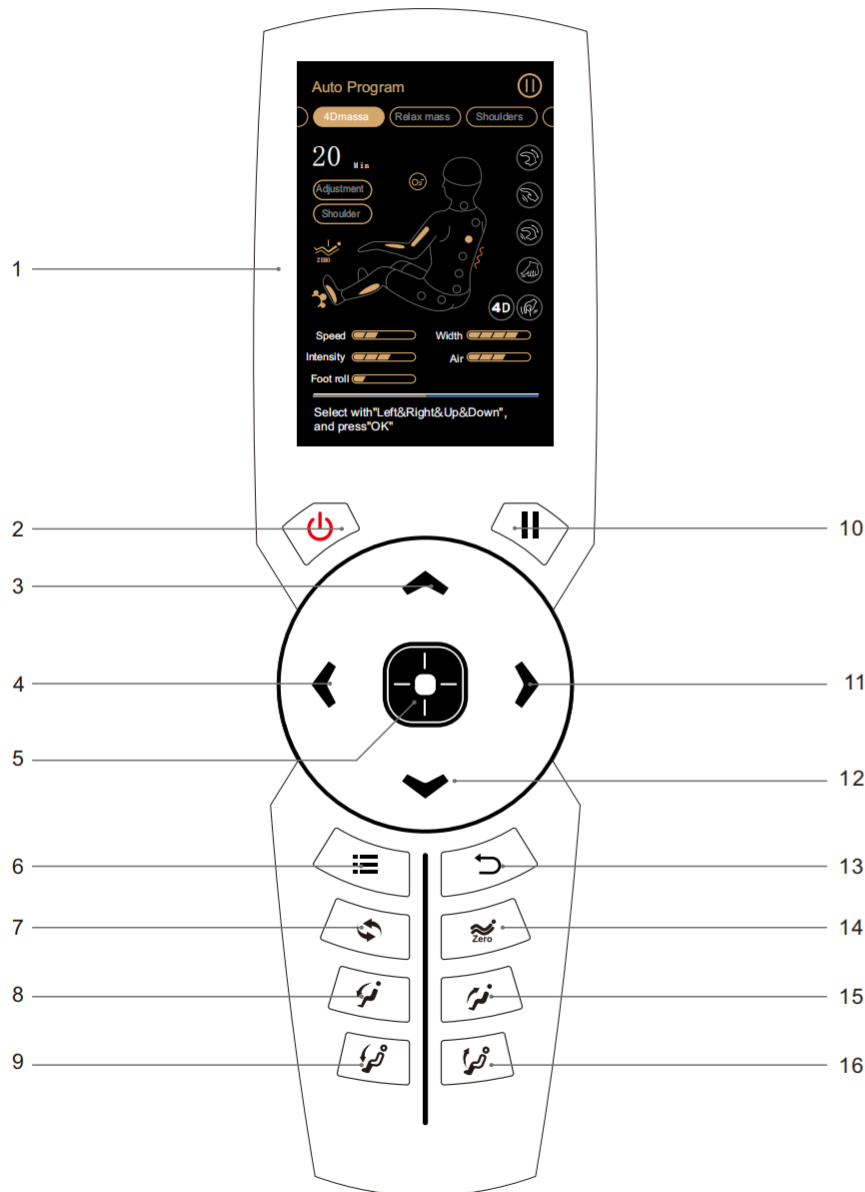


## Product structure

1. Display screen:
  - TFT color LCD (liquid crystal display), which can display the massage function in running state.
2. Standby key:
  - Turn on or off the massage chair.
- 3.Up key:
  - Navigation up key, select a function upward in the menu, or adjust the massage position upward.
4. Left key:
  - Navigation left key, select a function leftward or enter the left menu.
5. OK key:
  - Confirm the massage function selected.
6. Menu key:
  - Enter the main menu selection interface. For detailed function information, please see Pages 13-26 hereof.
7. Automatic key:
  - Enter the automatic function mode selection interface. For detailed function information, please see Pages 13-14 hereof.
- 8.Interconnected sit-up key:
  - According to the required massage angle, simultaneously adjust the backrest support and the calf support to the most comfortable interconnected sit-up massage position.
- 9.Calf support lowering key:
  - Lower the calf support to the most comfortable massage position according to user's personalized massage needs.
- 10.Pause key:
  - Pause all currently running massage functions, press this key again to resume all massage functions before the pause.
- 11.Right key:
  - Navigation right key, select a function rightward or enter the menu on the right.
12. Down key:
  - Navigation Down key, select a function downward in the menu, or adjust the massage position downward.
13. Back key:
  - Return to the function information interface in the current running state, or return to the previous interface.
- 14.Automatic lying key:
  - Each time press the key, it can switch to an automatic lying angle that simulates zero gravity. There are three angles in total, which can be switched over cyclically.
- 15.Interconnected lying key:
  - According to the required massage angle, simultaneously adjust the backrest support and the calf support for the interconnected lying to the most comfortable interconnected lying massage position.
- 16.Calf support up key:
  - Adjust the calf support to the most comfortable massage position to satisfy the user's personalized massage needs.

## Product structure

### Armrest Shortcut keys

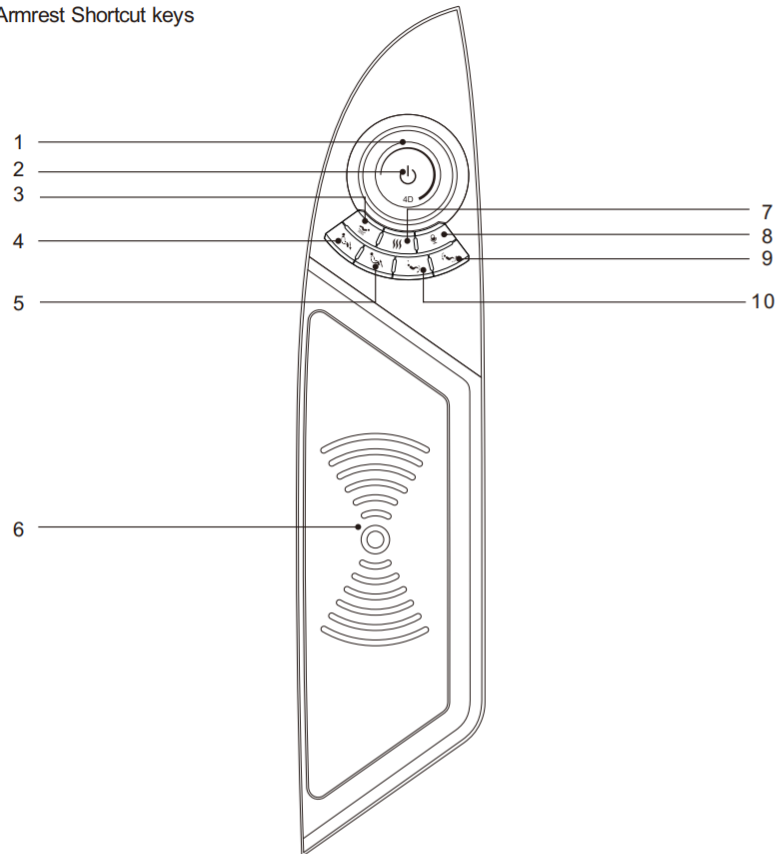

1. 4D strength knob key: Adjust the massage strength of the 4D manipulator.
2. Standby key: Turn on or off the massage chair.
3. Automatic lying key: Adjust the lying angle of the massage chair's simulative zero gravity.
4. Adjust the stretching of the calf support: Adjust the stretching of the small foot stand.
5. Adjust the shortening of the calf support: Adjust the shortening of the small foot stand.
6. Wireless charging position: Wireless charging for mobile phone.
7. Heating key: Turn on or off the heating function.
8. Voice control awake key: Short press the key to wake up the voice control function, long press it for 3 seconds to turn on and off the voice function.
9. Interconnected lying key: Adjust the angle of interconnected lying.
10. Interconnected sit-up key: Adjust the angle of interconnected sit-up.

## Operation Instructions

### I. Massage function control operation

#### 1. Standby

- (1). After the massage chair is powered on and off, it can be turned on by pressing the power key in the standby state (the LED light is off) or by intelligent voice control (the LED light is on), and the backrest support and calf support can be adjusted and woken up by voice control. The rest of the functions cannot be used.


#### 2. Start massage (standby key)

- 1). Press the standby key to start the massage chair and enter the preferred user option. There are two options respectively for men and women. The strength for men is strong, and for women is gentle.
- 2). Enter the automatic program screen, select any one of automatic programs, and lie down on the backrest. The calf support slightly lifts up and the unit will start to automatically detect the full body shape and shoulder position. User can also use the knob on the shortcut keys to rotate and adjust, select the corresponding programs up and down, and then press the standby key for confirmation.



#### (1). Shoulder position and body shape detection


- 1). After selecting a mode for men or women, the position of the backrest support and the calf support will be adjusted to the set angle.
- 2). After adjusting the angle, the massage chair will automatically detect the body shape and shoulder position (Note: If users want to skip the function for shoulder position and body shape detection, press "OK" to cancel this function and start the massage).

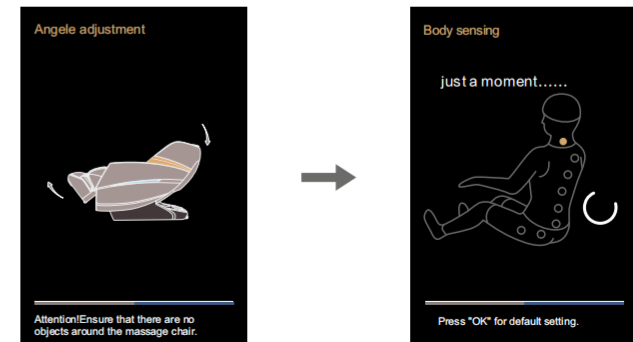

# Operation Instructions

## (2).Shoulder position adjustment

- 1).After detecting the shoulder position, the buzzer will buzz. If it fails to fit the actual shoulder position, press "Up" or "Down" to adjust it to an appropriate position. There is a total of 11 levels for adjusting the shoulder position. If there is no shoulder position adjustment within 10 seconds, it will automatically enter the massage function. If users directly press "OK" to enter the massage function immediately, and if the shoulder position is not detected, it will start massage according to the default shoulder position height.
- 2).Note: During the massage, press "Up" or "Down" to select the "Shoulder Position" key in the information interface, and then press "OK" key to enter the shoulder position sub-interface, and then press the "Up" or "Down" to adjust the shoulder position.

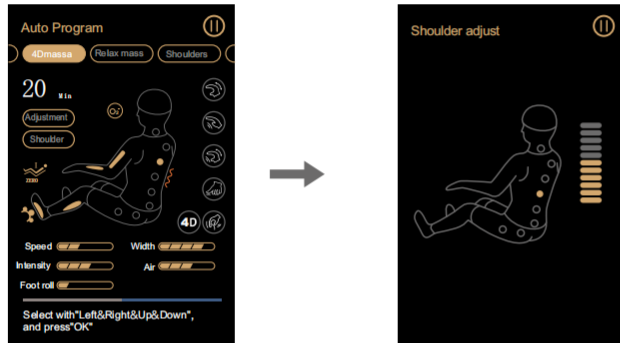

Key	Description
	Adjust the position of the massage ball upwards to reach a suitable shoulder position.
	Adjust the position of the massage ball downwards to reach a suitable shoulder position.


- 3).After entering the massage program, it shows the running state information interface. If users need to adjust the shoulder position, users can directly press the "Up Key" or "Down Key" to select the "Shoulder Position", and then press "OK" to enter the shoulder position sub-interface, then press "Up" or "Down" to adjust the height of the shoulder position. Press "Back" to return to the previous menu, or wait 10 seconds to automatically return to the information interface.



# Operation Instructions


## (3).Adjustment

- 1).After entering the massage program, if users need to adjust the massage position, press "Menu" on the hand controller to enter the main menu interface, and press "Up" or "Down" or "Left" or "Right" to select an adjustment icon, press "OK" to enter the adjustment function interface, and then press "Left" or "Right" to select the massage function that needs to be adjusted.
- 2).Under the running state information interface, users can also directly press "Up" or "Down" to select the adjustment key and press "OK" to enter the adjustment interface to select the massage function that needs to be adjusted.
- 3).Under the massage parts interface, if the massage area is fixed or partial, users can directly press "Up" or "Down" to adjust the manipulator up and down.
- 4).Under the manual program interface, if the massage position is not fixed or partial, users need to adjust the massage position to such state, and then press "Back" to select the adjustment function to enter the massage position interface, and then press "Up" or "Down" to move the manipulator up and down.

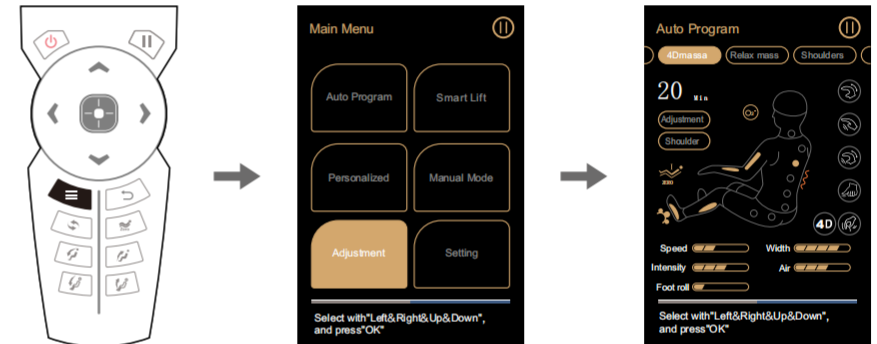

## 3.Pause Key


When the massage function is running, press "Pause" to temporarily stop all massage functions; press "Pause" again to resume the massage function. If the pause time exceeds 20 minutes, all massage functions will be automatically turned off.

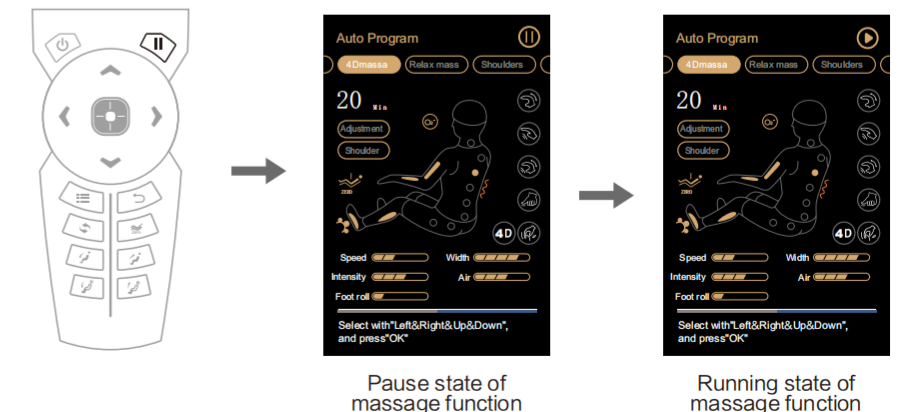

# Operation Instructions


## 4.Menu Key (main menu)

- (1).Press "Menu" to enter the main menu message function selection interface, including automatic program, smart lift, personalized program, manual program, adjustment, settings and other function interfaces.
- (2).Press "Up" or "Down" or "Left" or "Right" to select the message function, and press "OK" to enter the message function selected. Press "Back" to return to the running state information interface.

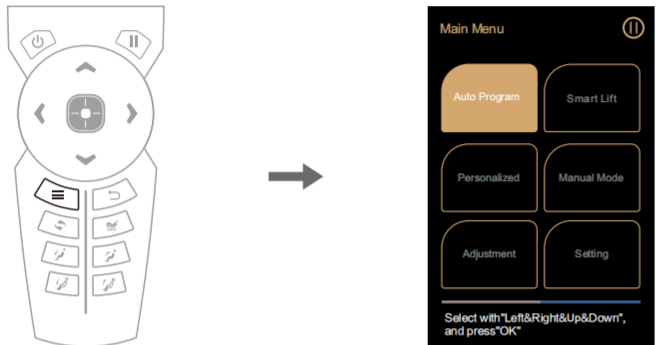

## 5. Automatic Program (Main Menu-Automatic Program, users can also directly press "Automatic" to enter the automatic program interface)

- (1).Press "Menu" to enter the main menu interface, press "Up" or "Down" or "Left" or "Right" to select the automatic program; the automatic program includes a total of seven kinds of automatic massage functions: 4D escort, leisure and health care, shoulder and neck care, Thai-style stretching, sedentariness stretching, relaxation, refreshing.
- (2).Press "Up" or "Down" to select the automatic massage function, and press "OK" to enter the automatic massage function selected. Press "Back" to return to the running state information interface.

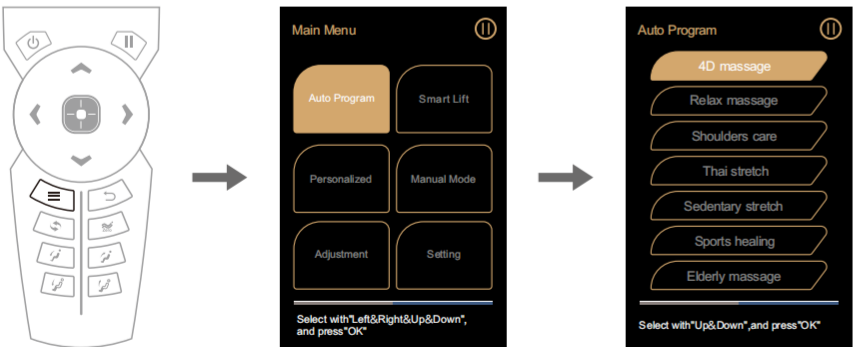


# Operation Instructions

Function	Description
4D massage	It adopts a variety of massage techniques designed for fatigued neck and shoulders, waist and hips. The strength level is moderate to relieve fatigue.
Relax massage	It is mainly for relaxation, and it adopts massage techniques such as tuina and kneading for full body massage, focusing on the waist and buttocks to help relax the body and mind.
Shoulders care	It adopts a variety of massage techniques such as kneading, tuina, and lifting to massage the neck and shoulders to help relieve fatigue.
Thai stretch	Inspired by Thai-style massage, it adopts 4D movement which is fitted with powerful airbags to stretch the body, massage the waist, so as to help relieve muscle fatigue and reinforce body vitality.
Sedentary stretch	It adopts a variety of massage techniques such as pushing up, kneading and patting to intensively massage the waist and buttocks to help relax the tense muscles, stretch body and mind.
Sports healing	It is a massage program designed for exercisers for exercise recovery, and it adopts massage techniques such as kneading and patting to massage the whole body, so as to help relieve muscle soreness after exercise and accelerate muscle recovery.
Elderly massage	It is a massage program designed for the elderly and the under-stressed group, and it mainly adopts massage techniques such as gentle kneading and pressing throughout the whole process, assisted by medium-speed swinging movements, and suitable for leisure time after tea and meals.

Note: The automatic function that has been selected and used will be displayed in the message function state bar, and users can directly press "Back" to view the running state.

## 6.Smart Lift (Main Menu-Smart Lift)

- (1).Press "Menu" to enter the main menu interface, press "Up" or "Down" or "Left" or "Right" to select the Smart Lift function which includes a total of three massage modes.
- (2).Press "Up" or "Down" to select the desired automatic massage function, and press "OK" to enter the massage function selected. Press "Back" to return to the running state information interface.

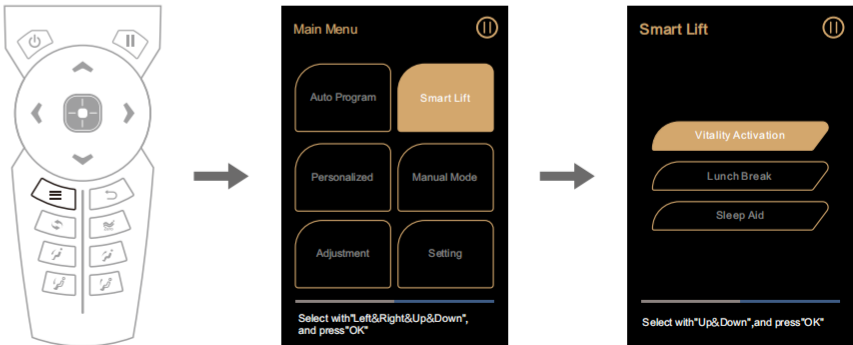




# Operation Instructions

Function	Description
Vitality Activation	This program is suitable for 7 a.m.-9 a.m., and it adopts a variety of massage techniques to massage the neck, assisted by other massage programs, so as to wake up the sleeping body and start a nice day.
Lunch Break	This program is suitable for 12 p.m.-3 p.m., and it adopts a variety of massage techniques to massage the waist and back, assisted by proper neck kneading, so as to help users relieve fatigue during halftime.
Sleep Aid	This program is suitable for relaxing before going to bed at night, and it adopts massage techniques with gentle, mild, moderate and slow speed to massage the whole body, assisted by the swinging motion of the massage chair, soften and relax the body, so as to help sleep at night.

## 7. Personalized Program (main menu-personalized)

- Press "Menu" to enter the main menu interface, press "Up" or "Down" and "Left" or "Right" to select personalized programs which include a total of four personalized massage modes (i.e. neck and shoulder massage, back massage, waist and hip massage, and legs and feet massage).
- Press "Up" or "Down" to select any personalized massage function, and press "OK" to enter the personalized massage function selected. Press "Back" to return to the running state information interface.

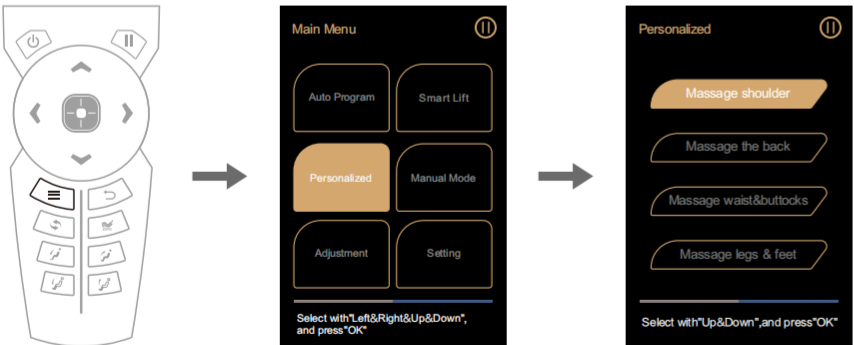


# Operation Instructions

Function	Description
Massage shoulder	This program adopts kneading and lifting massage techniques to intensively massage the acupoints on the neck and shoulders, helping relax the neck and shoulders.
Massage the back	This program adopts Tuina and acupressure massage techniques to intensively massage the back, helping relax the back.
Massage waist&buttocks	This program adopts kneading and Tuina massage techniques to intensively massage the waist and buttocks, helping to relieve muscle tension in the waist and buttocks.
Massage legs & feet	This program adopts kneading and scraping massage techniques, assisted by some calf stretching movements, helping relax the calf muscles.

## 8. Manual Program (main menu-manual program)

- Press "Menu" to enter the main menu interface, press "Up" or "Down" or "Left" or "Right" to select manual program, and then press "OK" to enter the manual program interface.
- Manual program includes massage technique, massage position, air pressure, and other massage functions.
- After entering the manual program interface, press "Left" or "Right" to switch over between left and right submenu options, then press "Up" or "Down" to select the desired massage function option, and then press "OK" for confirmation; Press "Back" to return to the running state information interface.

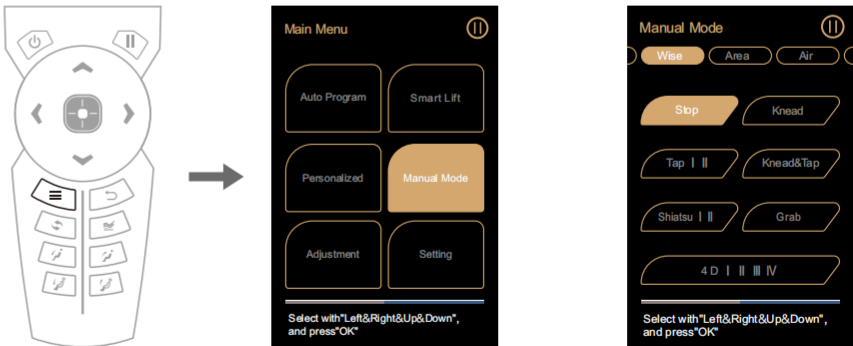




## Operation Instructions



### 1).Manual Program (main menu-massage technique)

- Manual massage techniques: There are a total of eleven manual massage techniques including Stop, Knead, Tap I, Tap II, Knead&Tap, Shiatsu I, Shiatsu II, Grab, 4D I, 4D II, 4D III, and 4D IV.
- After entering the massage technique interface, press "Up" or "Down" to select the required manual massage technique, and then press "OK" for confirmation; press "Back" to return to the running state information interface.

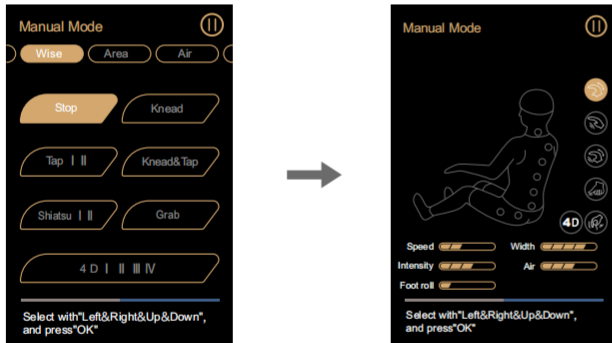


Massage Technique	Adjustable Options	
Knead	Speed	5 levels of speed for adjustment 5 levels of width for adjustment
Tap	Speed and width	
Knead&Tap	Speed	
Shiatsu	Speed and width	
Grab	Speed	
4D	Speed and width	

Note: Under the 4D massage mode, the width of 4DI and 4DII cannot be adjusted; the width of 4DIII and 4DIV can be adjusted.

## Operation Instructions

### 2).Manual Program (main menu-massage position)

- Manual massage positions include fixed point, partial, full back, upper back, lower back and other massage functions.
- After entering the manual program interface, press "Left" or "Right" to select the massage position function submenu. Then press "Up" or "Down" to select the desired massage position function option, and then press "OK" for confirmation; press "Back" to return to the running state information interface.

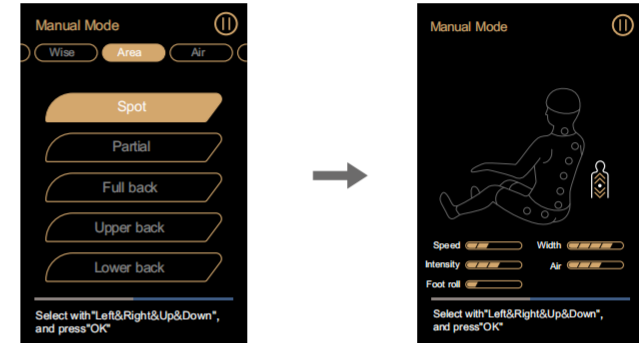


Function	Description	
Spot	Fixed point massage at fixed position	When choosing fixed-point and partial massage positions, adjust "Up and Down" of the "Massage Position" in the "Adjustment Function" to adjust the massage position.
Partial	Small-range partial round-trip massage	
Full back	Full back round-trip massage	
Upper back	Upper back round-trip massage	
Lower back	Lower back round-trip massage	

### 3).Manual Program (main menu-air pressure)

- Manual air pressure massage includes upper body air pressure and lower body air pressure massage functions.
- After entering the manual program interface, press "Left" or "Right" to select the air pressure massage function submenu. Press "Up" or "Down" to select the desired air massage function; then press "OK" to turn on or off the air massage function; Press "Back" to return to the running state information interface.


## Operation Instructions

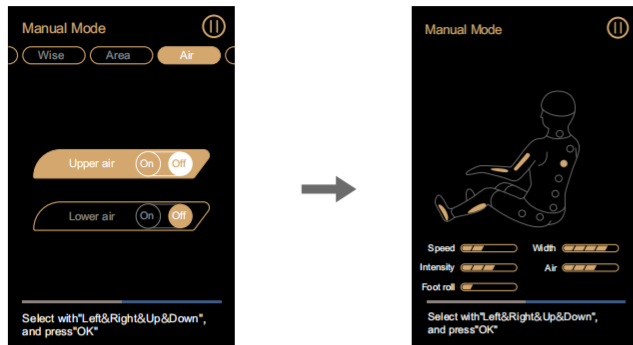

Function	Description
Upper air	Turn on or off the upper body air pressure function
Lower air	Turn on or off the lower body air pressure function

### 4).Manual Program (main menu-other)


- Other manual functions include waist heating, calf rubbing, sole roller, negative oxygen ion and so on.
- After entering the manual program interface, press "Left" or "Right" to select other function submenus. Then press "Up" or "Down" to select other required massage function options, and then press "OK" to turn on or off the massage function selected; press "Back" to return to the running state information interface.

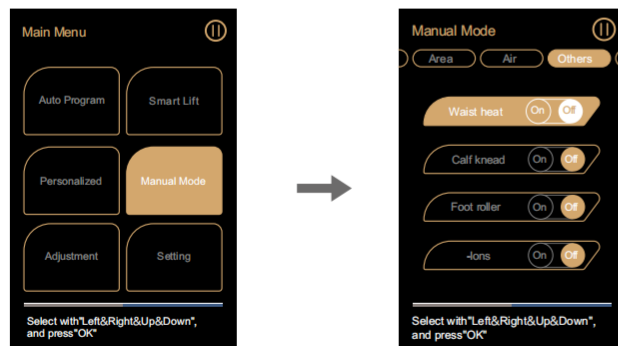

## Operation Instructions


### 5).Manual Program (other-waist heating)

- Heating function: The massage chair will become warm after 3 minutes of turning on the heating function.
- After entering the manual program interface, press "Left" or "Right" to select other function submenus. Then press "Up" or "Down" to select the waist heating function option, and then press "OK" to turn on or off the waist heating function; press "Back" to return to the running state information interface.

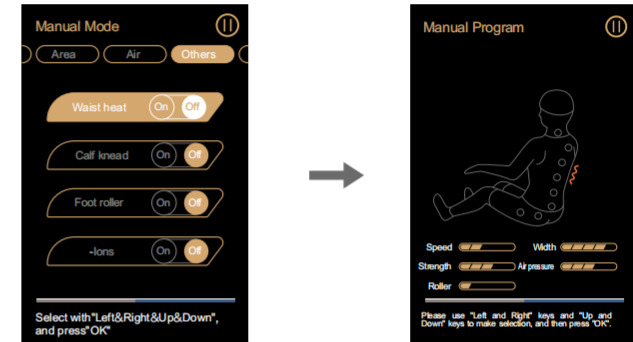

### 6).Manual Program (others-calf rubbing)


- Calf rubbing function can relieve the stiffness or tension of the calf muscles caused by long-time standing.
- After entering the manual program interface, press "Left" or "Right" to select other function submenus. Press "Up" or "Down" to select the calf rubbing function option, and then press "OK" to turn on or off the calf rubbing function; press "Back" to return to the running state information interface.

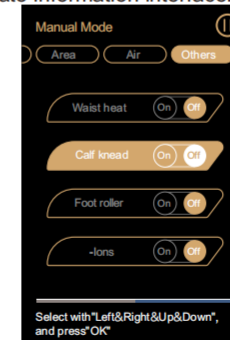

### 7).Manual Program (other-foot roller)


- Sole roller function includes five levels of speed adjustable.
- After entering the manual program interface, press "Left" or "Right" to select other function submenus. Press "Up" or "Down" to select the foot roller function option, and then press "OK" to turn on or off the foot roller function; press "Back" to return to the running state information interface.

## Operation Instructions

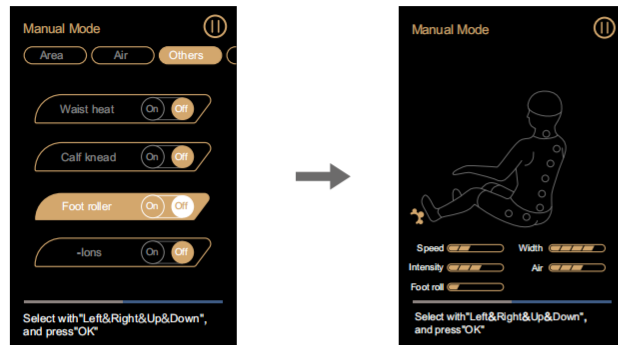

### 8). Manual Program (other-negative oxygen ion)


- Negative oxygen ion function: Turn on or off the negative oxygen ion.
- After entering the manual program interface, press "Left" or "Right" to select other function submenus. Then press "Up" or "Down" to select the negative oxygen ion function option, and then press "OK" to turn on or off the negative oxygen ion function; press "Back" to return to the running state information interface.

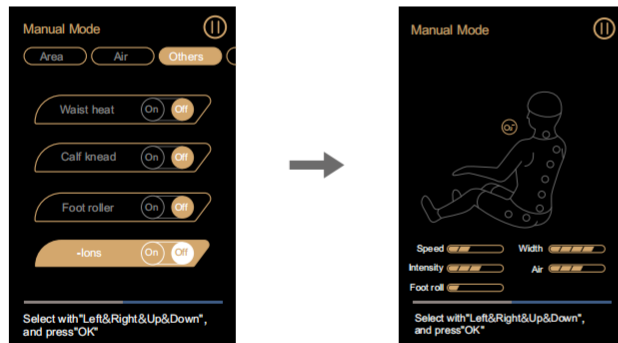

### 9. Adjustment function (main menu-adjustment)


- Press "Menu" to enter the main menu interface, press "Up" or "Down" or "Left" or "Right" to select the adjustment program, and then press "OK" to enter the adjustment program interface.
- Manual program includes adjustment functions such as massage parameters, massage position, and other.
- After entering the adjustment program interface, press "Left" or "Right" to switch over between the left and right submenu selections, then press "Up" or "Down" to select the massage function option that needs to be adjusted, and then press "OK" for confirmation; Press "Back" to return to the running state information interface.

## Operation Instructions

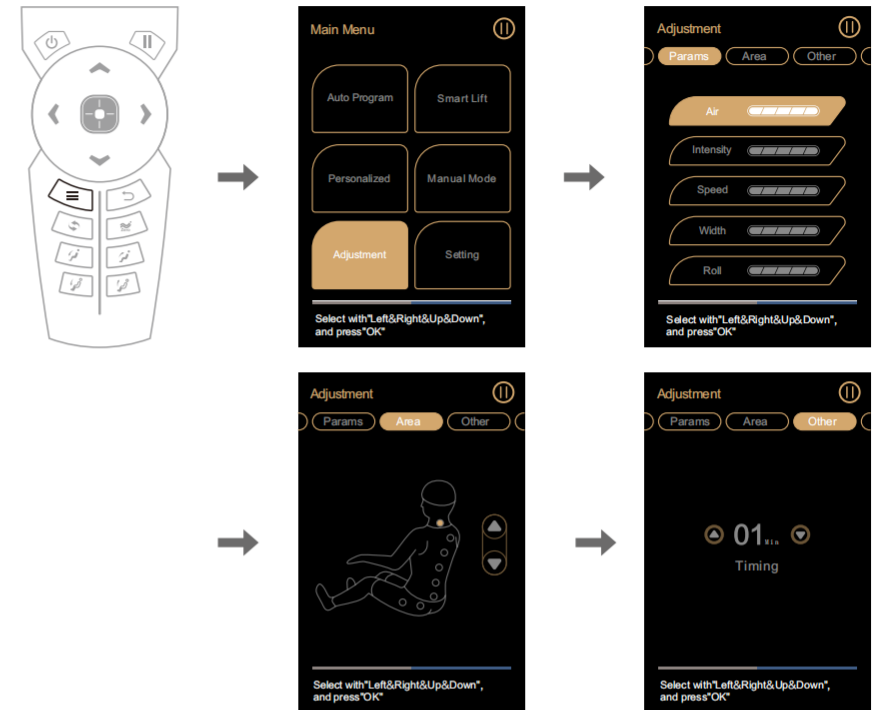

### 1). Adjustment Function (massage parameters)

- Adjustment function (massage parameters): The massage technique adjustment function includes the adjustment of functions such as air pressure, massage strength, massage speed, massage width, roller speed and so on.
- After entering the adjustment function interface, press "Left" or "Right" to select the massage parameter submenu. Press "Up" or "Down" to select the massage parameters that need to be adjusted, and then press "OK" to adjust the speed, width, and strength; press "Back" to return to the running state information interface.

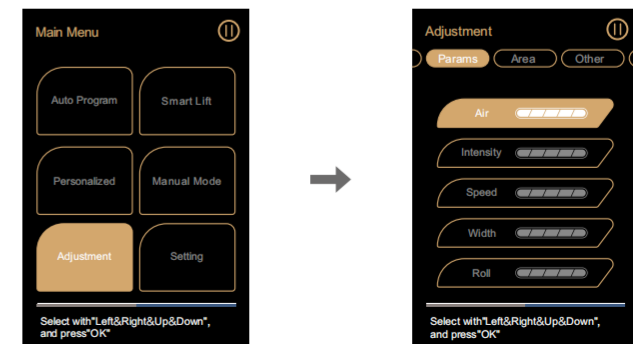


## Operation Instructions

- Massage strength: There are a total of 5 levels of the push-out strength of the massage movement.
- Massage speed: There are a total of 5 levels of speeds for adjusting the massage speed.
- Massage width: Under states of patting, acupressure and 4D modes, there are a total of 5 levels of widths for adjustment.
- Air pressure force: There are a total of 5 levels of adjustable strength..
- Roller speed: There are a total of 3 levels of adjustable speeds..
- The massage strength and air pressure force shall be adjusted to decrease progressively in proper order, and other options shall be adjusted to increase progressively in proper order.

### 2).Adjustment Function (massage position)

- Adjustment function (massage position): under the state of fixed point or partial massage area.
- After entering the adjustment function interface, press "Left" or "Right" to select the massage position submenu. Press and hold "Up", the massage manipulator moves up and stops when the "Up" key is released; press and hold "Down", the massage manipulator moves down, and stops when the "Down" key is released. Press "Back" to return to the running state information interface.

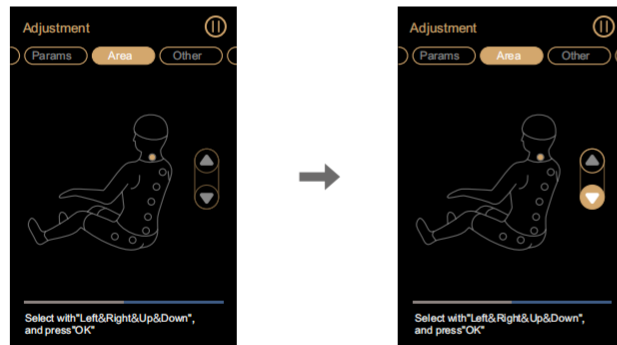

## Operation Instructions


### 3).Adjustment Function (other)

- Adjustment function (other), the time increases by 5 minutes each time users press "Adjustment" key. The minimum time is 5 minutes, and the maximum time is 40 minutes, and it circulates in order.
- After entering the adjustment function interface, press "Left" or "Right" to select other submenus. Press "Up" or "Down" to adjust the time; press "Back" to return to the running state information interface.



### 10.Setting (main menu-setting)

- Press "Menu" to enter the main menu interface, press "Up" or "Down" or "Left" or "Right" to select the setting program, and then press "OK" to enter the setting interface.
- Setting program includes setting functions such as language, lock screen, automatic heating, volume, Bluetooth, intelligent voice control, device information and so on.
- After entering the adjustment program interface, press "Left" or "Right" to switch over between the left and right submenu selections, and then press "Up" or "Down" to select the function options that need to be set, and then press "OK" for confirmation; Press "Back" to return to the running state information interface.

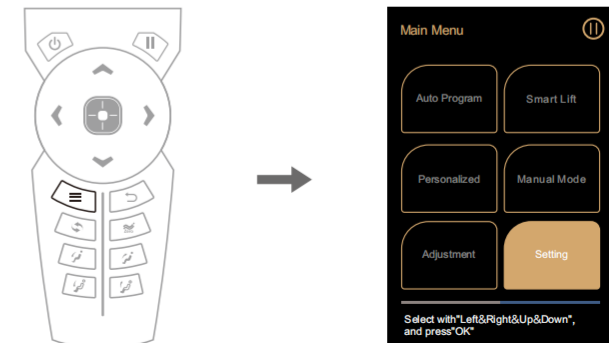

## Operation Instructions

### 1).Setting (language)

- Settings (Language): There are two languages for setting, i.e. simplified Chinese and English.
- After entering the setting function interface, press "Left" or "Right" to select the language submenu. Then press "Up" or "Down" to select the language type, and then press "OK" for confirmation; press "Back" to return to the running state information interface.



### 2).Setting (lock screen)

- Settings (lock screen): The lock screen time is adjustable from 1 minute to 20 minutes, and the lock screen time increases by 1 minute, 2 minutes, 3 minutes, 4 minutes, and 5 minutes, which increases progressively to 20 minutes at most.
- After entering the setting function interface, press "Left" or "Right" to select the lock screen submenu. Press "Up" or "Down" to select the lock screen time, and press "Back" to return to the running state information interface.



## Operation Instructions


### 3).Setting (automatic heating)

- Settings (automatic heating): When the automatic heating function is turned on, the heating function will start to operate automatically.
- After entering the setting function interface, press "Left" or "Right" to select the automatic heating submenu, and press "OK" to turn on or off the automatic heating function. Press "Back" to return to the running state information interface.



### 4).Setting (volume)

- Setting (volume): The default volume is level 6, the music volume is adjustable (from level 1 to level 15). The bluetooth volume and voice control volume can be adjusted too.
- Enter the setting interface, press "left key" or "right key" to select submenu, and press "up key" and "down key" to adjust the volume level. Press "back key" to back to the status interface.

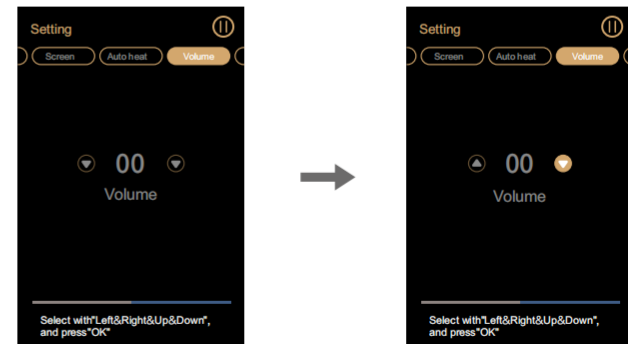



## Operation Instructions

### 5).Setting (Bluetooth)


- Settings (Bluetooth): After turning on the Bluetooth function, the Bluetooth logo will be displayed in the upper right corner of the hand controller, meaning that the Bluetooth is turned on successfully, and users can connect it to the Bluetooth through mobile phone and play music thereon.
- After entering the setting function interface, press "Left" or "Right" to select the Bluetooth submenu, and press "OK" to turn on or off the Bluetooth function. Press "Back" to return to the running state information interface.



- (1).Enter the main menu of the intelligent device, open "Settings"-select "Bluetooth" option-open "Bluetooth"-Bluetooth will automatically "search for new Bluetooth device" to search.
- (2).The intelligent device will search for the matched Bluetooth model (such as IMCM-XXXX), click the pairing button, if asked whether to pair with the device, select "Pairing" to complete it.
- (3).Turn on the music player of the intelligent device and select a song to play.

### 6).Setting (intelligent voice control)


- After entering the setting function interface, press "Left" or "Right" to select the intelligent voice control submenu, and press "OK" to turn on or off the intelligent voice control function. Press "Back" to return to the running state information interface.

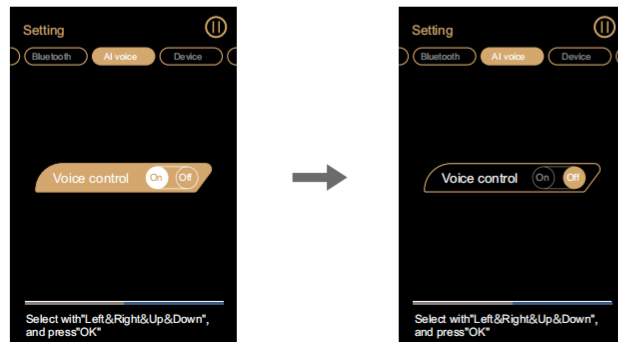

## Operation Instructions


### 7).Setting (device information)

- After entering the setting function interface, press "Left" or "Right" to select the device information submenu, display the current device information, and press "OK" for confirmation. Press "Back" to return to the running state information interface.

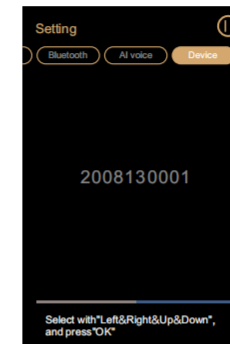

### 11.Back Key

- When adjusting the massage function, if it needs to return to the main interface, press this key to return to the running state information interface.

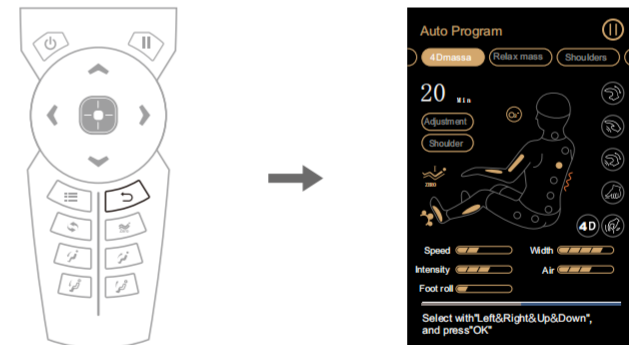


Running State Information Interface

# Operation Instructions

## 12. Automatic Lying Key

·Press "Automatic Lying" to automatically adjust the angle of the calf support and backrest support to the simulative zero gravity. There are three different simulative zero gravity lying angles for options.

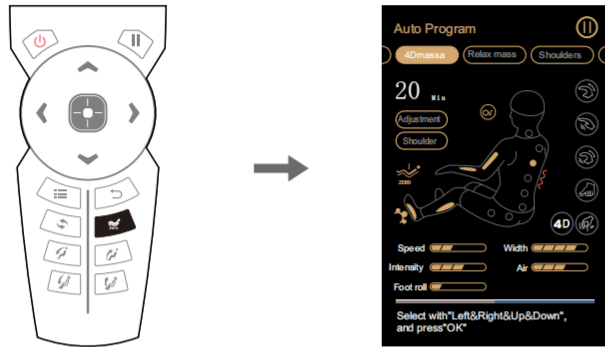

Key	Description
	Automatic lying key: Circularly switch over among three angles of simulative zero gravity angle I, zero gravity angle II, and zero gravity angle III.

## 13. Lying angle adjustment key

Key	Description
	Backrest up button: Hold down the button to make the backrest rise slowly. Release it to stop such action.
	Backrest down button: Hold down the button to make the backrest move downward slowly. Release it to stop such action.
	Calf frame ascending key: Press and hold this key to slowly ascend the lower leg frame, and stop ascending when released;
	Calf frame descending key: Press and hold this key to slowly descend the leg frame, and stop descending when released;
	Automatic mode key: Each time users press it, it enters the automatic program menu.

# Operation Instructions

## II.Voice Control Mode

- When the massage chair is turned on or in standby mode, the sound "Hi e-Lounge" or "Hey e-Lounge" will be produced to enable the voice control function. Alternatively, you can press the voice control button on the armrest to enable the voice control function.
- Long press the Voice control button 3 seconds to turn on or off the voice control function.
- After such function is enabled successfully, the massage chair will reply "I am here." At this moment, once a corresponding voice control entry to be implemented is given within six seconds, the corresponding voice control function can be performed after a reply is received from the massage chair; if no correct voice control entry is given within six seconds, the voice control function will be off automatically and needs to be enabled again.
- Note: When waking up the voice control function, please use English, the speech rate is moderate, Voice commands should be followed up the Voice entry.

Voice Control Entry		
Entry: "Hi e-Lounge" or "Hey e-Lounge". Answer: I am here.		
No.	Hi e-Lounge	Hello May I help you
1	Switch Off	Ok, Switch Off
2	Power On	Ok, Power On
3	4D Massage	Ok, 4D Massage
4	Relax Massage	Ok, Relax Massage
5	Shoulders Care	Ok, Shoulders Care
6	Thai Stretch	Ok, Thai Stretch
7	Sedentary Stretch	Ok, Sedentary Stretch
8	Sports Healing	Ok, Sports Healing
9	Elderly Massage	Ok, Elderly Massage
10	Good Morning	Ok, Good Morning
11	Good Afternoon	Ok, Good Afternoon
12	Good Evening	Ok, Good Evening
13	Neck And Shoulder	Ok, Neck And Shoulder
14	Back Massage	Ok, Back Massage
15	Waist And Buttocks	Ok, Waist And Buttocks
16	Legs And Feet	Ok, Legs Andfeet
17	Start The Massage	Ok, Start The Massage
18	Change The Program	Ok, Change The Program


# Operation Instructions

19	Foot Massage	Ok, Foot Massage
20	Turn Off Foot Roller	Ok, Turn Off Foot Roller
21	Start Heat	Ok, Start Heat
22	Heat Off	Ok, Heat Off
23	Increase Pressure	Ok, Increase Pressure
24	Reduce Pressure	Ok, Reduce Pressure
25	Harder, Please	Ok, Harder
26	Softer, Please	Ok, Softer
27	Pause, Please	Ok, Pause
28	Continue, Please	Ok, Continue
29	Point Massage	Ok, Point Massage
30	Change Massage Technique	Ok, Change Massage Technique
31	Rollers Up	Ok, Rollers Up
32	Rollers Down	Ok, Rollers Down
33	Zero Gravity	Ok, Zero Gravity
34	Lie Down	Ok, Lie Down
35	Sitting Up	Ok, Sitting Up
36	Lift Up The Leg	Ok, Lift Up The Leg
37	Put Down The Leg	Ok, Put Down The Leg


# Operation Instructions

## III. Turn off the power and stop massage

· If the power button is pressed during massage, it will stop all the massage functions immediately, and the backrest, the legrest and massage chair manipulators will go back to the default positions. When the preset massage time is up, all the massage functions will be OFF. The backrest and the legrest will not go back to the default positions.

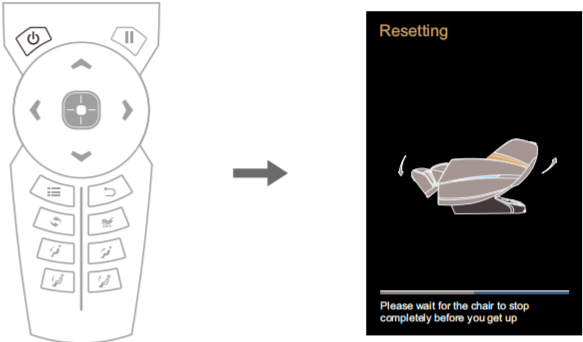


The figure below depicts how to cut off the whole machine's power supply. (Schematic diagram of power switch position of the whole machine).

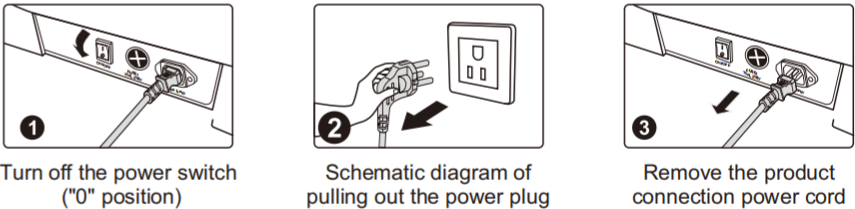

### Cleaning synthetic leather and plastic parts

Wipe the leather with a soft, dry cloth.

- Do not use chemicals such as thinner, gasoline, alcohol, etc. to clean the unit.
- When using commercially available leather care products (rags), please follow the instructions for use.
- If synthetic leather is particularly dirty, wipe it in the following way.
  - ① Immerse a soft cloth in water or hot water containing 3% to 5% neutral detergent, then wring it out thoroughly.
  - ② Use the above soft cloth to wipe the leather surface.
  - ③ Wipe off the cleaning solution with a cloth soaked in clean water and thoroughly wrung out.
  - ④ Wipe with a wrung soft cloth.
  - ⑤ Let it air dry naturally.
- When it is difficult to remove stains, please immerse commercially available melamine foam in neutral detergent, and then wipe the machine with it.
- Do not use a hair dryer to dry the surface.
- Be careful when wiping the machine with denim and colored fabrics, as the color of the fabric will stain the surface of the synthetic leather.
- Do not keep these parts in contact with plastic for a long time, as this will cause discoloration.
- Synthetic leather may be discolored, so when using hair dye, please cover the touched part with a towel.

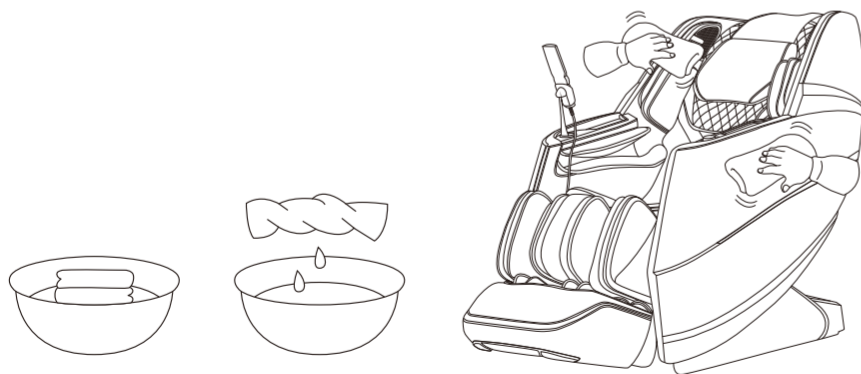

Fault	When the calf mechanism and backrest are in position, the adjustment button will no longer change the position, and a "beep, beep" sound is emitted.
Solution	The product's structure and ergonomic requirements have a set adjustment limit for the protection of its design. This sound will emit when the limit is reached.

Fault	The function does not work or some functions do not work after the machine is turned on.
Solution	After the machine is turned on by pressing the switch key, it is necessary to manually select an automatic massage program or other working state. If it is not operated, the machine will automatically shut down after 20 minutes. If the manual operation mode is selected, the functions that are not selected may be disabled, and the working mode needs to be manually set in the manual mode.

Fault	The machine makes a leather rubbing sound when adjusting its posture.
Solution	This product adopts high-grade anti-corrosion leather that meets environmental protection requirements. Due to the inherent characteristics of leather materials there will be a normal slight noise when rubbing at the relative movement, which is a normal occurrence.. Note: If you hear fabric or leather tearing sound when the machine is running, please stop using it immediately and seek professional maintenance.

Fault	The massage wheel did not reach the shoulders or neck.
Solution	If the head does not touch the head cushion or the back does not touch the backrest, the shoulder position may be lower than the actual position during the body shape detection process. Sit in the deepest position of the seat, rest your head on the headrest, and start over from the beginning.

Fault	The unit is damaged. The power cord or power plug is abnormally hot.
Solution	To prevent accidents, be sure to contact an authorized service center.

Please feel free to contact the designated service personnel for any questions or concerns about this product.

Name: Massage Chair

Rated power:150W

Safety structure: Class I